

Combi

Nemurie UF800



EN Instruction manual

 
 
 
 
 
 
 
 
繁體中文 說明書

 
 
 
 
 
Nemurie UF800

ENGLISH Instruction manual 9


繁體中文 使用說明書 19

List of components

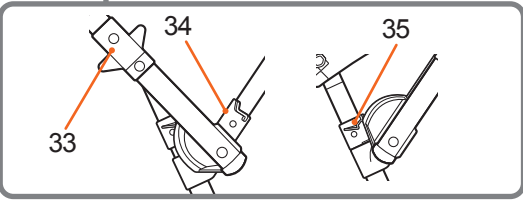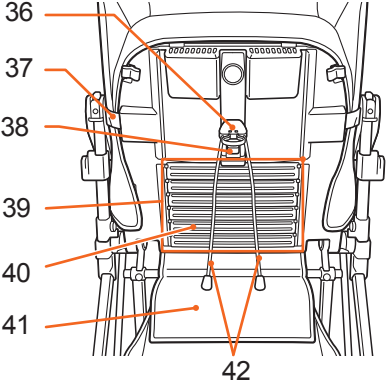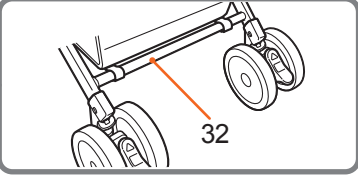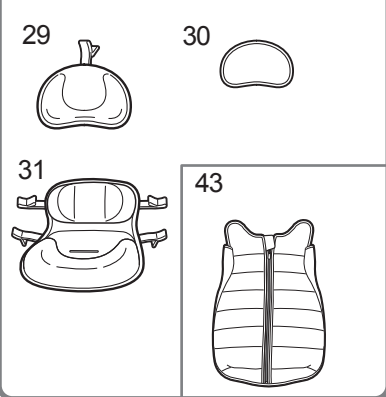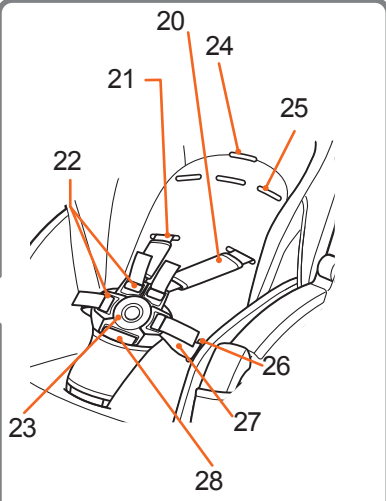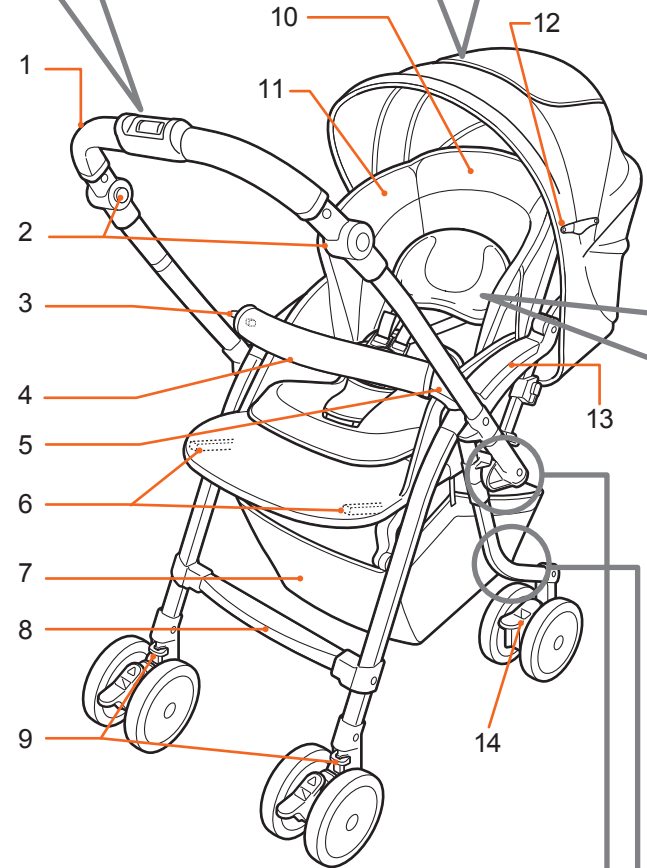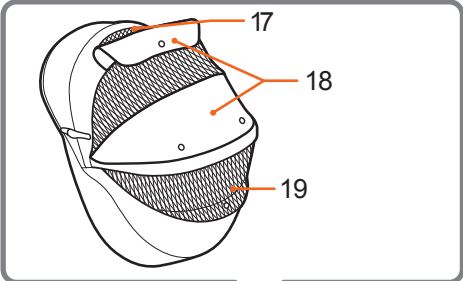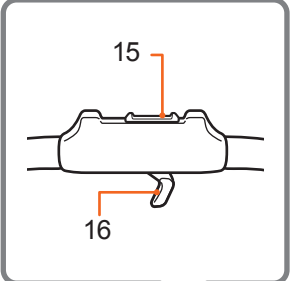


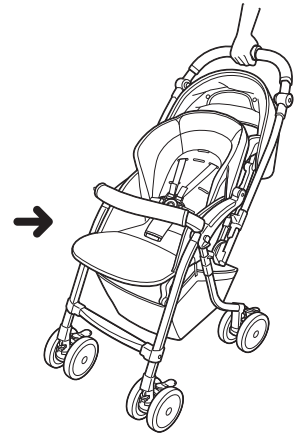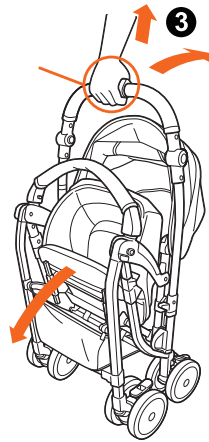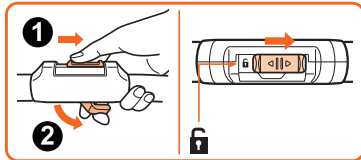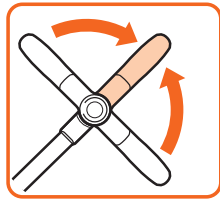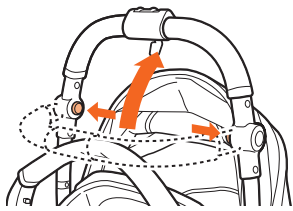

 
1.1

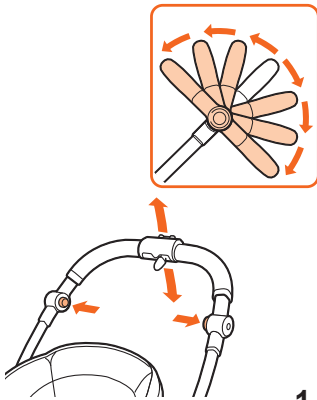

 1.2

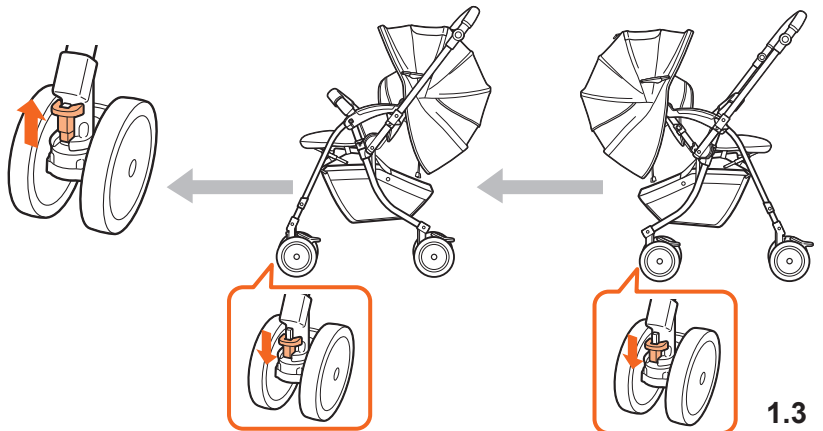

 
1.3

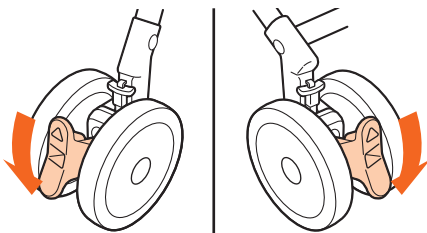

1.4


解除

 To release

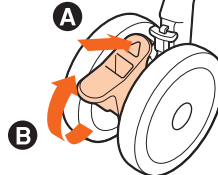


解除

 
To release

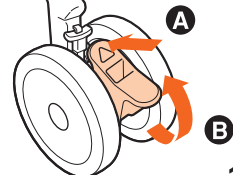




 
1.5

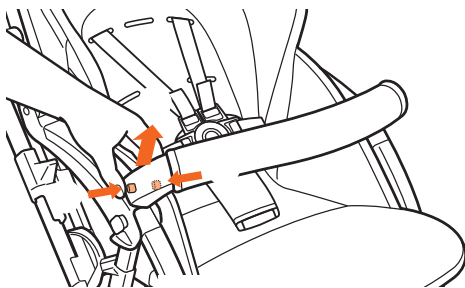


 1.6

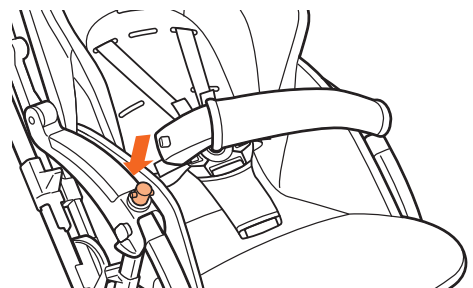


     1.7

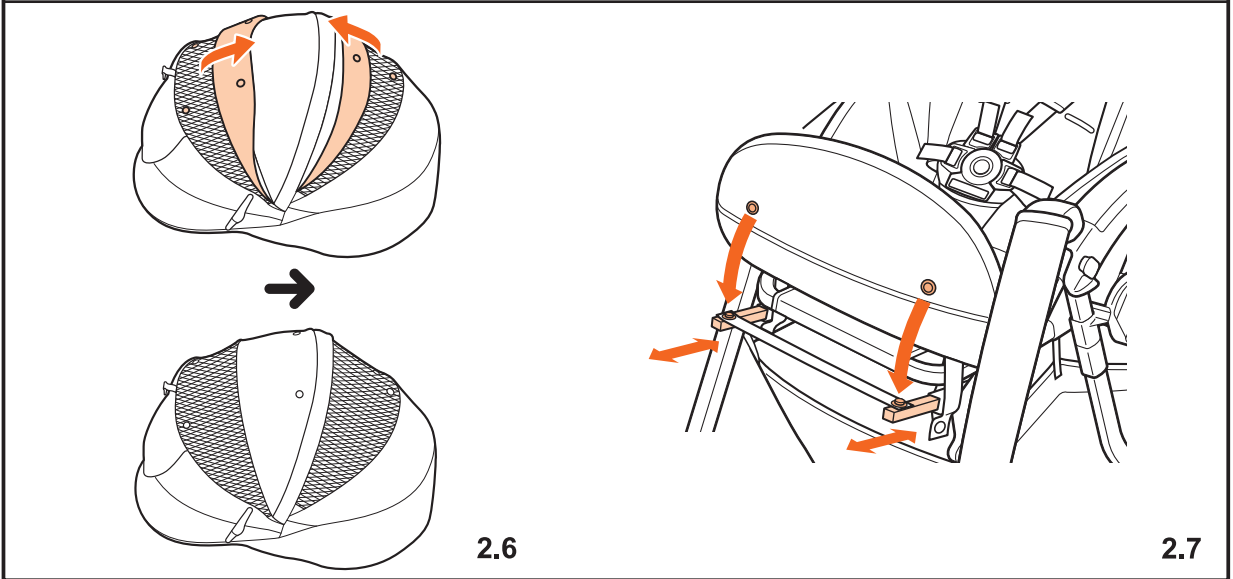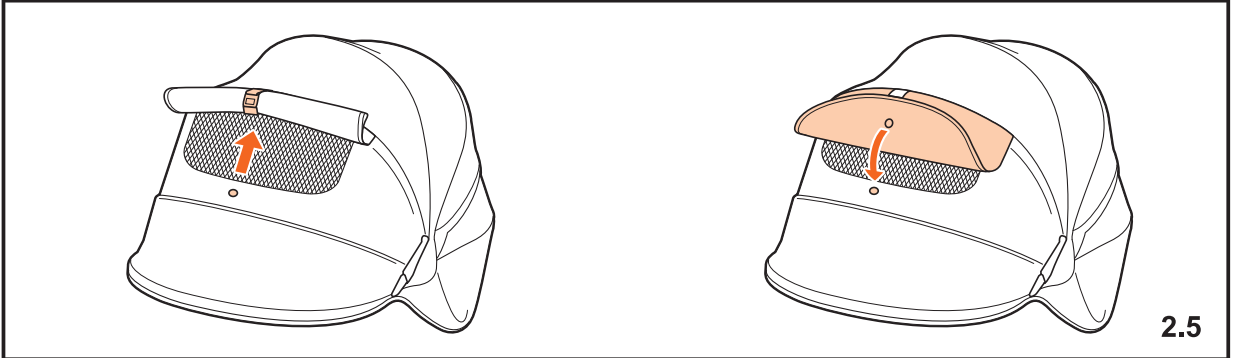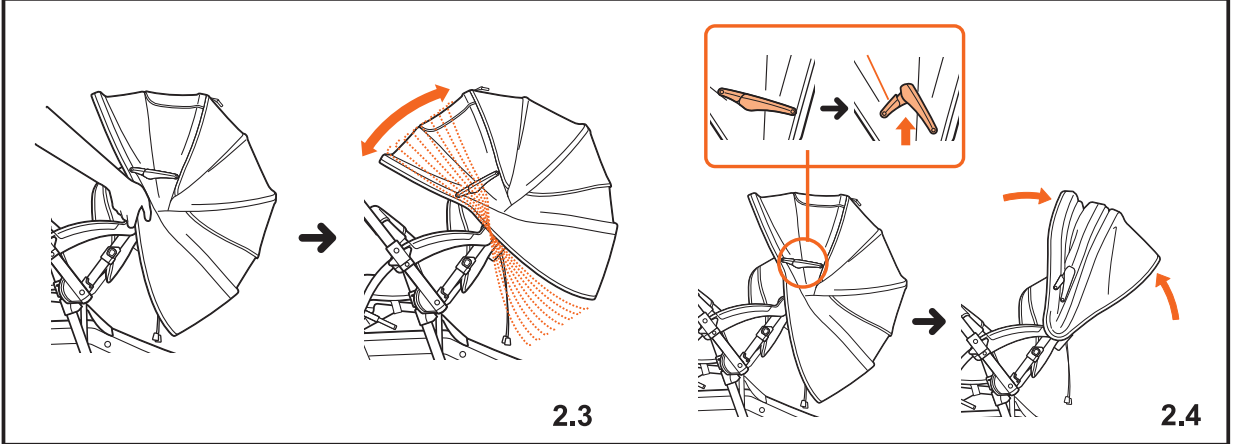
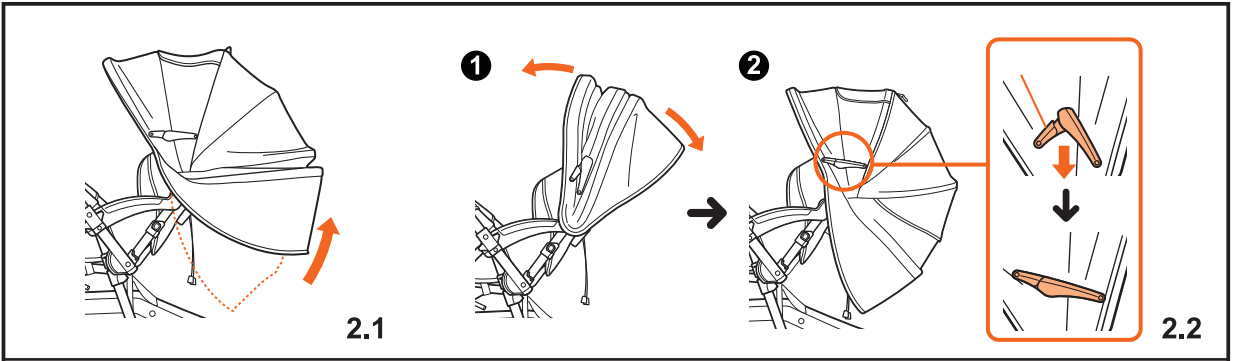


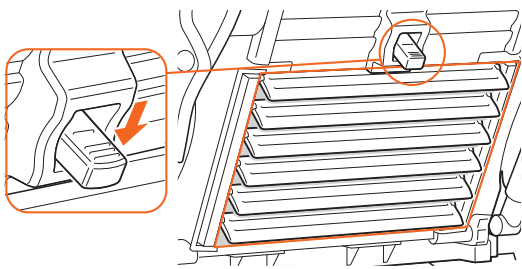

 
3.1

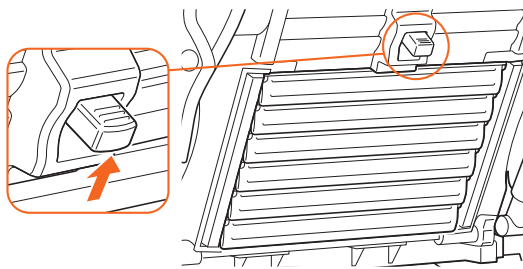

  
3.2

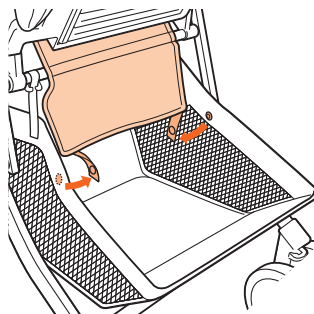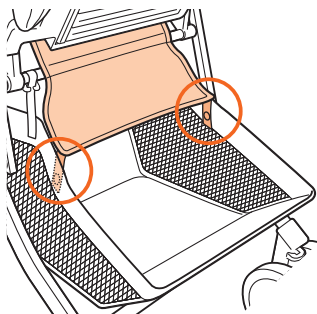


 
3.3

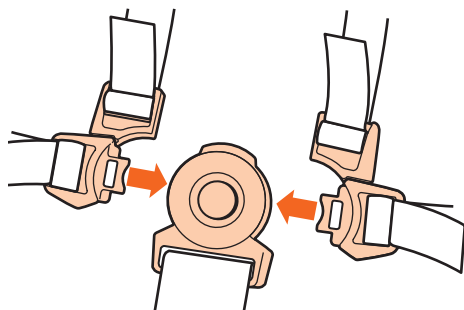




 
3.4




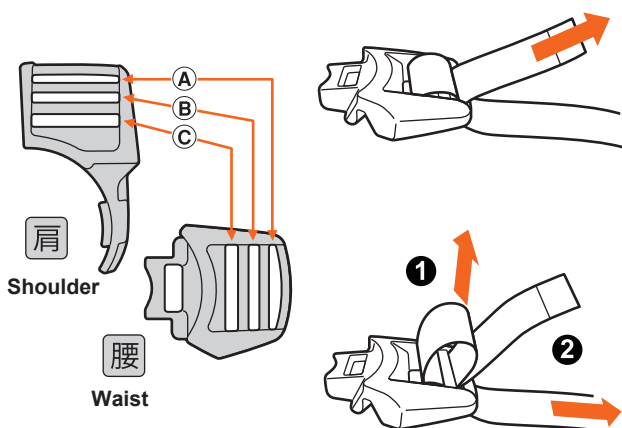


  3.5

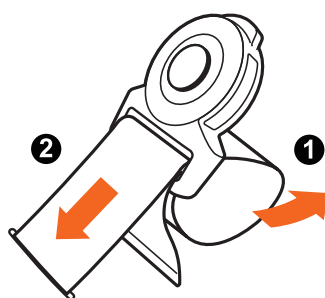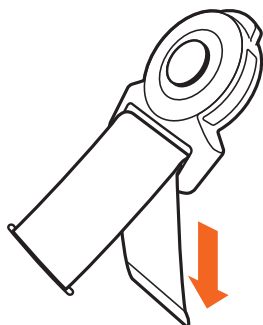


        3.6

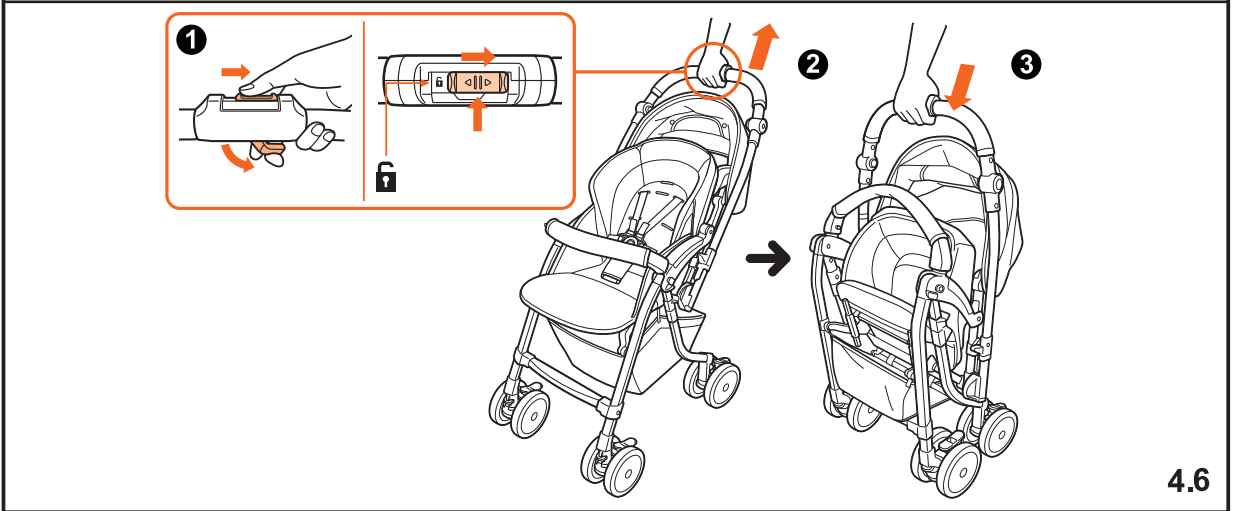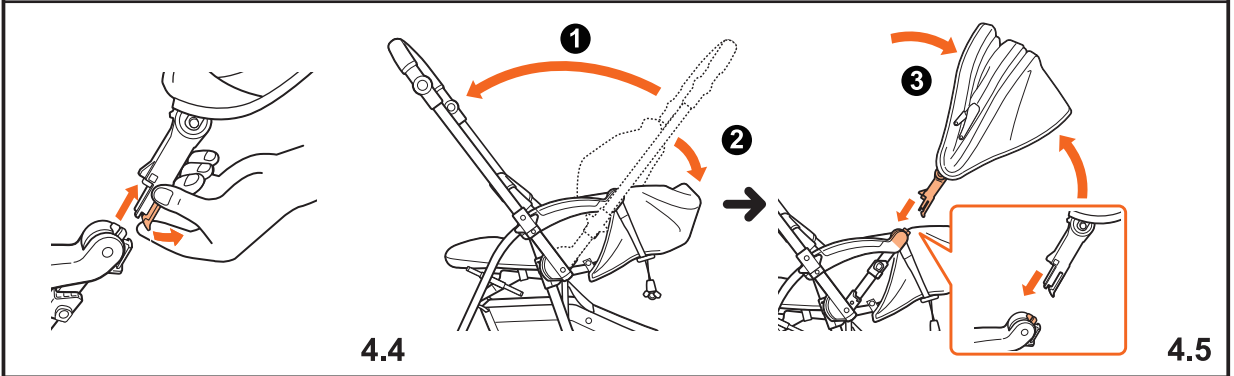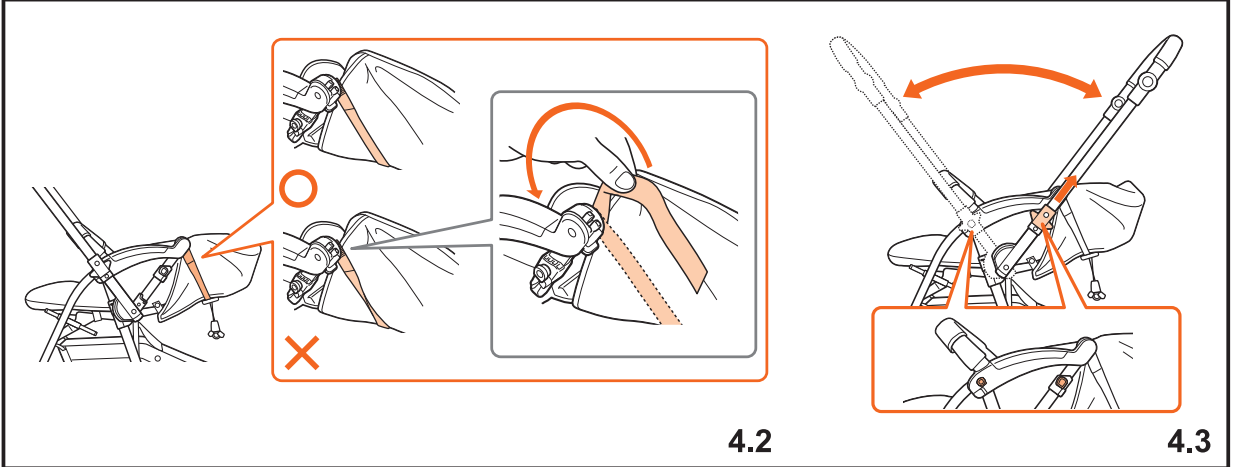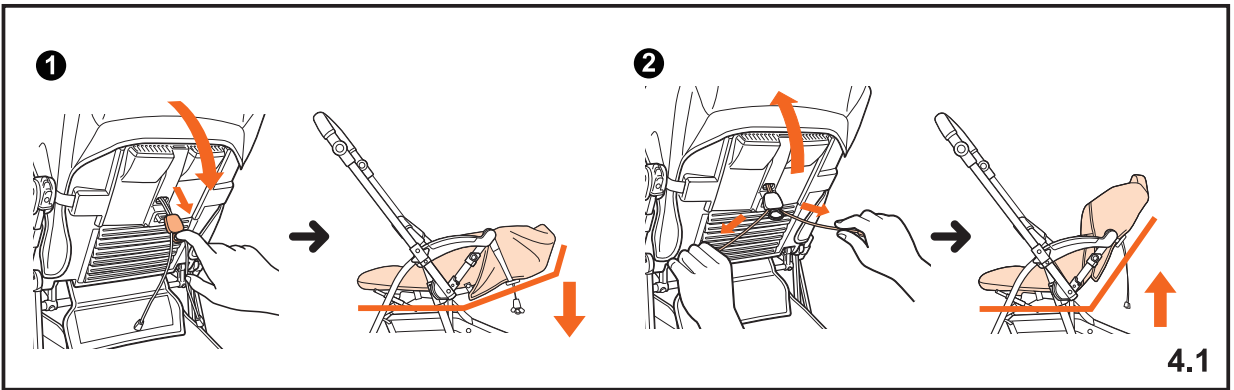


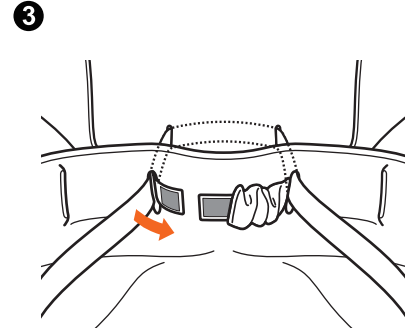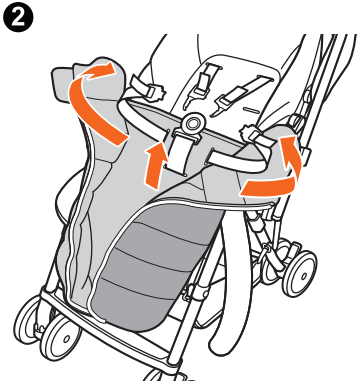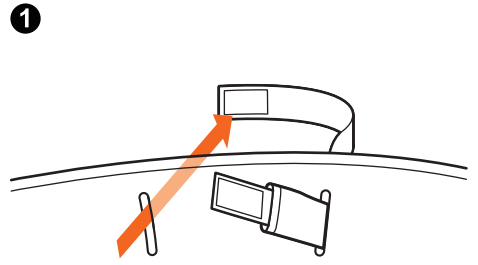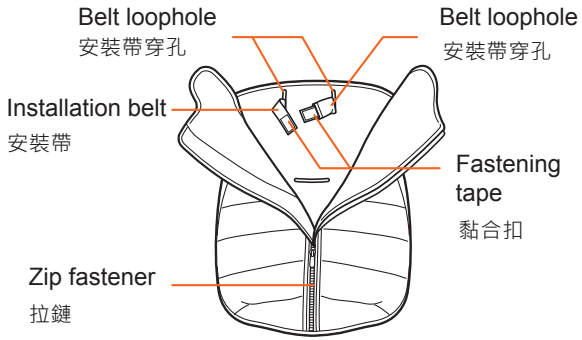

 
5.1

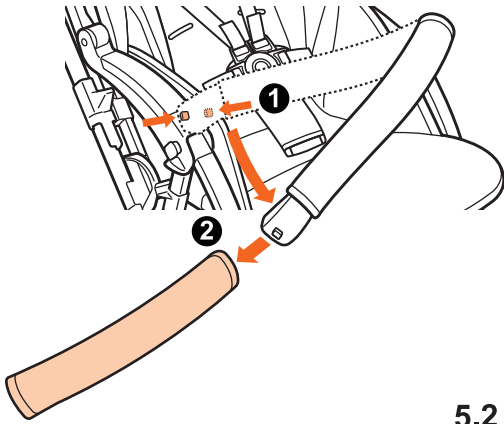

 5.2



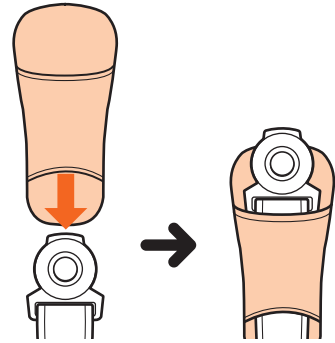





 
5.3

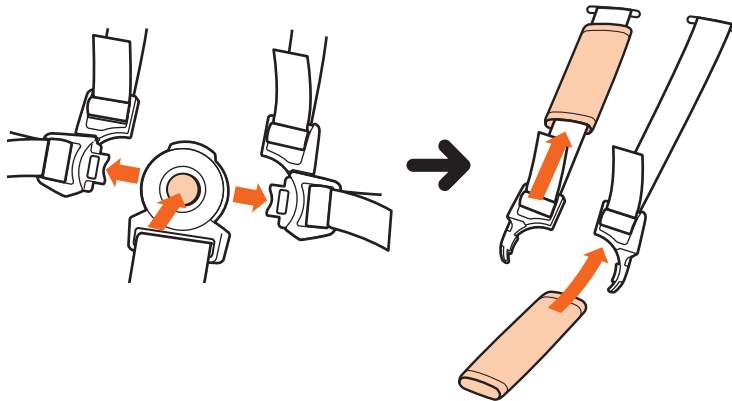


5.4

        
5

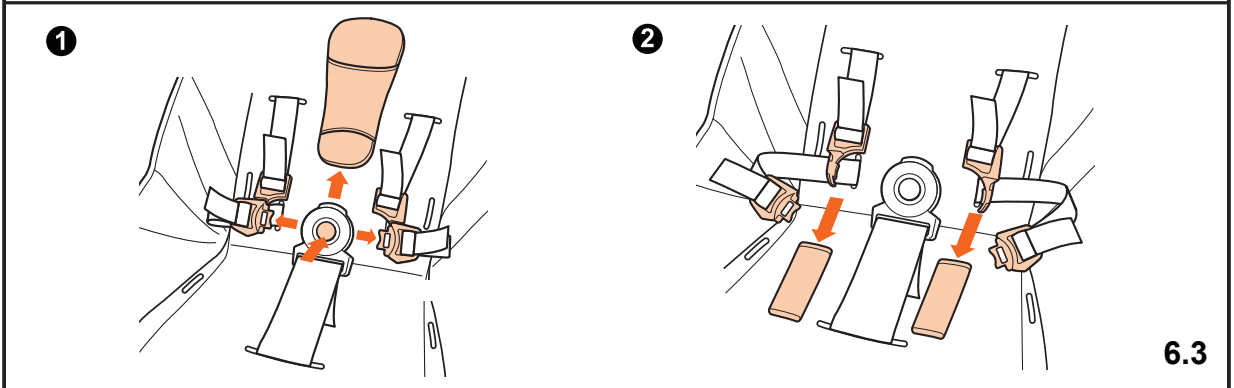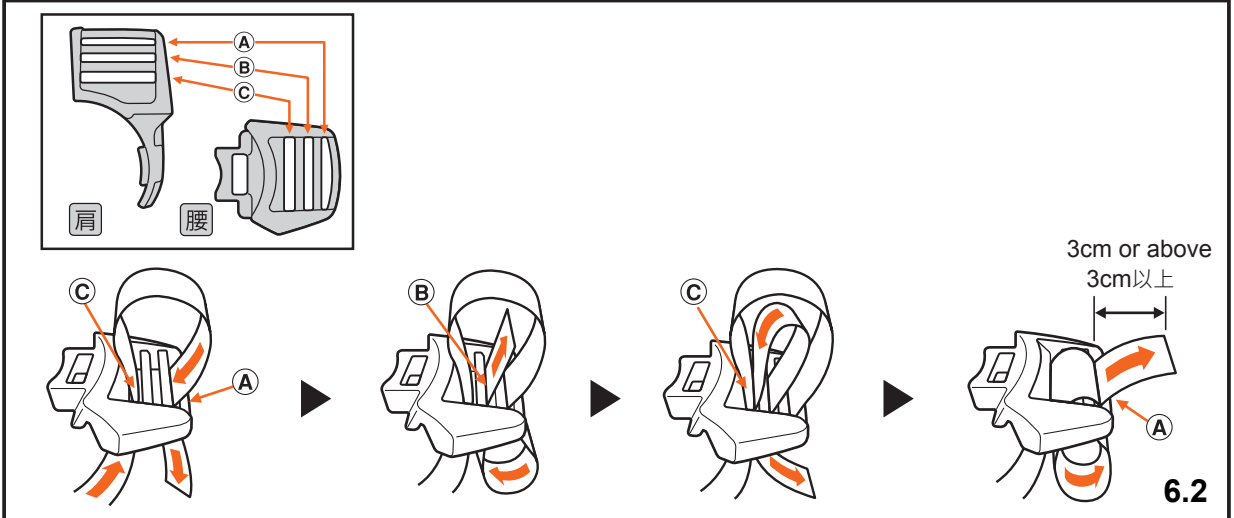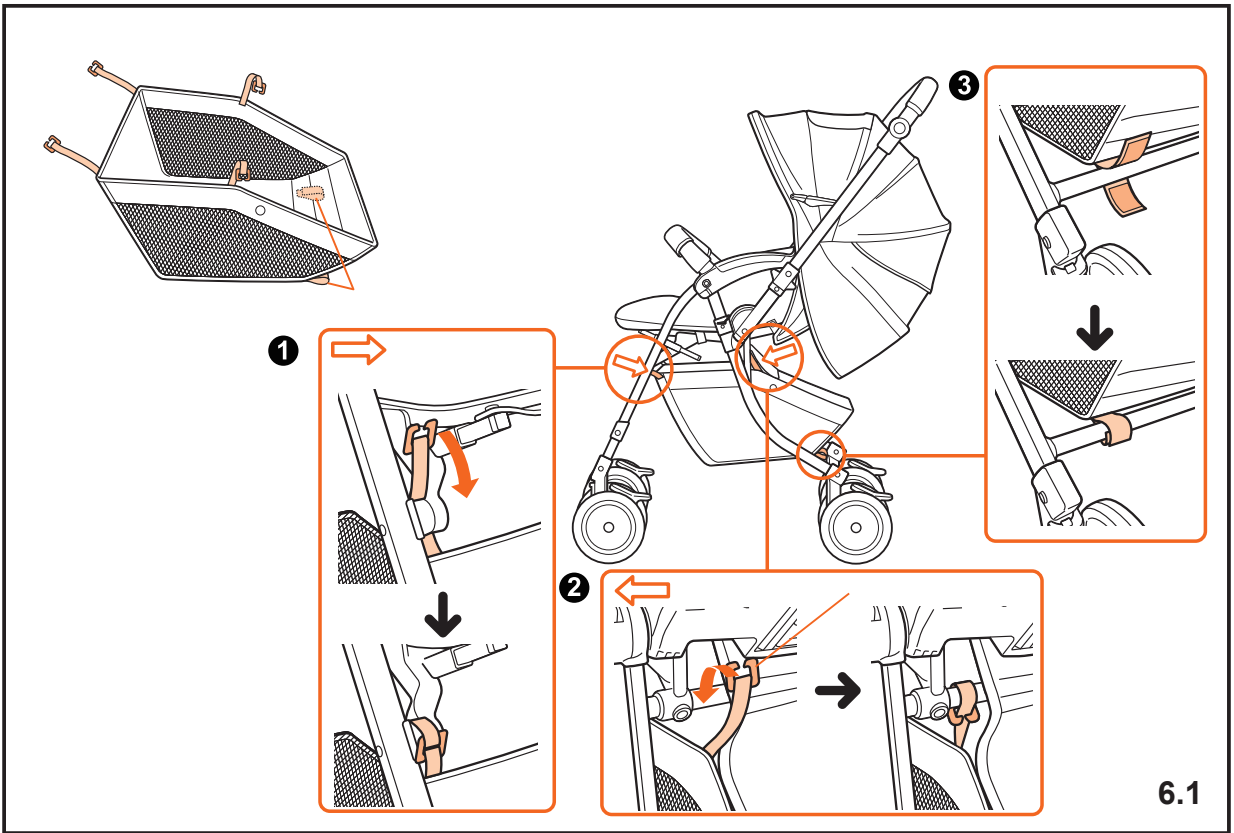

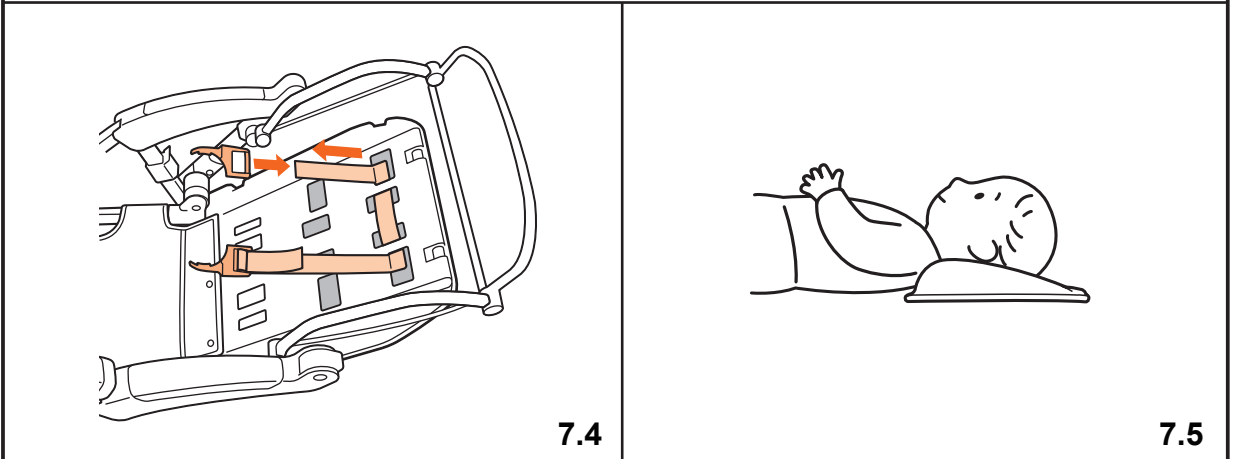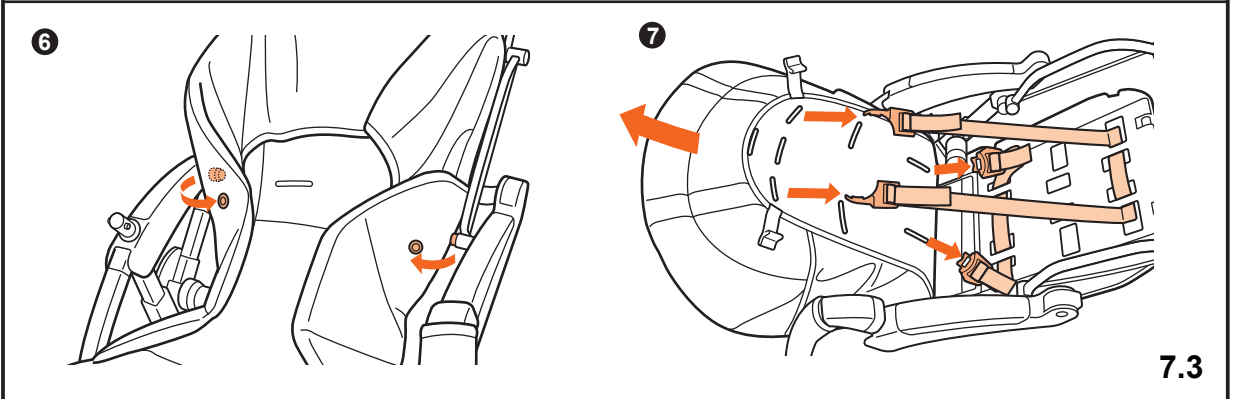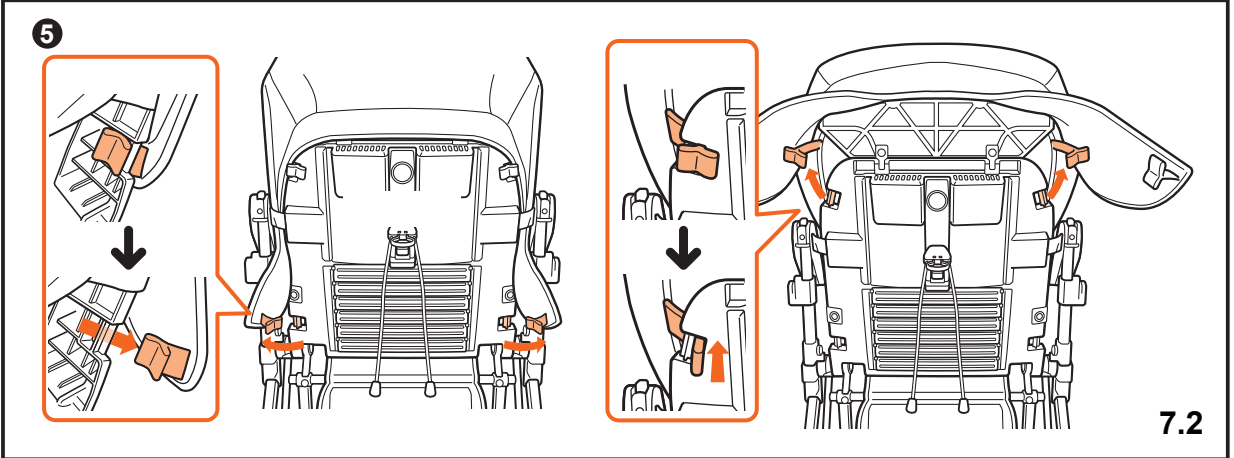
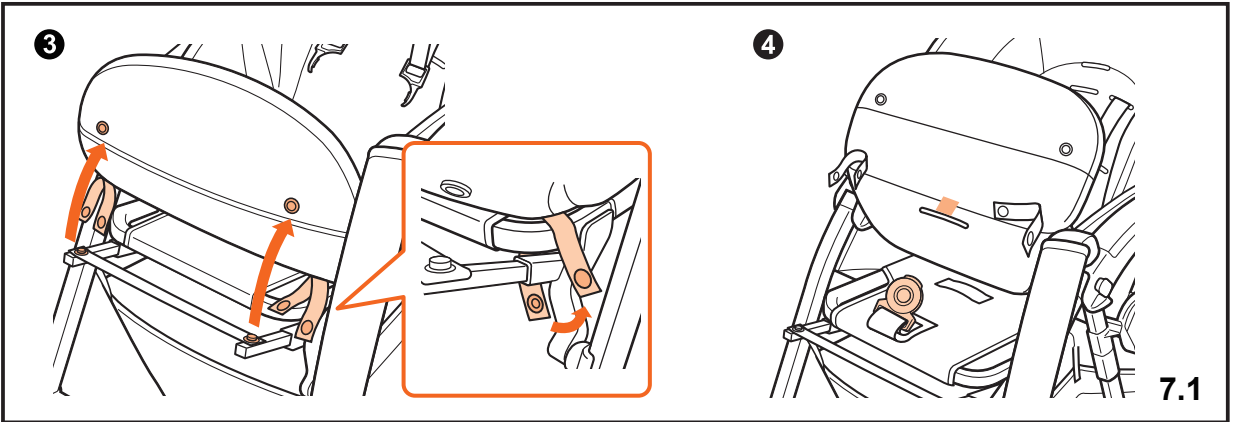


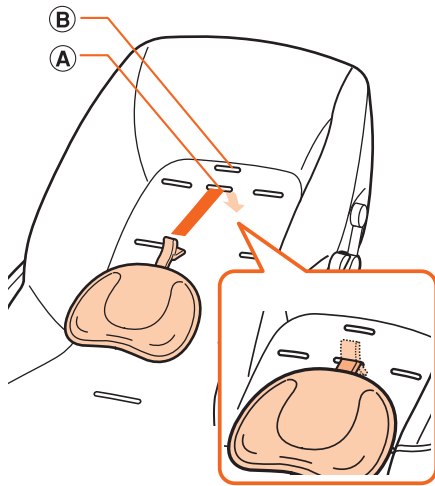



 
8.1

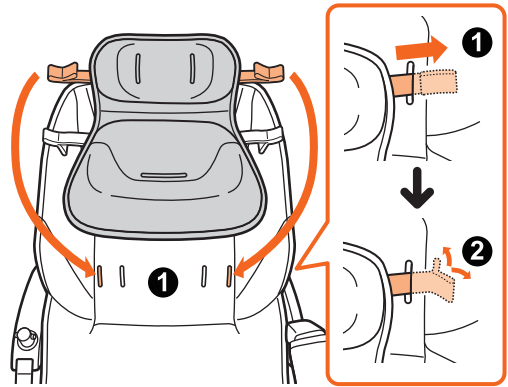

  8.2

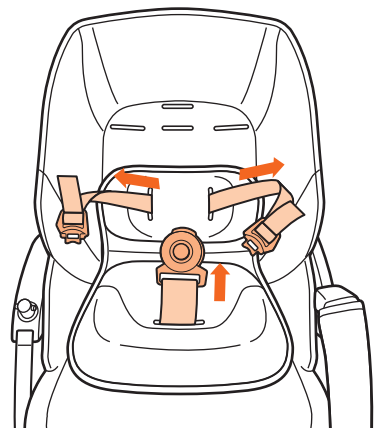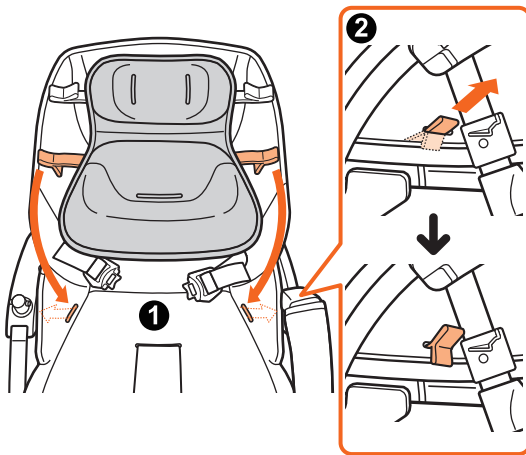

   8.3

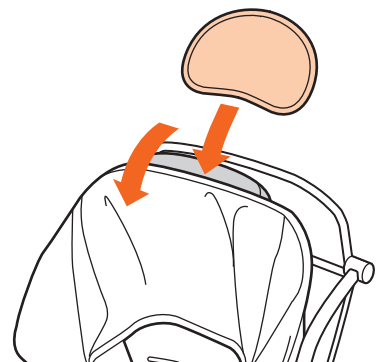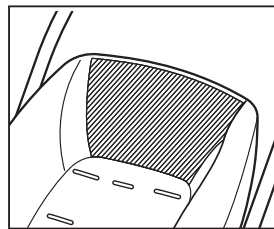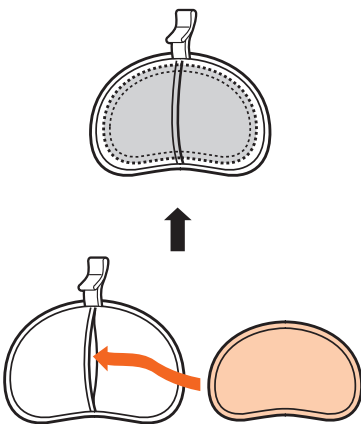

8.4

IMPORTANT : KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

WARNING

Please read this instruction manual carefully and keep it for future reference. The safety of the child may be seriously endangered if the instructions are not followed.

You are personally responsible for the safety of your child.

- Always use the restraint system.
- Do not use the seat cushion on which rift is found. Otherwise the seat cushion may not function as designed or the child may have chance to swallow the material inside the cushion.
- Make sure all snaps are secured before use. Otherwise accident or damage to stroller may be caused.
- Always let the child wear the seat belt in the stroller to avoid any possible accident.
- Adjust the seat belt to fit to the child.
- Do not cross the shoulder belts with each other when securing the shoulder belts to the insert plastic. Otherwise excessive pressure may be caused to child's neck.
- Loose the shoulder belts before lowering the seat angle with a child seated.
- Adjust the length of seat belt properly after change of the seat angle.
- Always apply the parking brake when you are stationary.
- Keep all small parts away from children as they are choking hazard.
- To prevent the risk of suffocation, always keep the plastic bags out of the reach of children.
- This product is not suitable for running or skating.
- Before each use check the stroller body, and/or seats are installed correctly and securely locked.
- Overloading, incorrect folding and the use of non-approved accessories such as buggy boards may damage or break this stroller.
- Regularly clean and inspect the stroller.
- Do not allow children to play with this product.
- Ensure that all the locking devices are engaged before use.
- To avoid injury ensure that your child is kept away when unfolding and folding this product.
- Do not let your child play with this product.
- When opening or folding up the stroller and reversing the handle, be careful and avoid the seat cushion, seat belt, blanket and toys, etc., pinched into the stroller body.
- If open/fold lock cannot be applied, the caster may be not locked automatically.
- For American safety standard : Child may slip into leg openings and strangle. Never use in reclined carriage position unless the permanetly attached saftey cover is used.
- If one give excessive shock to the front wheels when getting over the step, stroller

IMPORTANT : KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

WARNING

- may fall down and cause damages. When stepping over, such as a curb, please slow down even a slight difference level, pull downward the handle and step on the foot-step, and make sure to pass the front wheel to get over the step.
- Misuse may result in severe injury or death.
 - Make sure the open-fold lock is engaged completely before use. Otherwise the stroller may fold suddenly in use.
 - Do not use the stroller on steep slopes, stairs, escalators, rough roads, beaches, mud, etc.
 - Do not lift and carry the stroller while a child seated, failure to comply may cause the stroller to fold up suddenly or get hold of the front guard etc. to lift the stroller. Otherwise the stroller may accidentally slip off, or the front guard maybe detached, all of which will cause the stroller to fall down.
 - In the event of damage or operation problems, stop using the stroller immediately.
 - Avoid serious injury from falling or sliding out. Always use seat belt (crotch belt, waist belt and shoulder belt).
 - Pay attention to child even when seat belt is in use in case of any sudden movement of child causing it to fall off.
 - Do not allow your child to stand in or on the stroller, it may be dangerous.
 - Never leave your child unattended.
 - Do not lean on or hang loads on the handle.
 - Do not put or hang things on the canopy or handle as it may cause tipping over.
 - Do not hang parcels or accessory items (Except items provided in the sales package) on the stroller. Otherwise damage may be caused to stroller.
 - Never carry more than one child in the stroller. Do not allow a child to ride or sit on areas other than the seat.
 - Excessive weight may cause a hazardous unstable condition exist. (Maximum load: 15kg. Basket maximum load: 10kg.)
 - Do not attach other accessory like buggy board on the main body during a child being carried in stroller, otherwise accident or damage to stroller may be caused.
 - Stroller may move suddenly or tip over even when stoppers are engaged.
 - Do not leave baby stroller at road side or slope even when it is not in use.
 - Please do not touch the folding lever except when folding the stroller.
 - Do not rely too much on the stoppers even when the stroller is parked empty.
 - Even with all stoppers engaged, always stay close to the stroller when it is carrying a child. Make sure to engage all stoppers to avoid sudden movement or tipping over.
 - Make sure to use the seat belt when the child is seated. The front guard is not designed to prevent the child from standing up.
 - Do not let the child operate the front guard. It may make the child to fall off from the stroller.

CAUTION

- Misuse may result in injury or damage of product.
- Please do not use the stroller in whatever purposes other than seating a baby. Failure to comply may result in damage of the stroller.
- Never leave the child in a stroller without seat cushion. The child's hands or feet maybe get jammed in between the stroller frame.
- Do not let children operate the baby stroller to avoid accident.
- Be careful of those around you to avoid pinching their fingers when you are opening or folding the stroller or adjusting the seat angle.
- Do not pull or twist or forcibly press down the front guard hardly. Otherwise the stroller may be damaged.
- Make sure to fasten the seat belt after seating the baby. Check if the seat belt fits properly. Otherwise the baby may fall off from the stroller.
- Pay particular attention to baby's hands in case they may be pinched when switching the handle's direction.
- Do not apply a lifted seat to baby who cannot sit straight by itself, most reclined seat must be used.
- Lift the backrest a little to use if the seat is found too narrow when fully reclined. However, the baby should be able to sit straight when stroller is used in such way.
- Do not use the most reclined angle if the baby's head touches at the head rest.
- Do not let an adult sit on the stroller, or add load on the stroller to avoid any damage to it.
- When pushing the stroller, please walk slowly to avoid any damage to the stroller swivel wheels or any tipping over happened.
- Do not load more than 10 kg into the basket to avoid damage.
- When pushing the stroller, please pay attention to any hole or track on the ground to avoid the front wheel from accidentally getting jammed and tipping over.
- Do not use the stroller in snowy, windy days or wet road to avoid the stroller or guardian from slipping.
- Do not use the stroller in lightning days to avoid thunder stroke.
- Avoid continuous outdoor usage particularly during day time in summer.
- Avoid storing the stroller in places that under high temperature, near a heat source or inside a car. Exposure to high temperature may damage or deform the stroller.
- Do not remodel or restructure the stroller by yourself.
- Check regularly that all screws, bolts and nuts are engaged tightly.
- Do not use the stroller on public vehicles.
- Swivel wheel lever should be secured at the same side of the pushing person.

CAUTION

- Lever secured in wrong position may affect maneuvering or damage the product.
- Lift front wheels to cross obstacle etc. which is over 3cm of height. Do not hit front wheels directly to obstacle or wheels may be damaged.
- Lift front wheels and pay particular attention to gaps or ditch when crossing rail road.
- No continuous use for a long period.
Continuous use for a long period of time may exhaust baby. No continuous use of more than 2 hours for a baby seated in a reclined seat and 1 hour in an upright seat.
- For use on trains
This product is not designed to be used on trains. When user attempts to use the product at his/her own risk, please lock stoppers in case of sudden brake or turning. Otherwise stroller may fall off.
- Open the baby stroller in clear area to avoid pinching baby' s finger.
- Do not press on the folding lever while lift the stroller to avoid damage to the parts.
- Make sure to lock the safety lock after folding up the baby stroller.
- Make sure to release the lock before opening the stroller, misuse may damage parts.
- When feel jammed, please do not forcibly fold the stroller to prevent from any damage. You should re-open the stroller to check and operate again.
- Make sure the basket is empty before folding up the stroller.
- Make sure the canopy is completely folded up before folding the stroller to avoid damage of the parts.
- Turn swivel wheels to inner side and lock up before folding the stroller. Improper position may cause stroller becoming imbalanced after folded.
- Be careful not to pinch the baby's hands or feet when reversing the handle.
- Check the baby's situation from the front side before reversing the handle.
- Do not reverse handle while pushing the stroller.
- Do not touch at the handle lock when folding or unfolding the stroller. Otherwise damage may be caused to the stroller.
- Even when empty, always engage all stoppers since the stroller may suddenly move.
- Swivel wheels when secured in wrong position may obstruct smooth strolling. Make sure it is secured in correct position.
- Do not lay down the stroller and do not put things on the canopy to avoid deformation.

CAUTION

- Do not get hold of an opened front guard to pull the baby stroller.
- Do not forcibly press on the front guard to avoid damage.
- The used insert outlet from the base seat and the cushion should be matched. (e.g. upper insert outlet of base seat should match with upper insert outlet of cushion.) Otherwise, the shoulder belt may not be long enough to harness the baby.
- It is extremely dangerous to adjust the seat angle when pushing the stroller. Do stop the stroller first before operation.
- Do not suddenly change the seat angle while a child is seated.
- Support the backrest with the other hand when lowering the seat angle with a child seated.
- Do not put things that are too sharp or too large into the basket since it may cause damage to the basket.
- Only use neutral detergent to clean the stroller body.
- Make sure no oil or lubricant is left on parts such as front guard or armrest where baby may have chance to lick.
- The parking device shall be engaged when placing and removing the child.
- Parcels or accessory items, or both, placed on this unit may cause the unit to become unstable.

SAFETY INSTRUCTIONS

Use this product for only one child at a time.

- The stroller is suitable for children from 1 month to 15kg (approximately 3 years of age)
- Keep your child and your fingers/hands away from moving/folding parts when folding or unfolding or adjusting the stroller.
- Never lift the stroller or use it on escalators or stairs when your child is sitting or lying in the stroller.
- This stroller requires regular maintenance by the user.
- Before each use check that the product and all its components have not been damaged during transportation.
- If damage is identified, do not use the product and keep it out of reach of children.
- Never leave the stroller close to stairs or steps.
- Only use on a flat, relatively smooth, stable and non-slippery surface.
- Only use original accessories and parts that have been approved by the manufacturer. Do not make any modifications to the product.

LIST OF COMPONENTS

1.Handle	16.Folding lever	31.Body & Hip support
2.Adjustable buttons	17.Top window	32.Rear leg stay
3.Front guard buttons	18.Window cover	33.Handle lock
4.Front guard cover	19.Airthrough window	34.Open/Fold lock
5.Front guard	20.Shoulder belt cover	35.Rear leg latches
6.Leg support bars	21.Shoulder belt	36.Seat reclining buckle
7.Basket	22.Shoulder and waist belt buckle	37.Reclining belt (left and right)
8.Foot rest	23.Crotch buckle	38.Adjustment lever
9.Swivel wheel lock	24.Head support insert outlet	39.Back ventilation window cover
10.Headrest	25.Shoulder belt insert outlet	40.Air through louver
11.Seat cushion	26.Waist belt insert outlet	41.Air guide
12.Canopy lever	27.Waist belt	42.Reclining cord
13.Armrest	28.Crotch belt	43.Foot cover
14.Stopper	29.Head support	(An option part, not available in all markets.)
15.Safety lock	30.Eggshock pad	

INSTRUCTIONS

Unfolding/Opening (Figure 1.1)

The handle grip is returned to the straight position while pressing both adjustable button.

- 1 Slide the safety lock as demonstrated direction and hold it in place.
- 2 Grip and pull the folding lever upwards simultaneously.
- 3 Slightly lift the stroller and open it.

Adjusting the handle position (Figure 1.2)

- 1 Adjust the angle of handle grip by pressing both adjustable buttons.
- 2 Release the buttons when handle reaches the right position.

Using the swivel wheels (Figure 1.3)

- 1 To use the swivel wheels - Lift the swivel wheel locks (left and right) to release. (same direction as the moving direction).
- 2 Swivel wheels not in use - Press down the swivel wheel locks (the ones at the same direction of the user) to lock.

WARNING: When you switched the normal use or handle, please make sure to raise the swivel wheel locks to release the locks. If you do not release the locks, there is a possibility that the wheels are not automatically switched.

When reversing the handle, please release swivel locks (total 4 places)

When the wheels are locked in the wrong direction, the stroller may damage to the parts while open.

Using the stoppers (Figure 1.4)

- 1 To lock wheels, press the stoppers down which are located at wheels on both left and right sides.
- 2 Try to push the stroller back and forth slightly to ensure that the stoppers are properly engaged.

WARNING: Always engage the stoppers when you leave the stroller.

Release the stoppers (Figure 1.5)

Lift the stoppers to unlock.

Open the front guard (Figure 1.6)

- 1 Press and hold the button at the end of the front guard as illustrated.
- 2 Detach the front guard.

Attach the front guard (Figure 1.7)

To attach front guard, lift and plug into the projected part at the end of the armrest.

Using the canopy

- 1 Using in small size (Figure 2.1): After having extended canopy to full coverage, push up the frame of the canopy back.
- 2 Using in big size (Figure 2.2): Grab the front and back canopy frame and release the canopy to biggest coverage. Press on the left and right canopy levers.
- 3 When using canopy as sunshade (Figure 2.3) :
Hold at the canopy hinge when the canopy is at its largest position and rotate it to the right position.
It clicks into place automatically. Stop rotating when it reaches the right position.
Look at the canopy from the front side ensuring the left and right side are at the same position.
- 4 Folding up the canopy (Figure 2.4) :
Lift the canopy levers and fold the canopy backward.
- 5 Using the top window (Figure 2.5) :
Undo the snap and roll up the window cover.
Secure the snap on top.
- 6 Using the air through window (Figure 2.6)
When using the front ventilation window, release the two snaps and unfold the ventilation window cover backwards.
When using the back ventilation window, release the two snaps and unfold the ventilation window cover to the front.

Using the Air Through System (Air through louver)

- 1 Open the air through system: press down the adjustment lever to open the air through louver. (Figure 3.1)
When the air through system is not in use, please push up the lever to close the air through louver. (Figure 3.2)
- 2 Secure the snaps of air guide to the ones on the basket. (Figure 3.3)

Safety Harness (Figure 3.4)

- a. The shoulder buckle is under the waist buckle (left and right) and secure together into crotch buckle.
- b. Press the crotch buckle button to release the harness.

NOTE: When changing the seat recline angle, always check the harness to ensure it is still optimally adjusted.

WARNING: Always use the restraint system.

Adjusting the shoulder belt and waist belt (Figure 3.5)

Tightening: Pull the belt end as shown direction.

Extending: Loose and pull out the belt in the front as shown direction ①, then pull it inward to extend the length as shown direction ②.

Adjusting the crotch belt (Figure 3.6)

Tightening - Pull the center belt end as shown direction.

Extending - Pull out the length needed to adjust to direction ❶. Pull toward direction ❷ to extend the crotch belt.

NOTE: Always use the crotch belt together with the waist belt and shoulder belt and make sure they are properly adjusted.

Adjusting the backrest (Figure 4.1)

❶ Recline - Pull down the seat reclining buckle.

❷ Upright - Pull down the reclining cord by both hands at the same time.

The headrest will be lifted automatically after the backrest is reclined. (movable headguard)

NOTE : Find it difficult to operate the reclining function. (Figure 4.2)

The reclining cord may be twisted, please follow below steps to straighten it.

Lower the backrest to the lowest position.

Release the twist at the recline cord end along the recline mechanism.

Reversing handle (Figure 4.3)

Lift and release the handle locks to change the handle direction until the locks are secured in places.

Detaching the sun canopy (Figure 4.4)

Pull out the canopy joint end gradually, pull up the canopy away from the holder.

Attaching the sun canopy (Figure 4.5)

❶ Switch the handle to face rear.

❷ Recline the backrest to the lowest angle.

❸ Place the canopy facing the proper direction.

❹ Plug the canopy joint into the canopy holder.

Folding the stroller (Figure 4.6)

❶ Slide to release the safety lock of direction as illustrated.

❷ Grip the folding lever and slightly lift up the handle, then press down the handle as illustration to fold the stroller.

WARNING: When opening and closing the stroller, please ensure your child and other children are kept at a safe distance. Please ensure that they are not in contact with any mounting parts. Remove all items from the basket before folding the stroller.

Attaching and detaching footcover (Figure 5.1)

Foot cover is for keeping warm it can be attached to the stroller to protect from the abdomen to the leg of child.

Please stop using it when the leg is long enough to touch the end of the footcover.

❶ Release the fastening tape on the belt and remove the belt toward the rear end.

❷ Place the footcover on the seat cushion and unzip it. Pull the insert plastic (waist belt) and crotch belt buckle out through the belt loophole.

❸ Pull the attachment belt through the waist belt insertion outlets on the seat cushion and that secure the velcro at the inner side of the attachment belt storage pocket.

Detaching the front guard cover (Figure 5.2)

❶ Press and hold on the front guard buttons and release the front guard.

❷ Detach the front guard cover from the front guard.

Attaching the crotch belt cover (Figure 5.3)

Pull the crotch belt through crotch belt cover, pull out the buckle button.

Attaching the shoulder belt cover (Figure 5.4)

- 1 Remove the safety belt from the buckle.
- 2 Pull the shoulder belt through the shoulder belt cover.

Basket (Figure 6.1)

The basket can carry a maximum weight of 10kgs. You can attach and remove the belts and snaps according to step 1, 2 and 3.

Attaching the insert plastics (Figure 6.2)

Pull the belt in the direction as illustrated to attach the insert plastics.

NOTE : Always leave at least 3cm at the belt end.

WARNING: Make sure the seat cushion has been correctly attached before use.

Detaching the seat cushion (Figure 6.3 - 7.3)

- 1 Press on the buckle button to release the insert plastics. Detach crotch belt cover from crotch belt. (Figure 6.3)
- 2 Remove the shoulder belt cover. (Figure 6.3)
- 3 Unfasten the belt snaps (at two positions) engaged with the seat frame on the front of the base seat. When using the leg support bars, unfasten the snaps (at two positions) at the front end of the seat cushion. (Figure 7.1)
Release the crotch belt from the seat cushion.
- 4 Remove the belts (at two positions) outside of the seat cushion from the backboard.
- 5 Remove the belts (at two positions) inside the seat cushion from the backboard. (Figure 7.2)
- 6 Release the snaps (at two positions) of the belt which is secured to the side plate. (Figure 7.3)
- 7 Remove waist belt and shoulder belt, then remove seat cushion from back board. (Figure 7.3)

NOTE : To install seat cushion, go in the steps reverse.

Adjust shoulder harnesses heights (Figure 7.4)

- 1 Pull out shoulder harnesses from seat cushion and base board.
- 2 Set the correct slots of shoulder harnesses through on the base board.
- 3 Set correctly the harness shoulder heights and pull it out through relevant slots of seat cushion.

 
NOTE: The lowest shoulder harness insert outlet should be used for children under 6 months.

Installing the dacco cushion (Figure 7.5)

Correct position of head support - The cushion pad of the head support should just touch at the child's neck.

Support cushion installation reference

1Month starting to sit without aid 36Months

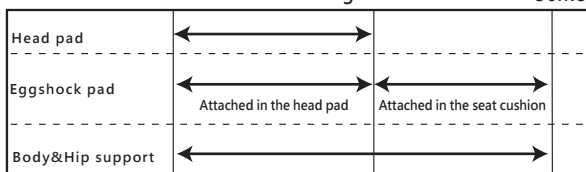

※1 Indicated age for reference only, please apply according to child's body size.

Installing the head support (Figure 8.1)

Loop the head support belt through the head support hole, the belt is tipped opposite through the hole to attach. After it is installed, check if it is well secured to the seat cushion or not by slightly pulling.

Reference for head support insertion outlets (A)(B)

(A) for child from around 1 month to 4 months

(B) for child from around 4 months to 7 months.

Installing Body & Hip support (Figure 8.2-8.3)

- 1 Pass the rear side belt through the body support belt hole of the seat cushion. The belt is tipped opposite through the hole to be attached.
- 2 Pass the seat side belt through the buttock support belt hole of the seat cushion. The belt is tipped opposite through the hole to be attached.

To use with Eggshock pad (Figure 8.4)

- 1 Putting into the head support to use. The Eggshock pad can be inserted into the head support of Dacco Seat to protect child from the vibrations from the ground when strolling.
- 2 When the child is tall enough to touch the headrest, put the Eggshock pad into the pocket behind, put the pocket between the headrest and the plastic part.






Hints for maintenance

- Never apply force on any mechanism or moving parts.
- To prevent mildew forming, do not store this product when wet or in a humid environment.
- Protect the product from rain, snow and prolonged exposure to sunlight.
- Clean the plastic and metal parts with a wet cloth. For stubborn stains, use a diluted mild detergent.
- You may lubricate moving parts if the operation or movement of the stroller is not smooth. Do not apply excessive lubricant as it may lead to a build up of dirt which may cause malfunction.

Cleaning and maintaining fabrics

- Always following the washing instructions listed below as well as those attached to the various fabric parts.
- Dry the fabric parts completely before using or storing it.
- Hand wash in warm water (Below 30 degrees celsius).

Fabric care guidelines

 Hand wash in warm water	 Do not tumble dry	 Do not dry clean
 Do not bleach	 Do not iron	

使用前請詳細閱讀本說明書並妥善保存作日後參考之用

警告

使用前請詳細閱讀本說明書並妥善保存作日後參考之用。

不按照本使用說明書指引使用手推車，可能對幼兒造成重大傷害。

幼兒的安全是您的責任。

- 停止手推車時，請使用停車鎖。
- 切勿將小配件放近幼兒，以免幼兒吞下而造成窒息的危險。
- 為了防止幼兒窒息的危險，在拆開包裝後，請將膠袋之類的包裝物料丟棄。
- 本產品不適用於奔跑或滑行時使用。
- 過份超載，錯誤摺疊以及使用未經認可的附件會對手推車造成損壞。
- 請定期清潔以及檢查手推車。
- 請勿把手推車放近火源。
- 安裝椅墊時，請確保所有鈕釦等已經裝好，以免引致意外或造成損壞。
- 為了防止孩子跌落，孩子乘坐時必須繫上安全帶。
- 請牢牢地繫上安全帶，但注意不要過緊。
- 將肩帶釦在插釦片上時，請勿交叉肩帶，以免肩帶對幼兒頸部造成壓迫。
- 在已乘載幼兒的狀態下調低座椅角度時，請先將肩帶調鬆。
- 調較座椅角度後，請重新調較安全帶至適當長度。
- 請勿外加任何以輪板或元件於主體上乘載幼兒，以免對手推車造成損壞。
- 即使已經鎖上停車鎖，手推車也有可能意外滑動或翻倒。
- 即使幼兒不在車上，也不可將手推車隨意放在路旁或斜坡等危險地方。
- 除開折手推車外，請勿觸碰開關掣。
- 不論有否乘載嬰孩，停車時勿過分信賴停車鎖的性能。
- 即使已使用停車鎖，如載有嬰孩，應隨時留意手推車附近，以防任何危險發生。此外，停車鎖應左右兩方同時使用，以免意外滑動或翻倒。
- 乘載幼兒時必須繫上安全帶。前護欄不能防止幼兒從座椅上站起來。
- 不要讓幼兒操作前護欄以免其意外跌倒。
- 請勿使用磨損或破損的椅墊，以免椅墊不能發揮其應有功能，或令幼兒誤吞內裡的棉花等。
- 當操作開關及轉換把手時，請注意及避免可裝拆的坐墊、手推車的安全帶、被子，及玩具夾在手推車車體上。同時注意幼兒的手放置位置，避免夾傷。
- 當開關鎖未能應用時，可能令轉向輪不能自動鎖上。
- 按照美國標準，幼兒有可能滑進手推車的通腳口而被勒斃，只可於備有座位伸延及固定安全腳套的情況下使用斜躺功能。
- 當越過不同段差時，若強行附加力量於前車輪上使之與段差碰撞，可能引起手推車

使用前請詳細閱讀本說明書並妥善保存作日後參考之用

警告

損壞和故障，（轉換把手方向使用手推車也是同樣如此）。當越過段差時，即使是微小段段差區的地方應以減緩推行；並踏上腳踏及往後按下把手往前行，確保前車輪越過段差才可通行。

- 錯誤操作可能引致重大傷害或死亡。
- 使用前一定要確認開關鎖已鎖上，否則手推車會有突然折起的危險。
- 不可於斜坡、階梯、自動電梯、顛簸坡道、沙灘、泥地等場所使用手推車。
- 切勿搬動乘載了嬰孩的手推車，以免手推車突然收合，或手執前護欄等地方搬動手推車，以免手推車意外滑脫，或令前護欄鬆脫，引致手推車掉下。
- 如手推車出現損壞或操作問題，應立即停止使用。
- 為避免意外，兒童應在任何時刻佩帶安全帶，安全帶包含中央帶，腰帶和肩帶。
- 為防止幼兒突如其來的動作令其跌出手推車，即使已經扣上安全帶，也請經常留意幼兒，小心使用。
- 不可讓幼兒站立在車上，這是十分危險的。
- 切勿讓幼兒單獨坐在車上。
- 切勿將身體靠於，施壓於或將重物掛於把手上。
- 切勿懸掛物件於車篷或把手上，以免引致手推車翻倒。
- 如懸掛包裹或其他物件（附設包裝箱內之物件除外）或配件於手推車上時有可能導致手推車不穩定。
- 切勿承載超過一名幼兒，或讓幼兒坐在座椅以外的地方。
- 承載超重會容易產生不穩定的危險情況。（最大承載重量：15公斤。置物籃最大承載重量：10公斤。）

安全守則

- 本產品適用於一個月初生兒至15公斤（大約三歲）的幼童。
- 收摺，打開或調節手推車時，請勿讓幼兒的手接觸活動零件部份。
- 當幼兒乘坐時，請勿在電梯上使用或搬動手推車。
- 使用者必須對本產品作定期保養。
- 每次使用前請檢查配件是否在運輸過程中被損壞。
- 如發現損壞，請勿使用本產品並將其存放在遠離幼童的地方。
- 請勿將本產品放在接近階梯或階梯上。
- 只可在乾燥的平地上使用。
- 請勿使用非原廠供應的零件替換或自行改裝手推車。如發現手推車損壞，請聯絡經銷商。
- 禁止於樓梯間使用手推嬰幼兒車。

⚠注意

- 錯誤操作可能引致受傷或組件損壞。
- 請勿將手推車作乘載幼兒以外的用途，否則會引致損壞。
- 切勿讓嬰孩乘坐未安裝椅墊的手推車。幼兒的手腳可能被車架夾到。
- 不要讓幼兒操作嬰兒手推車，以免手推車翻倒或發生其他意外。
- 開關手推車或調節座墊時要注意四周旁人及小孩，以免夾傷指頭。
- 請勿用力拉動、扭動、壓下前護欄，以免引致損壞。
- 幼兒坐下後，須扣上安全帶。請確認安全帶沒有鬆脫，以免幼兒突然跌出手推車。
- 轉換把手方向時，請勿讓幼兒手部放在側扶手上，以免意外夾傷幼兒。
- 對還未能坐直的幼兒，切勿使用直立角度，請以最平躺角度使用。
- 假如放低椅背使用時座位太窄，可以將靠背調高一點使用。但注意幼兒應已差不多能獨自坐直，才可這樣使用。
- 假如幼兒頭部碰到護頭板時，請勿使用躺臥角度。
- 請勿讓成年人坐上手推車，或在上面放置重物，以免損壞手推車。
- 推動手推車時請勿奔跑，應慢慢步行，以免轉向輪損壞，或引致翻倒等意外。
- 置物籃請勿載重超過10公斤，以免引致損壞。
- 推動手推車時請小心路上凹陷之地方，以免前輪意外陷進溝內令手推車翻倒。
- 請勿於雪地和強風時或濕滑路面上使用，以免令手推車或使用者意外翻倒。
- 請勿於打雷時使用手推車，以免意外遭受雷擊。
- 夏天使用時，戶外的天氣和路面情況會令手推車溫度提高，應避免連續長時間使用。
- 避免將手推車存放於高溫，接近熱源的地方或車箱內，因高溫可使手推車變形。
- 請勿隨意改造或拆卸手推車。
- 請定期檢查所有螺絲是否上緊。
- 請勿於公共汽車上使用手推車。
- 轉向輪鎖杆應該鎖定於推行者的一方。
固定在不正確位置的方向輪鎖杆會令推行更困難，或可能引起手推車故障。
- 當路面石階等段差超過3cm時，請提高前輪跨越石階。直接撞向石階會令前輪受到衝擊，造成產品損壞。
- 跨越火車軌和汽車道的十字道口等時，請提高前輪跨越間隙，以免前輪意外卡在溝內。
- 禁止長時間使用
連續長時間使用會對幼兒造成負擔。躺臥姿勢的連續使用時間上限為2小時，坐著姿勢的則為1小時。

⚠ 注意

- 有關火車上的使用
本產品並非以火車上的使用為目的所設計的產品。假如閣下自行決定於火車上使用，請小心注意，並鎖上停車鎖，以免轉彎或剎車時令手推車翻倒。
- 打開嬰兒手推車時不要讓他人接觸，以免意外夾傷。
- 請勿在提起手推車的狀態下按下開關掣，以免引致組件損壞。
- 收起手推車後必須鎖好把手上的安全鎖。
- 按開關掣前請先解除安全鎖。錯誤操作可能損壞零件。
- 感覺有異物卡住時，請勿強行摺疊，以免造成損壞。應先打開手推車，確認後再操作。
- 收起手推車前請先確認置物籃內的物品已取出。
- 收摺前請先確認車篷已經完全收起，以免引致組件損壞。
- 收摺前請將轉向輪翻往內側然後鎖定。如果不將轉向輪鎖定在內側位置，收摺後手推車將較易翻倒。
- 轉換把手方向時，請小心確認幼兒手足沒有放在扶手上，以免夾傷。
- 轉換把手方向時，請先從前方確認幼兒狀況後才開始操作。
- 請勿一邊推動手推車，一邊轉換把手方向，以免引致危險。
- 開關手推車時，切勿操作把手鎖，以免造成手推車損壞。
- 無論車內是否載有嬰孩，也須經常按下停車鎖。
- 收起手推車時，請避免橫放，或於上面置放重物，以免車篷變形。
- 請勿手執開放的護欄來拖動手推車。
- 在座席使用的肩帶穿孔和座墊的肩帶穿孔位置要一致。如使用座席的上方肩帶穿孔，座墊亦同樣要使用上方肩帶穿孔，不然肩帶有可能因長度不足繫緊幼兒。
- 一邊推行一邊調較座席角度是非常危險的，請勿同時進行。
- 在已乘載幼兒的狀態下調較座席角度時，請注意勿讓座席角度突然改變。
- 在已乘載幼兒的狀態下調低座席角度時，請以另外一邊手支持著靠背。
- 請勿盛載太尖或太大的東西。
- 請勿使用非中性的清潔劑清潔車架。
- 請注意勿讓油分附在幼兒有機會舔到的地方，如前護欄，扶手等。

部件名稱

- | | | |
|----------------|------------------|---------------------------------|
| 1. 把手 | 16. 開關掣 | 31. 護背連臀墊 |
| 2. 把手高度調節按鈕 | 17. 天窗 | 32. 後腳桿 |
| 3. 前護欄鬆脫掣 | 18. 天窗蓋 | 33. 把手鎖 |
| 4. 前護欄套 | 19. 透氣窗 | 34. 開關鎖 |
| 5. 前護欄 | 20. 肩帶套 | 35. 後腳管活動鎖 |
| 6. 腿部支援桿 | 21. 安全帶(肩帶) | 36. 角度調節扣 |
| 7. 置物籃 | 22. 插扣片(肩腰帶) | 37. 角度調節帶(左右) |
| 8. 踏腳板 | 23. 安全帶扣 | 38. 調節掣 |
| 9. 轉向輪鎖 | 24. 護頭墊穿孔 | 39. 背面透氣窗覆蓋 |
| 10. 護頭板(活動式頭墊) | 25. 肩帶穿孔 | 40. 透氣百葉窗 |
| 11. 座墊 | 26. 腰帶穿孔 | 41. 透氣引導 |
| 12. 車篷支桿 | 27. 安全帶(腰帶) | 42. 角度調節帶 |
| 13. 側扶手 | 28. 安全帶(中央帶) | 43. 腳套(此腳套是各市場自選品，並非所有市場販賣品均配備) |
| 14. 停車鎖 | 29. 護頭墊 | |
| 15. 安全鎖 | 30. 頭部用Eggshock墊 | |

使用方法

打開手推車 (圖1.1)

一邊按下左右把手高度調節按鈕，一邊轉動把手杆回到直杆狀態。

- 1 將把手上的安全鎖向箭頭方向滑動並握住。
- 2 同時握著並提起開關鎖。
- 3 稍稍提起並打開手推車。

把手高度的調節方法 (圖1.2)

- 1 一邊按下左右兩邊的把手高度調節按鈕一邊調節把手柄的角度。
- 2 在希望使用的角度放開調節鈕。

使用轉向輪 (圖1.3)

- 1 使用轉向功能時，向上推起轉向輪鎖(左右)以解除鎖定。
- 2 不使用轉向功能時，請按下前進方向那一側的轉向輪鎖以鎖定。

警告：轉換把手時，必須解除轉向輪鎖。車輪被錯誤的方向鎖住時，打開手推車可能損壞零件。當您已切換至正常使用或正常把手，請務必將轉向輪鎖提起解除腳輪。若不解除鎖定，這可能使腳輪不能自動換轉。

使用停車鎖 (圖1.4)

- 1 壓下左右車輪的停車鎖。
- 2 輕輕前後推動推車，確認剎車已鎖定。

警告：在遠離手推車時，請隨時謹記使用停車鎖。

解開停車鎖 (圖1.5)

將停車鎖往上撥即可解鎖。

打開前護欄 (圖1.6)

- 1 如箭頭方向按下前護欄鬆脫掣。
- 2 抽起前護欄。

安裝前護欄 (圖1.7)

要鎖上護欄時，請先將護欄提起，照準末端突起部位，然後插入安裝。

警告：請勿手執前護欄搬動手推車。

車篷的使用方法

- ❶ 作為小車篷使用時：展開車篷後，將車篷框的後部向上推即可。(圖2.1)
- ❷ 作為大車篷使用時：拿著前後車篷然後將車篷往前方翻開並按下左右兩邊車篷支杆。(圖2.2)
- ❸ 將車篷做太陽擋使用時(圖2.3)：
 - 在最大覆蓋的狀態下，兩手拿著車篷的根部，然後往前方轉動。
 - 聽到「咔嚓」一聲表示已經鎖定，並在合適位置固定太陽篷。
 - 從太陽篷前方看，確認左右兩邊位置相同。
- ❹ 收納車篷(圖2.4)
 - 拉起左右兩旁的車篷支杆，將車篷往後翻起。
- ❺ 車篷天窗打開方法(圖2.5)：
 - 鬆開鈕扣將天窗蓋往上卷開並用帶扣扣住即可打開天窗。
 - 解開帶扣將天窗蓋與車篷鈕扣固定即可關閉天窗。
- ❻ 通氣窗的使用方法(圖2.6)：
 - 使用前通氣窗時，解除兩個鈕扣後，將天窗蓋向後方翻開。
 - 使用後通氣窗時，解除兩個鈕扣後，將天窗蓋向前方翻開。

使用通氣系統(透氣百葉窗)

- ❶ 打開透氣窗：按下調節掣便可打開透氣百葉窗。(圖3.1)
 - 關閉透氣百葉窗：不使用透氣系統時，請向上推動調節掣關上透氣百葉窗。(圖3.2)
- ❷ 將透氣導引的鈕扣扣在盛物籃的左右鈕扣上。(圖3.3)

使用安全帶(圖3.4)

- ❶ 將肩帶釦疊在腰帶釦(左右)上，疊好後插進中央的安全帶釦內。
- ❷ 按下安全帶釦中央的按鈕即可解開安全帶。

警告：任何時刻也必須使用安全帶。

小提示：當改變靠背角度時，請謹記檢查並確認安全帶已作出最適當的調整。

調節肩帶、腰帶的長度(圖3.5)

- ❶ 收緊時：將帶子的前端位置往圖示箭頭方向拉。
- ❷ 延長時：將帶子表側往①箭頭方向鬆脫拉出來，然後再將腰帶向裏側往②箭頭方向拉出。

調節中央帶長度(圖3.6)

- ❶ 收緊時，將中央帶的前端往箭頭方向拉。
- ❷ 延長時，首先拉出想調節的帶長①，然後將中央帶往箭頭方向②拉。

調節靠背(圖4.1)

- ❶ 調低座席角度時，先以單手支撐著小孩身體，然後將角度調節扣往下拉調低靠背。
- ❷ 調高座席角度時，將兩條角度調節帶往左右拉使角度調節扣往上。

小提示：當調節靠背時操作困難時(圖4.2)

調節帶出現扭曲的情況，請按以下程序將調節帶伸直。

- ❶ 將靠背降至最低位置。
- ❷ 將織帶沿根部開始扭轉，把織帶上的扭紋解開。

手推車換向(圖4.3)

將左右兩邊的把手鎖拉起解除後轉換把手方向，直至把手鎖重新鎖上為止。

警告：換向前請注意幼兒雙手放置位置。

小提示：當將左右兩邊把手鎖拉起前，請先彎腰查看幼兒乘坐狀況及雙手位置，避免夾傷。

拆除車篷 (圖4.4)

握住車篷插桿的末端，慢慢將車篷拔出。

安裝車篷 (圖4.5)

- ❶ 將把手置於對面位置。
- ❷ 將靠背調至最低位置。
- ❸ 確認車篷前後方向。
- ❹ 然後將車篷插桿插進車身上插座之中。

收摺手推車 (圖4.6)

- ❶ 如圖中箭頭方向拉動安全鎖作解除。
- ❷ 一邊握住開關掣，一邊提起把手，然後按下把手，推車被折疊起來。

警告：在收摺手推車前，請確保與幼兒保持安全的距離，請勿讓幼兒觸及活動零件。
收摺手推車前，請先將置物籃中的物品清空。

腳套的安裝及拆除方法 (圖5.1)

腳套是防寒附件，可以安裝到手推車椅墊上保護幼兒的腹部至足部。

當幼兒雙足長大會在腳套內踢腳套時，請停止使用。

- ❶ 解開安裝帶上的粘合貼，把安裝帶從穿孔中往後方拉出。
- ❷ 將腳套放在座墊上，拉開拉鏈，將腰帶扣和中央帶扣從腳套的相應穿孔穿出。
- ❸ 將安裝帶穿過座墊上的腰帶穿孔，再穿過腳套上的安裝帶穿孔，然後固定在安裝帶收納袋內側的粘合貼上。

拆除護欄套 (圖5.2)

- ❶ 按下護欄鬆脫按鈕，將護欄拉開。
- ❷ 從護欄上取下護欄套。

中央帶套的安裝方法 (圖5.3)

將中央帶穿過中央帶套，拉出安全帶扣。

肩帶套的安裝方法 (圖5.4)

- ❶ 按下安全帶扣按鈕以解開安全帶。
- ❷ 將肩帶套安裝到肩帶上。

置物籃 (圖6.1)

置物籃的最大載重量是10公斤。

使用安裝帶及帶釦並按照步驟❶❷❸安裝或拆除置物籃。

安全帶插扣片的安裝方法 (圖6.2)

將肩腰帶參照圖示的步驟來進行安裝。

小提示：注意肩腰帶末端應留下3cm以上的長度。

拆除座墊 (圖6.3 - 7.3)

- ❶ 按下安全帶扣按鈕，脫出插扣片，並把中央帶從中央帶套中抽出。
- ❷ 拆下肩帶套。
- ❸ 將坐席前端固定在車架上的帶扣 (2處) 解開。
如果使用了腿部支撐桿，請先將座墊前端的釦子 (2處) 解開。
- ❹ 將座墊從中央帶上抽出。

- ⑤ 從背板上解除座墊外側的固定帶（2處）。
- ⑥ 從背板上解除座墊內側的固定帶（2處）。
- ⑦ 將座墊的釦子（2處）從側板上解開。
- ⑧ 將腰帶和肩帶抽出，然後將座墊從背板取出。

小提示：若安裝請按照相反的步驟來操作。

警告：使用手推車前務必確認座墊已正確安裝。

調節肩帶高度（圖7.4）

- ① 先將肩帶從座墊及背板上解除。
- ② 將肩帶穿過背板上正確的肩帶孔。
- ③ 將肩帶穿過座墊上正確對應位置的穿孔，並確認兩邊穿孔在適當的高度。

小提示：當幼兒未滿六個月時，請使用最低的肩帶穿孔。

懷抱型座墊的安裝方法（圖7.5）

- ① 護頭墊的安裝位置。護頭墊部分，應該剛好頂至幼兒頸部。
- ② 懷抱型座墊的參考安裝時期。

	1個月	獨自乘坐前期(7個月)	36個月
護頭墊	←————→		
Eggshock墊	←————→ 放在護頭墊中使用		←————→ 放在座墊中使用
護背連臀墊	←————→		

※1 月齡只作參考，請依照幼兒體格判斷後使用。

護頭墊的安裝方法（圖8.1）

將護頭墊固定帶穿過護頭墊穿孔，安裝後，輕輕的拉動檢查它是否固定在座墊上。

有關護頭墊穿孔①②的適用範圍

- ① 大約供1個月至4個月的幼兒使用。
- ② 大約供4個月至7個月的幼兒使用。

護背連臀墊的安裝方法（圖8.2-8.3）

- a. 將護背連臀墊護背上的固定帶穿過座墊上的身體支援帶穿孔。
將固定帶折回繞過穿孔安裝。
- b. 將護背連臀墊護臀上的固定帶穿過座墊上的臀部支援帶穿孔。
將固定帶折回繞過穿孔安裝。
- c. 請用護背連臀墊護背上的穿孔穿上腰帶；用護臀上的穿孔穿上中央帶。

小提示：即使幼兒是3歲以下若護背連臀墊不適合幼兒體格，請立即停止使用。
拆除時，以相反的安裝步驟拆除。

使用Eggshock墊（圖8.4）

放進護頭墊內使用時，Eggshock墊可以安裝到懷抱型座墊的頭墊部份之內，保護幼兒頭部免受推行時的震動影響。請在頭墊背部的口袋進行安裝。

放進座墊內使用時，當幼兒的頭部抵住頭板時，將護頭墊拆除，並將頭墊內的Eggshock墊放進座墊內使用。將頭靠背面的專用口袋打開放入Eggshock墊。






保養方法

- 切勿強行拉動活動零件或裝置。
- 請勿把產品存放在潮濕的地方以免產品發霉。
- 避免把產品長時間暴露於雨水或雪霜之中。
- 請以濕布清潔金屬及塑膠部分。如遇頑固污垢，可使用稀釋的清潔劑。
- 若感到手推車操作或運行不順暢時，可以添加適量的潤滑劑。注意不要添加過多的潤滑劑，否則反而會容易沾上塵埃，引起操作異常。

清洗及保養部品

- 請遵守縫製品上所列印的以及以下的洗滌指引。
- 在使用及存放前，請確認已乾燥縫製部品。
- 請以30度以下溫水手洗。
- 幼兒容易出汗，乘坐後應將坐墊至於通風處或易乾燥地點避免發霉。

洗滌指引

 溫水中手洗	 不可烘乾	 不要使用乾衣機
 不要使用漂白劑	 不可用熨斗整燙	

產品名稱及型號	: 手推嬰幼兒車 Nemurie UF800
製造年份	: 請參考車體把手貼紙
進口商	: 台灣康貝股份有限公司
地址	: 台北市11493內湖路一段360巷6號6樓
電話	: (02)7720-8585
統一編號	: 12946262
製造廠商	: Combi Corporation
地址	: 2-6-7, Motoasakusa, Taito-ku, Tokyo 111-0041 Japan
原始製造國	: 中國
適用年齡	: 一至三十六個月
最大承載重量	: 15kg 以下
置物籃最大承載重量	: 10kg以下
主要成份或材質	: 合金、布、塑膠
使用方法	: 請依說明書組合使用
注意事項	: 乘坐時務必繫好安全帶
緊急處理方法	: 盡速送醫急救

Combi Corporation

166186010