

Combi

MiracleTurn Elite

使用說明書 Instruction Manual

使用前請詳細閱讀本說明書，然後正確使用本嬰兒手推車。閱讀後請妥善保存作日後參考之用。若將本製品轉讓予他人使用時，請將本說明書也一併移交對方。

For safety of your children, read this instruction manual carefully and use the baby stroller accordingly. After reading, please keep this instruction manual for future reference.

Please also attach this instruction manual in case the stroller is to be transferred to others to use.



使用前 Before use



- 本產品為可供一名嬰兒或兒童乘坐的嬰兒手推車，可配合於戶外活動時使用。
The product is a one-seat stroller designed to carry a baby or a little child for outside activities.
- 建議連續使用時間：2小時以內（約7個月左右的幼兒作座椅使用時則為1小時以內）
Recommended continuous usage：within 2 hours. (Within 1 hour as sitting position for around 7 months old child)
- 適合年齡：出生後1個月至36個月（因幼兒發育速度而各有不同）
Applicable age：Newborn (1 month) till 36 months old. (May vary from child's growth rate)
- ※ 出生後1個月之幼兒指出生時體重重2.5公斤以上，懷孕期滿37週，然後超過1個月成長之幼兒。
Newborn (1 month) baby refers to baby weights 2.5kg or above, has been carried for more than 37 weeks in pregnancy stage, was born for more than 1 month.

請於開封後確認所有部品已經齊全。
Check if any part is missing after opening the sales package.

包裝箱內應包括下列部品。請確認是否所有部品都已齊全。
The sales package should contain the followings. Make sure no part is missing.




- 主體
Main body
- 車篷
Canopy
- 使用說明書（本書）
Instruction manual (this book)
- 懷抱型座墊
Dacco cushion
- 肩帶套
Shoulder belt cover



警告 WARNING

- 右方指示部分均可能有夾手指的危險，故此在打開及收折手推車時，務必十分注意周圍。
The parts indicated on the right may have the danger of pinching fingers. Be careful of those around you to avoid pinching fingers when you are opening or folding the stroller.

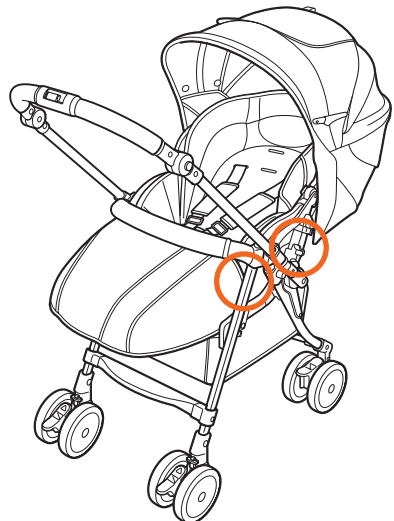

安全使用守則 Safety guideline of using the stroller

- 本章節記載了需要您在使用上理解的警告和注意的內容。正確安全地使用，預防先止危害和損害的發生。
This chapter records the warning and needed information. The stroller need to be used in compliance with instruction in order to avoid injury caused.

- 如果不遵守這裡所記載的內容，可能造成對孩子和使用者重大傷害的事故發生。
請仔細閱讀並正確使用產品，這裡表示的注意事項是根據錯誤使用，對孩子和使用者產生危害以及對財產造成的預想損害。根據危害，損害的大小和程度，分別表示為“警告”和“注意”。請務必嚴格遵守。
If the stroller is not used in compliance with the recorded content in this instruction manual, it may cause hazard to the child or the user. Please study carefully in order to use the product accurately. Labels classified as [WARNING] and [CAUTION] categorize the severity level of expected harm and damage caused by non-compliance to these instructions. Please follow accordingly.

警告 WARNING	錯誤使用，可能造成人身死亡或重傷。 Misuse may result in severe injury or death.
注意 CAUTION	錯誤使用，可能造成人身受傷或財產損失。 Misuse may result in injury or damage of product(loss on property).

- 必須遵守的內容按以下指示表示說明
Please follow the instructions according to the labels.


	告知警告/注意等內容 Content of Warning/Caution
	告知禁止的行為 Content of Prohibition
	補充說明 Key point summary

警告WARNING

錯誤操作可能引致嚴重意外 Misuse of the product may cause accidents.

會引致手推車突然收合或嬰孩跌出車外等危險的錯誤操作
Misuse which may lead to accidentally folding of stroller or cause the child to fall off

- 開關鎖確實已鎖定(請確定推車已安全打開)後才可使用。
Make sure the open-fold lock is fully engaged (when the baby stroller is fully open) before use.

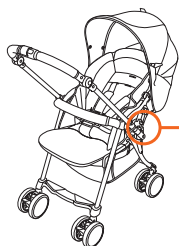

- 開關鎖已鎖，中間沒有空隙。
Locked position. There is no space in between.
- 開關鎖未鎖，中間有空隙。
Unlocked position. There is space in between.

- 切勿搬動乘載了嬰孩的手推車，或手執前護欄等地方搬動手推車，以免手推車意外滑脫，或令前護欄鬆脫，引致手推車掉下。
Do not lift and carry the stroller while a child seated, or get hold of the front guard etc. to lift the stroller. Otherwise the stroller may accidentally slip off, or the front guard may detach, all of which will cause the stroller to fall down.



- 不可於斜坡、階梯、自動電梯、顛簸破道、沙灘、泥地等場所使用手推車。
Do not use the stroller on steep slopes, stairs, escalators, rough roads, beaches, mud, etc.



- 如手推車出現損壞或操作問題，應立即停止使用。
In the event of damage or operation problems, stop using the stroller immediately.



孩子跌落，推車折疊的危險發生
Dangers of a child falling off and folding the stroller.

- 使用前請用力拉動安全帶以確認所有安全帶已固定好。
Please strongly pull the seat belt to ensure they are all tightly secured before use.
- 為避免意外，兒童應在任何時刻佩戴安全帶。
Avoid serious injury from falling or sliding out. Always use seat belt.
- 孩子可能做出意想不到的動作，所以即使已用安全帶束縛，也可能跌落。所以請在成人監護下使用，務必十分注意。
Pay attention to child even when seat belt is in use in case of any sudden movement of child causing it to fall off. The stroller should be used with guardian's attention.



- 不要讓孩子在推車上站立
Do not allow your child to stand in or on the stroller.



按照美國安全標準
幼兒有可能滑進手推車的通腳口而被勒斃，只可於備有座伸延及固定安全蓋套的情況下使用斜躺功能。
For American Safety Standard
Child may slip into leg openings and be strangled. Never use in reclined carriage positions unless the seat extension and the permanently attached safety cover are used.

警告WARNING

錯誤使用，有可能造成重大事故的發生 Misuse of the product may cause serious accidents.

推車傾倒，孩子跌落的危險

Tipping over of the stroller and causing the child to fall off.

- 切勿懸掛物件於車篷或把手上，以免引致手推車翻倒。
Do not put or hang things on the canopy or handle as it may cause tipping over.

- 懸掛包裹或配件於手推車上時有可能導致手推車不穩定。
Parcels or accessory items, placed on the stroller may cause it to become unstable.




- 切勿把身體靠於或把重物掛於把手上。
Do not lean on or hang loads on the handle.



- 抱放孩子時，手推車可能因不穩定而翻倒，請用一隻手支持。
Please hold the stroller when seating and unseating the child to avoid tipping over.

- 轉換把手時，必須解除轉向輪鎖。(共4處)。
When reversing the handle, please release swivel lock levers (total 4 places.)

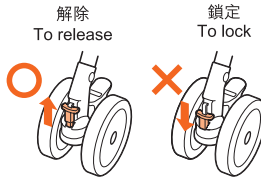

- 請勿在斜坡上轉換把手。
Please do not reverse the handle on the slope.

- 請勿一邊推動手推車，一邊轉換把手方向，以免引致危險。
Do not reverse handle while pushing the stroller.

- 前向狀態時，請勿觸碰後腳的滑塊。
Please do not touch the slider on the rear pipe while the forward facing mode is used.

- 切勿承載超過一名幼兒，或讓幼兒坐在座椅以外的地方。
Never carry more than one child in the stroller. Do not allow a child to ride or sit on areas other than the seat.



- 承載超重會容易產生不穩定的危險情況。(最大容許載重量：二十五公斤*)
Excessive weight may cause a hazardous unstable condition exist. (Maximum load: 25 kg*)

* 包括裝設在手推車上的部品(附設在包裝箱內)。
Includes the accessories (provided in the sales package) equipped on the stroller.




- 請勿外加任何輪板或組件於主體上乘載幼兒。
Do not attach other accessory like buggy board on the main body during a child being carried in stroller.

- 轉換把手至前向模式後，請確認左右後腳的滑塊完全落下並鎖緊。
After reversing the handle to forward facing, please make sure the sliders on the left and right rear pipes have been locked completely.

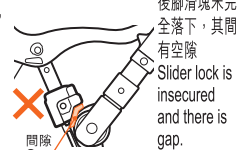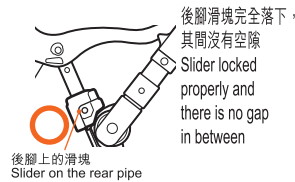

- 使用前或轉換把手後，請確認轉向輪上的標記向着推行者及轉向輪自動上鎖。
Please make sure the mark is facing the pusher and the swivel lock lever is automatically locked before use and after reversing the handle.

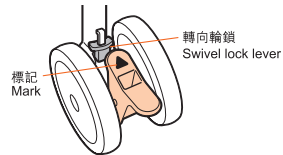

推車未被固定，而發生傾倒

Stroller not yet fixed and causing tipping over.

- 請勿過份信賴停車鎖。
Do not over-rely on the stoppers.

- 即使已經鎖上停車鎖，手推車也有可能意外滑動或翻倒。
Stroller may move suddenly or tip over even when stoppers are engaged.



- 切勿讓幼兒單獨坐在車上。
Never leave the child unattended.



- 即使幼兒不在車上，也不可將手推車隨意放在路旁或斜坡等危險地方。
Do not leave baby stroller at road side or slope even when it is not in use.



避免引致幼兒身體受傷的事項
To avoid injury to the child

- 開關手推車或調節座墊時要注意四周旁人及小孩，以免夾傷手指。
Be careful of those around you to avoid pinching their fingers when you are opening or folding the stroller or adjusting the seat angle.
- 在折疊以及打開車篷時，請注意不要夾到幼兒的手指。
When you open and fold the canopy, be careful not to pinch baby's finger.
- 轉換把手方向時，請小心確認幼兒手足沒有放在扶手上，以免夾傷。
Be careful not to pinch the baby's hands or feet when reversing the handle.
- 請勿使用未安裝椅墊的手推車，以免幼兒手腳等意外夾在手推車上的縫隙當中。
Do not use a stroller without a seat cushion properly attached. Otherwise the child's hands or feet may be pinched in gaps on stroller.
- 當幼兒的腳觸及車輪或地面的時候，請不要使用。有弄傷足部的可能。
Do not use when the child's feet reach the wheel or the ground or this may result in injury.


 注意 CAUTION

錯誤使用，有可能造成人身傷害和推車損壞的危險發生

Misuse of the stroller may cause personal injury or the damage to the stroller.

- 不要用作乘坐孩子以外的用途，指定功能以外的使用可能有損壞的危險。
Please do not use the stroller in whatever purposes other than seating a baby. Failure to comply may result in damage of the stroller.
- 不要讓孩子操作手推車，可能有翻倒等意想不到的事故發生。
Do not allow children to operate the stroller in order to avoid tipping over or unexpected accidents.
- 不要用力拉扯/轉動前扶手，有破損可能。
Do not pull or twist the front guard hardily. Otherwise the stroller may be damaged.
- 不要在前扶手上加載過大的力，和不必地拉長前扶手。
Do not forcibly press down or elongate the front guard to avoid any damage.
- 孩子乘坐時，安全帶裝著好後，請確認安全帶沒有鬆弛等現象。否則孩子可能有滑出和跌落的危險。
Make sure the safety belt is fastened. Check if the belt fits properly. Or the child may fall from the stroller.
- 還不能自己坐立的孩子，請在靠背平躺位置使用。(參考第18頁)
Please apply a reclined seat to baby who cannot sit straight by itself. (please refer to page 18.)
- 靠背在平躺位置時，孩子還是只能蜷縮身體的話，請將靠背調節至中間位置使用。但是這種使用方法僅限於可以獨立坐立的孩子。
Lift the backrest a little to use if the seat is found too narrow when fully reclined. However, the baby should be able to sit straight when stroller is used in such way.
- 孩子的頭部會碰到頭靠的擋頭時，請不要使用平躺的頭靠。
Do not use the most reclined angle if the baby's head touches at the head rest.
- 成人不要在推車上乘坐或加載過大的重量，可能造成損壞和故障。
Do not let adult to add load on the stroller to avoid any damage to it.
- 不要奔跑地推行推車。奔跑時可能使轉向輪運動惡化，造成翻倒等事故發生。
When pushing the stroller, please walk slowly to avoid any damage to the stroller swivel wheels or any tipping over happened.
- 不要加裝任何如鐵棒等的物件用於孩子乘坐的目的，可能會造成推車損壞。
Do not attach other accessory like iron board to the main body for child's sitting purpose. Otherwise damage may be caused to stroller.
- 儲物籃中不要放置過重的物品(最大載重量請參見第24頁)，這可能造成損壞。
Do not let the basket overload.(please refer to the maximum weight as indicated on pg. 24)or the basket may be damaged.
- 在使用時或轉換把手方向時，必須向上推起轉向輪鎖(共4處)以解除方可使用。
Please lift the swivel lock lever(total 4 places) to release before use.
- 請不要擅自改造，拆解推車，因為這可能產生危險。
Do not remodel or restructure the stroller by yourself as this may be causing hazard.
- 不要在積雪或凍結的路面等容易滑倒的地方使用，推車和推行者也容易滑倒。
Do not use the stroller in snowy days or on frozen roadways to avoid the stroller or guardian from slipping.
- 不要在強風的時候使用，推車有被吹跑和翻倒的危險。
Do not use the stroller in windy ways to avoid the stroller or guardian from falling on the ground or being pushed away by the wind.
- 打雷的時候不要外出使用，有被雷擊的可能。
Do not use stroller in lightening days to avoid thunder stroke.
- 在夏季晴空烈日下，由於路面的影響使推車內溫度升高，請避免長時間使用。
Avoid continuous outdoor usage particularly during day time in summer.
- 不要在近火源或高溫處使用和保管推車可能造成故障和變形。
Do not store the stroller under high temperature or near fire to avoid deformation.
- 推動手推車時請小心路上凹陷之地方，以免前輪意外陷進溝內令手推車翻倒。
When pushing the stroller, please pay attention to any hole or track on the ground to avoid the front wheel from accidentally getting jammed and tipping over.
- 請定期檢查所有螺絲是否上緊。
Check regularly that all screws, bolts and nuts are engaged tightly.
- 跨越火車軌和汽車道的十字道口等時，請提高前輪跨越間隙，以免前輪意外卡在溝內。
Lift front wheels and pay particular attention to gaps or ditch when crossing rail road.
- 在保存手推車時，請勿在手推車上放置重物，以免其損壞或變形。
Please do not place loads on the stroller during storage to avoid deformation.
- 如直立存放手推車時，請先鎖上轉向輪鎖及停車鎖以免手推車易於翻倒。
If the baby stroller is stored in vertical position, please make sure the swivel is locked and please lock the stoppers as well to avoid the baby stroller falling down easily.
- 禁止長時間使用
長時間連續使用，可能造成孩子負擔。所以平躺狀態時使用控制在2小時內，坐立時控制在1小時內。
No continuous use for a long period
Continuous use for a long period of time may exhaust baby. No continuous use of more than 2 hours for a baby seated in a reclined seat and 1 hour in an upright seat.
- 不要在公共車上使用
本產品並不是設計用來在公共車上使用的，遇急變向或急剎車時可能造成翻倒等事故。
Do not use the stroller on public vehicles.
This product is not desgined to use on public vehicle. The stroller my be tipped over when come across the sudden brake or turning of the vehicle. Do not use the stroller on public vehicles.
- 在軌道地鐵上使用
本產品並不是設計用來在軌道地鐵上使用的，遇急變向或急剎車時可能造成翻倒等事故，使用者自願承擔責任及風險使用時，務必啟動剎車防止翻倒。
For use on trains
This product is not desgined to be used on trains. When user attempts to use the product at his/her own risk, please lock stoppers in case of sudden brake or turning. Otherwise stroller may fall off.

部件名稱 (請詳細閱讀本章, 然後正確安裝手推車)
 Name of parts (Please read this page carefully before installation)

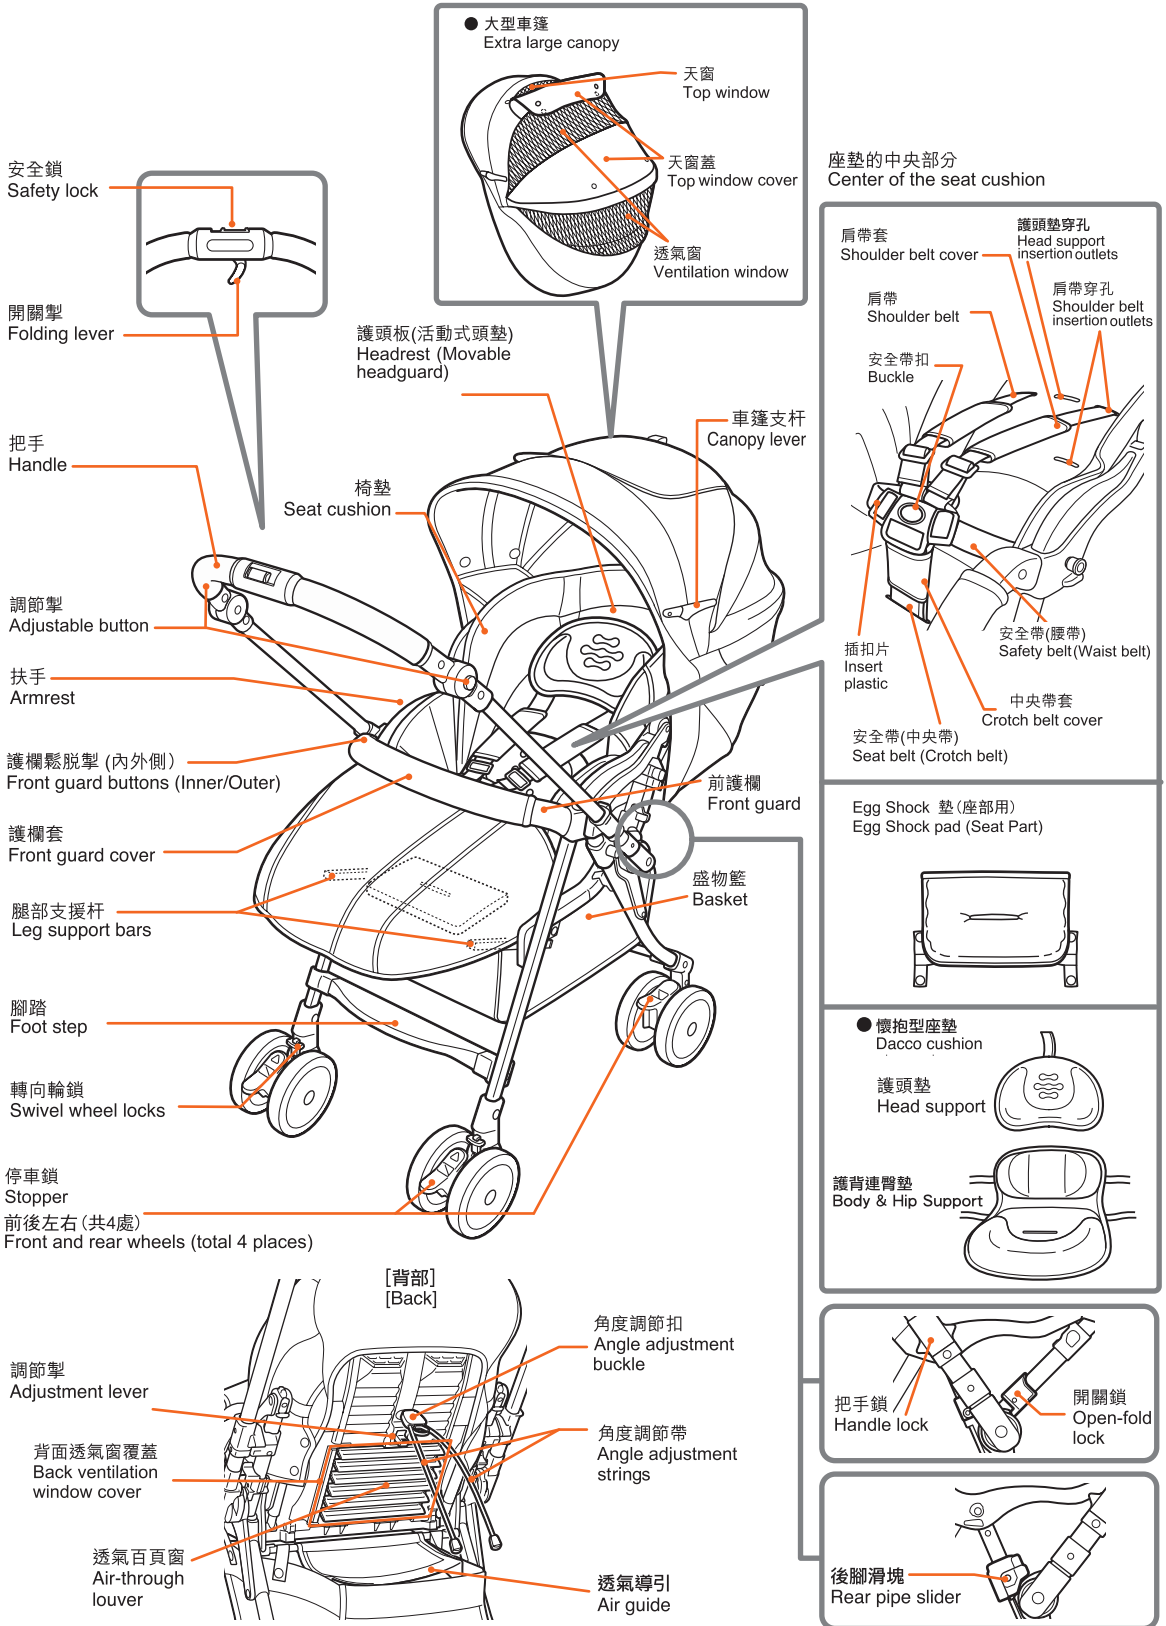


打開手推車 Opening the stroller

警告 WARNING

- 使用前必須確認折疊開關處於鎖定狀態，否則有突然折疊的危險。(參照右圖)
Make sure the open-fold lock is engaged completely before use.
- 打開嬰兒手推車時不要讓他人接觸，以免意外夾傷。
Open the baby stroller in clear area.
- 除開折手推車外，請勿觸碰開關鎖。
Please do not touch the folding lever except when folding the stroller.
- 使用前，請確認轉向輪鎖的標記向著推行者的一方並確實已自動上鎖。否則，手推車有可能會翻倒以致孩子跌落。
Please make sure the swivel lock lever is automatically locked and the mark on the swivel lock lever is facing the pusher. Otherwise, the stroller may tip over and child may fall off.


鎖定位置(使用時):

開關鎖於下方，其間沒有空隙。
Locked position (while in use); the Open-fold locks are secured and there is no space in between.

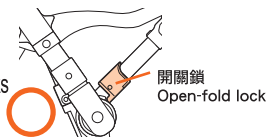

未鎖定位置:

開關鎖於上方，其間留有空隙。
Unlocked position; the Open-fold locks are lifted and there is space in between.

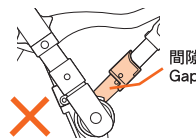

注意 CAUTION


- 不要讓孩子操作推車，可能造成推車翻倒等危險情況。
Do not let children operate the baby stroller, this may cause the tipping over of the stroller.
- 上提推車時握住折疊按鈕解除鎖定的話，可能會造成破損。
To press on the folding lever while lifting the stroller may lead to damage to the stroller.

本推車可以1步驟折疊。

This stroller can be folded by one step.


1. 一邊按下左右把手高度調節按鈕，一邊轉動把手杆回到直杆狀態。
The handle grip is returned to the straight position while pressing both adjustable button.
詳情請參考P.7「把手高度調節方法」。
Please refer to P.7 for adjusting the handle position.

※ 包裝時，把手呈折疊狀態。
Handle grip is folded in sales package.

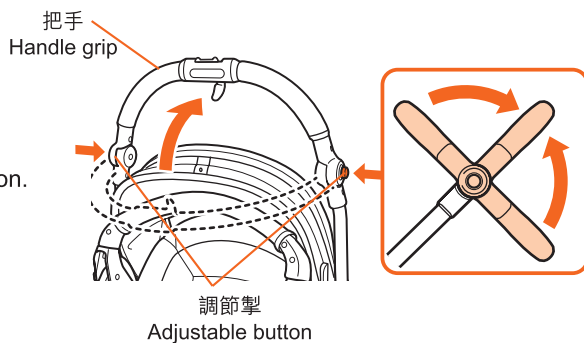

2. 將把手上的安全鎖部分向箭咀方向滑動解除安全鎖。

Slide the safety lock in demonstrated direction to release the safety lock.

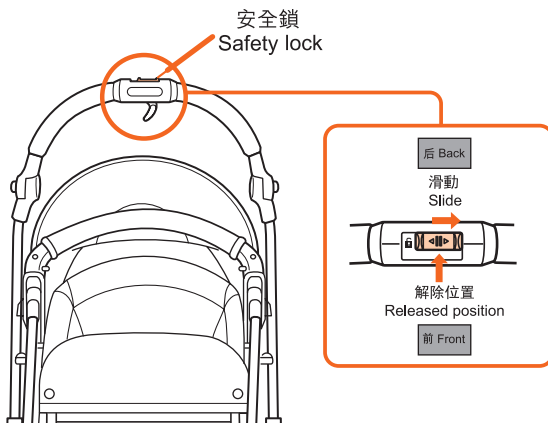


3. 站在手推車的後面。
Standing behind the stroller.

1. 一邊握住折疊開關，一邊提起推把
Lift the stroller upwards while grip the folding lever.

2. 將把手往箭咀方向拉動，打開手推車。
Pull down the handle to open the stroller as demonstrated direction.

手推車完全打開。
The stroller is fully opened.

於提起手推車的狀態下，即使按開關擊可能不能打開手推車。操作開關擊時，請確保手推車接觸地面。
The stroller may not open even the folding lever is pressed while the stroller is lifted.
Make sure the stroller touches at the ground during operation.

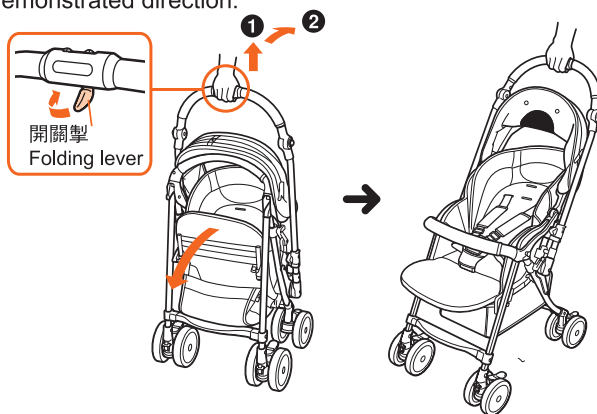

把手高度調節方法
Adjusting the handle position

⚠ 注意 CAUTION


- 不要一邊推行推車，一邊調節推車，非常危險。
Do not change the handle position while pushing the stroller because it is extremely dangerous.
- 手推車被折疊時，把手必須回復到原來的角度。
Be sure to return to the original straight line when folding the stroller.

變化把手的角度可以調節把手的使用高度(把手可作11個角度的調節)
The height of handle grip can be adjusted by changing its angle. (there are 11 different angles).

1. 一邊按下左右兩邊的把手高度調節按鈕一邊調節推杆的角度。
Adjust the angle of handle grip by pressing both adjustable buttons.

2. 調節到合適角度時，鬆開把手高度調節按鈕。
Release the adjustable buttons after selecting the appropriate angle.

把手高度調節後，請上下推動把手，確認是否有鬆動。
Make sure handle grip is engaged completely after changing the angle.

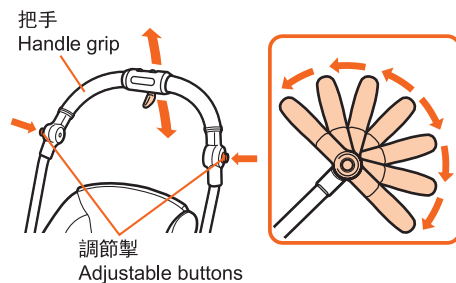


轉換把手方向 Reversing the handle


警告 WARNING

- 轉換把手方向時，請小心確認幼兒手足沒有放在扶手上，以免夾傷。
Be careful not to pinch the baby's hands or feet which may be put on its armrest when reversing the handle.
- 轉換把手方向時，必須解除四處轉向輪鎖。否則，面向推行者一方的轉向輪不能自動上鎖，手推車或會往意想不到的方向移動而引致手推車翻倒，幼兒跌落的可能。(請參考圖A)
When reversing the handle, please make sure to release the swivel lock lever (total 4 places). Otherwise, the swivel lock (on the pusher's side) cannot be locked automatically, the stroller may move to unexpected direction and tip over or the child may fall off. (Please refer to diagram A.)
- 請勿在斜坡上轉換把手方向。如轉向輪鎖(四處)未能上鎖，手推車有可能移向意想不到的方向而引致手推車翻倒，幼兒跌落的可能。
Do not reverse the handle on the slope. If the swivel lock lever (total 4 places) are not locked, the stroller may move to unexpected direction and tip over or the child may fall off.
- 在轉換把手方向後，輕輕向前推行手推車一段距離，確定車輪自動迴轉至原本正確位置並確認標記面向着轉向輪鎖。否則，手推車有可能翻倒而導致幼兒跌落。(請參考圖B)
After reversing the handle, slightly push the stroller in a short distance to make sure the wheels automatically return to correct position and the mark is facing the swivel lock lever. Otherwise, the stroller may tip over and the child may fall off. (Please refer to diagram B.)
- 請勿一邊推動手推車，一邊轉換把手方向。否則，轉向輪鎖有可能未能鎖上，手推車或會往意想不到的方向移動而引致手推車翻倒，幼兒跌落的可能。
Do not reverse the handle while pushing the stroller. If the swivel lock lever (total 4 places) are not locked, the stroller may move to unexpected direction and tip over or the child may fall off.
- 轉換把手至前向模式後，請確認左右後腳的滑塊完全落下並鎖緊。否則，轉向輪鎖有可能會鬆脫而導致手推車翻倒和孩子跌落的可能。(請參考圖C)
After reversing the handle to the forward facing mode, please make sure the slider on the left and right rear pipe have been locked completely. Fail to do so may cause the stroller to be tipping over, child falling off because of the loosening of the swivel lock. (Please refer to diagram C.)
- 前向使用時，請勿觸碰後腳的滑塊。轉向輪鎖可能會鬆脫，手推車有可能因而翻倒而導致孩子跌落。
When using forward facing mode, please do not touch the slider on the rear pipe or the swivel lock may be released and cause the stroller tipping over and child falling off.


圖A 向上撥轉向輪鎖
Diagram A Lift up the swivel lock lever

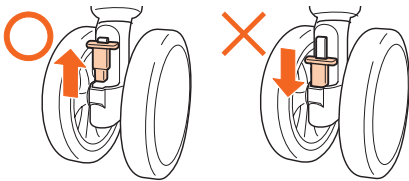

圖B 請確認標記向着轉向輪鎖並確實已鎖定。
Diagram B Please make sure the mark is facing the swivel lock lever and is locked properly.

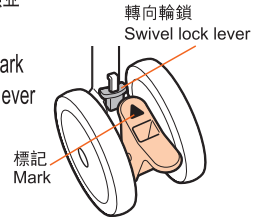

圖C 確認左右後腳的滑塊完全落下並鎖緊。
Diagram C Make sure the slider on the left and right rear pipe have been locked completely.

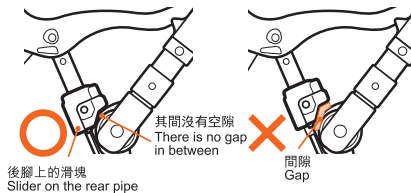


注意 CAUTION

- 請勿一邊推動手推車，一邊轉換把手方向，以免引致危險。
Do not reverse handle while pushing the stroller.
- 轉換把手方向時，請先從前方確認幼兒狀況後才開始操作。
Check the baby's situation from the front side before reversing the handle.
- 換向時，請將把柄角度回復到原來的直線狀態。
When reversing the handle, please return the handle to the original straight line situation.
- 開關手推車時，切勿操作把手鎖，以免造成手推車損壞。
Do not touch at the handle lock when folding or unfolding the stroller. Otherwise damage may be caused to the stroller.
- 轉換把手方向時，必須確認四處轉向輪鎖已經解除。如在沒有解除的狀態下轉換把手，不僅會令推行困難，更有可能造成破損。
Please make sure the swivel lock lever (total 4 places) are released before reversing the handle. Otherwise, the stroller will be difficult to push and the stroller may be damaged.


- 轉向輪的自動功能會因應把手方向的轉換而自動解除及鎖定。
The automatic function of swivel wheels are automatically released or locked according to the handle position.

轉換把手方向 Reversing the handle

1. 請確認4處轉向輪鎖已全部解除。
Please make sure the swivel lock levers (total 4 places) are released.

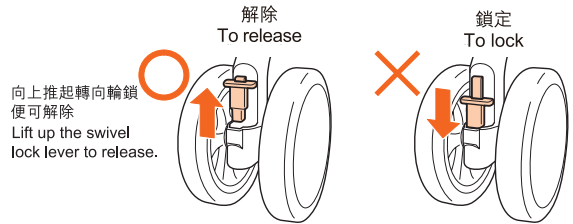


2. 將左右兩方的把手鎖同時拉起作解除。
Lift and release the handle lock on both sides.

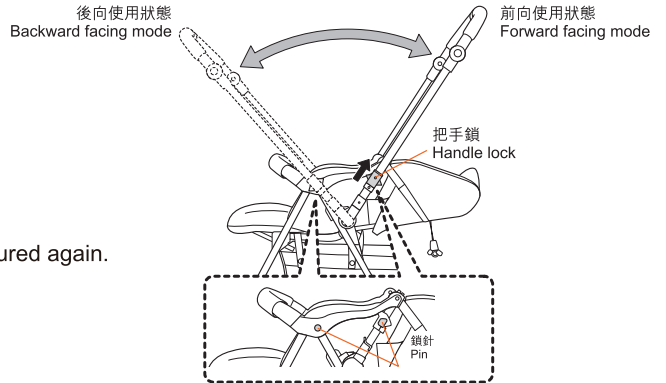


3. 轉換把手方向，直至把手鎖重新鎖上為止。
Reverse the handle until the handle lock is secured again.

4. 將手推車推行一段距離以確認左右的轉向輪方向已改變並可以見到標記。標記必須向着轉向輪鎖並確認已鎖定。
Please push the stroller in a short distance to ensure the direction of the swivel wheel has been changed and the mark can be seen. The mark should be facing the swivel lock lever and ensure it is locked properly.

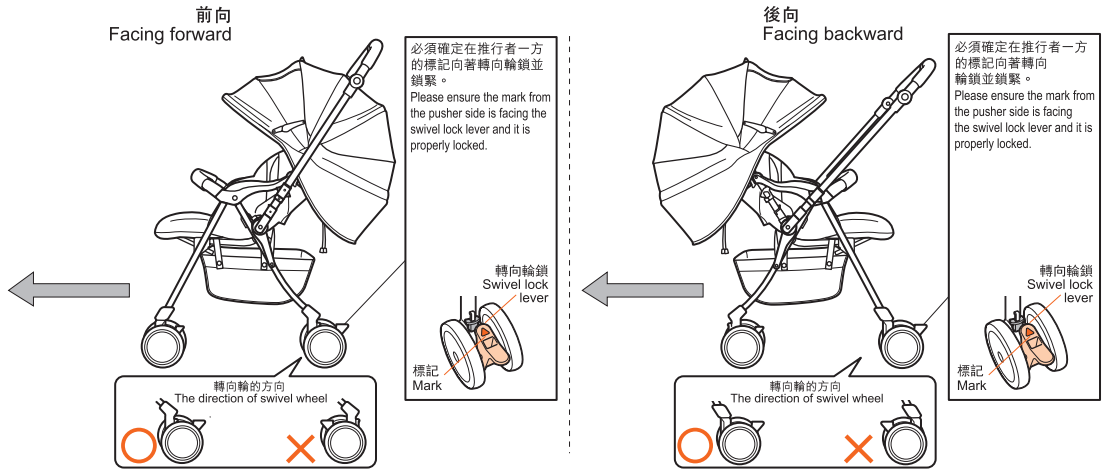

轉向輪的方向是正確時，標記應該是向着進行方向。
The mark on the swivel wheel should be facing the moving direction of the stroller.

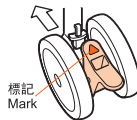

改變把手方向後，請確認以下事項。
Check the followings after the operation.

1. 請確認把手鎖已經重新鎖上。
The handle lock is resumed to locked position again.
2. 輕輕上下搖動把手，確認已經固定。
Move the handle back and forth to check if it is secured.
3. 在改變把手方向後，請注意左右後腳的滑塊是否完全落下。
(請參考第8頁警告欄內的圖C。)
After reversing the handle, please make sure the slider on the left and right rear pipe is properly locked. (Please refer to the diagram C on the warning column of page 8.)

⚠ 注意 CAUTION


- 與孩子對面狀態時，由於推把的角度可能會造成越過台階的困難。這種狀況下，可以採取如腳踩踏板使前輪翹起，使用者先上台階後再提上推車時方法越過台階。In case of using the face to face mode, and after changing angle of the handle grip, it may be causing difficulties of pushing the stroller across the stairs. In this case, user can put the foot onto the footrest and lift up the front wheels to go over the steps first and then lift up the stroller.

使用轉向輪 Using the swivel wheels

- 於平坦路面使用轉向輪，可使手推車更暢順推動及轉向容易。
It is recommended to release all the swivel wheel locks when use on flat surface for easy strolling.
- 於不平路面推行時，應鎖上轉向輪鎖。
It is recommended to lock all the swivel wheel locks when using on the rough surface.

使用轉向功能時 To use the swivel wheel

向上推起轉向輪鎖(左右)以解除。
(根據進行方向)
Lift the swivel wheel lock levers(left and right)
to release. (according to the moving direction).

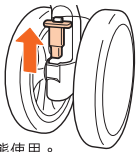


請常以這個狀態使用。
推行者一方的轉向輪鎖會自動鎖定。
Please always use the stroller with the swivel lock
as per the diagram.
The swivel lock (pusher's side) will be
automatically locked.

- 推行者一方的轉向輪鎖已自動上鎖。
The swivel wheel locks(at the same direction of the user)are already locked automatically.
- 不可以手動操作轉向輪鎖。
Swivel lock lever cannot be operated manually by then.

不使用轉向功能 Swivel wheel not in use

請按下和推行者同一方向的2處轉向輪鎖以鎖定。
Press down the swivel lock lever (the ones at the same direction of the user) to lock.

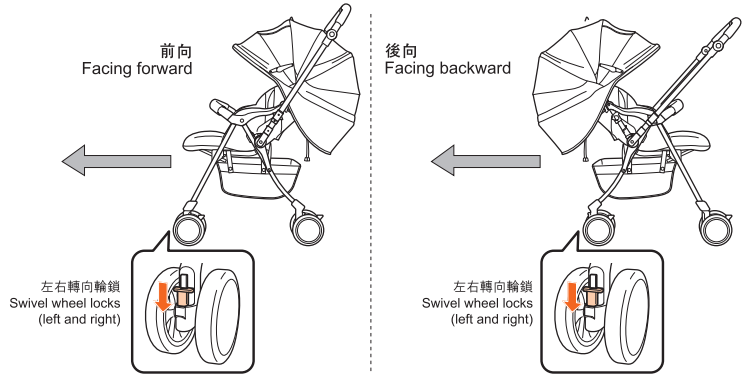

停車鎖的使用方法 Using the stoppers

警告 WARNING

- 不論有否乘載嬰孩，停車時勿過分信賴停車鎖的性能。
Do not rely too much on the stoppers even when the stroller is parked empty.
- 即使已使用停車鎖，如載有嬰孩，應隨時留於手推車附近，以防任何危險發生。此外，停車鎖應左右兩方同時使用，以免意外滑動或翻倒。
Even with both stoppers engaged, always stay close to the stroller when it is carrying a child. Make sure to engage both sides of the stoppers to avoid sudden movement or tipping over.

注意 CAUTION

- 無論車內是否載有嬰孩，也須經常按下停車鎖。
Even when empty, always engage both stoppers since the stroller may suddenly move.

停泊推車時，必須啟動停車鎖。
Make sure the stoppers are engaged when parking the stroller.



鎖定停車鎖 Lock the stopper

1. 壓下左右車輪的停車鎖。
To lock the wheels, press the stoppers down which are located at rear wheels on both left and right sides.
2. 輕輕前後推動推車，確認剎車已鎖定。
Try to push the stroller back and forth slightly to ensure that the stoppers are properly engaged.

當手推車不能順暢地推行時，請確認停車鎖是否鎖定。
If the stroller cannot be smoothly moved, please confirm the stoppers are engaged or not.

解開停車鎖 Release the stopper

- 將停車鎖往上撥即可解除。
Lift the stopper to unlock.

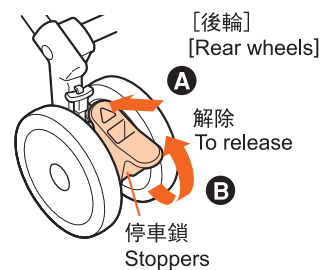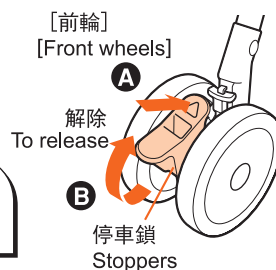

使用前護欄 Using the front guard

警告 WARNING

- 乘載幼兒時必須繫上安全帶。護欄不能防止幼兒從座椅上站起來。
Make sure to use the seat belt when the child is seated. The front guard is not designed to prevent the child from standing up.
- 不要讓幼兒操作護欄以免其意外跌倒。
Do not let the child operate the front guard. It may make the child to fall off from the stroller.
- 請勿手執護欄來舉起手推車，以免發生危險。
Do not get hold of the front guard to lift the baby stroller.

注意 CAUTION


- 請勿手執開放的護欄來拖動手推車。
Do not get hold of an opened front guard to pull the baby stroller.
- 請勿過度按壓護欄，以免損壞。
Do not forcibly press on the front guard to avoid damage.

抱放孩子時，可打開前護欄，不會纏絆腳部，方便抱放。


Releasing the front guard would make it more convenient for seating and unseating baby and to avoid trapping the legs at the same time.

打開前護欄 Open the front guard

1. 如箭頭方向按下前護欄鬆脫掣。
Press and hold the button at the end of the front guard as illustrated.
2. 抽起前護欄。
Detach the front guard.

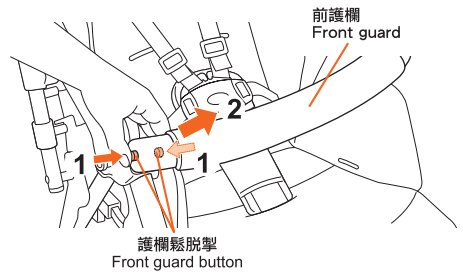

2. 放下前護欄。
Release the front guard.

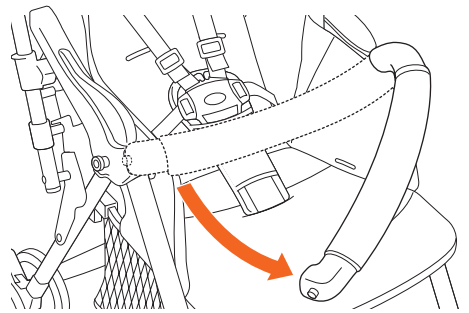


前護欄能開合的是正面左側的連接點
The front guard can only be released and closed at the left side's conjunction from front view.

安裝前護欄 Attach the front guard

要鎖上護欄時，請先將護欄提起，照準末端突起部份，然後插入安裝。

To attach front guard, lift and plug into the projected part at the end of the armrest.

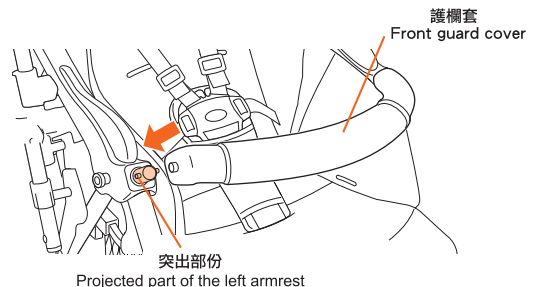

車篷使用方法 Using the canopy




警告 WARNING

在折疊以及打開車篷時，請注意不要夾到幼兒的手指。

When you open and fold the canopy, be careful not to pinch baby's finger.



- 即使安裝了車篷，推車也可以被折疊。折疊時，必須折疊車篷，並收納在後側。
There is no need to detach canopy before folding stroller. However, canopy must be folded to the back.
- 車篷安裝方法請參見第22頁
Refer to pg. 22 for how to install and detach canopy.

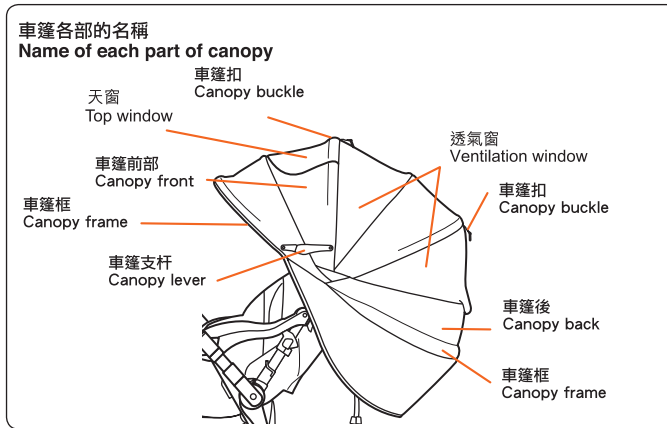

調節車篷大小 Adjust the covering size of canopy

大車篷使用時 Using in big size

- 1 拿著前後車篷車架然後將車篷往前方翻開。
Grab the front and back canopy frame and release the canopy to biggest coverage.
- 2 按下左右兩邊車篷支杆。
Press on the left and right canopy levers.

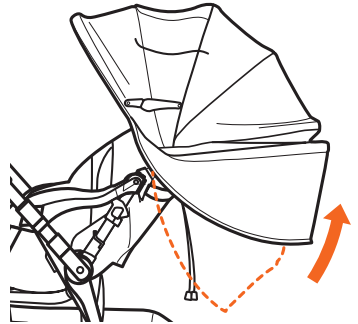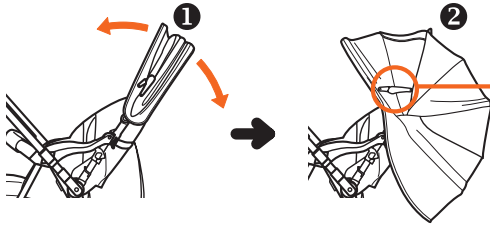


小車篷使用時 Using in small size

展開車篷後，將車篷框的後部向上推。
After having extended the canopy to full coverage, push up the frame of the canopy back.

將車篷作太陽擋使用時 When using canopy as sunshade

- 孩子睡覺時，日照度較低時，可以用車篷作為遮陽擋使用。
Use canopy as sunshade when baby is asleep or when sunlight angle is low.


大車篷使用狀態，用手握住車篷裝飾條底端向前方轉動聽到“咔嗒”聲音，說明車篷處固定位置請調整到所需位置後固定。從前方觀察車篷，請確認車篷左右處於同樣的位置。
Open canopy completely. Hold on each end and turn canopy to the front until it clicks into place. Check left and right side to see if canopy is secured in the same position.

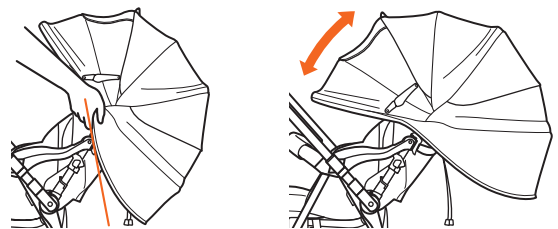

用手握住車篷裝飾條底端
Hold left and right ends of the canopy frame

收納車篷 Folding up the canopy

拉起左右兩旁的車篷支杆，將車篷往後翻起。
Lift the canopy levers and fold the canopy backward.

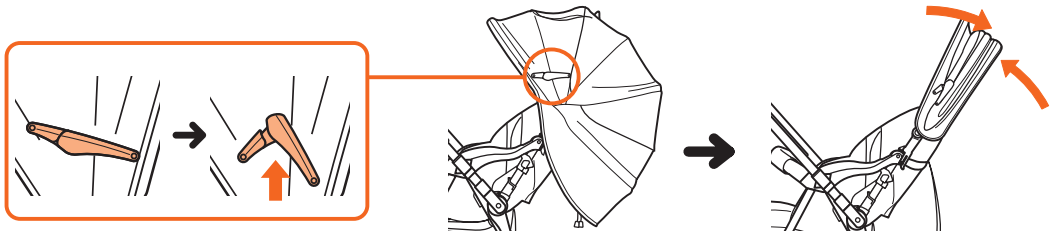


車篷頂窗打開方法 Using the top window

打開透氣窗蓋布，可以觀察孩子的情況。
You may look at the child with the top window opened.


打開天窗 To open the top window

脫開2個鈕扣，把透氣窗蓋布上翻。
Undo the 2 snaps and roll up the window cover.

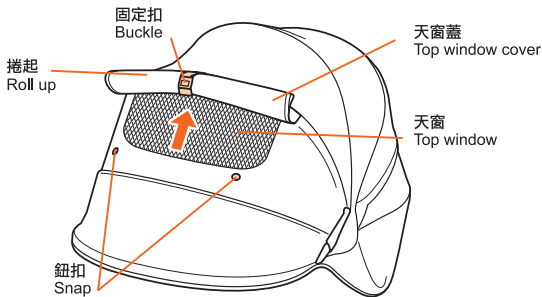

關閉天窗 To close the top window

扣上2個固定扣。
Release the buckle and secure the 2 snaps on top.

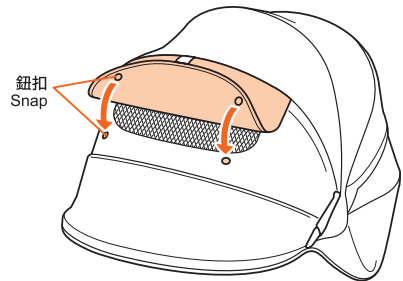


透氣系統裝置(透氣窗)使用方法 Using the air through system

使用透氣系統裝置(透氣窗)，把車篷調節到大車篷狀態打開透氣窗鈕扣，捲起蓋布，用鈕扣固定。
Completely unfold the canopy and open (roll up) the ventilation window cover and secure it with the buckle.

使用前透氣窗時，解除兩個鈕扣後，將透氣窗蓋向後方翻開。
When using the front ventilation window, release the two snaps and unfold the ventilation window cover backwards.

使用後透氣窗時，解除兩個鈕扣後，將透氣窗蓋向前方翻開。
When using the back ventilation window, release the two snaps and unfold the ventilation window cover to the front.

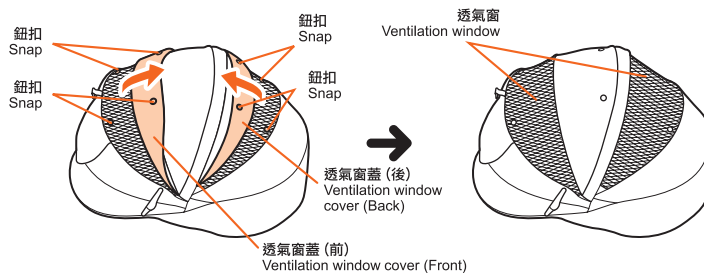

使用透氣系統 (透氣百頁窗)
Using the Air Through System (Air through louver)

⚠ 注意 CAUTION


- 請勿將手指或物件放入通氣孔內以免幼兒受傷。
Do not put fingers or stuff inside the air through louvers or child may get hurt.
- 切勿在透氣導引上放置重物。重物或會跌落或引致導引變形。
Please do not place heavy load on the air guide. Things may fall off or deformation will be caused to the air guide.
- 請勿手執百頁窗向上推或用力拉動以免引致破損。
Please do not push up the louver or forcibly pull it to avoid damage.

- 手推車背面(底座)附有透氣窗，於炎夏外出時可以打開令空氣更流通，令幼兒感到更舒適。
There is a ventilation window at the back of stroller seat. Leave the window open in summer time for better comfort to the baby.



打開透氣窗 Opening the air through system

1. 按下調節掣便可打開透氣百頁窗。


Press down the adjustment lever to open the air through louver.

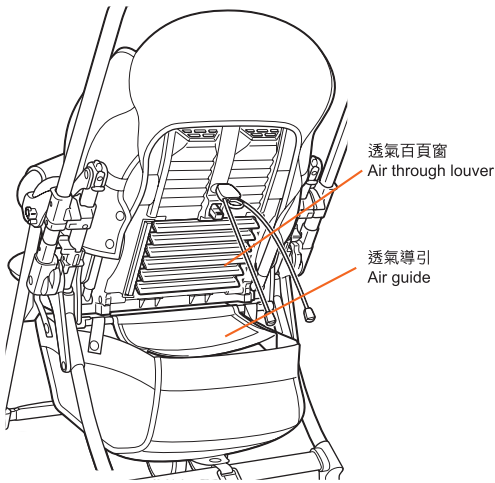


不使用透氣系統時，請向上推動調節掣關上透氣百頁窗。
When the air through system is not in use, please push up the lever and close the air through louver.

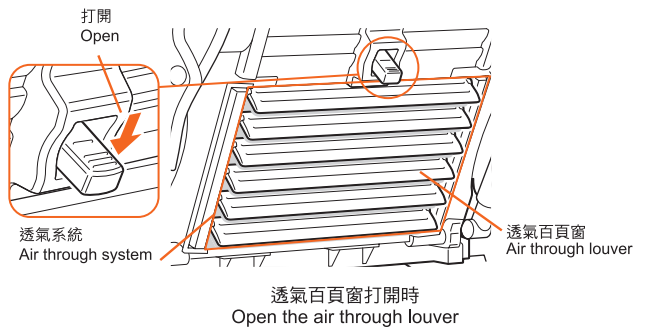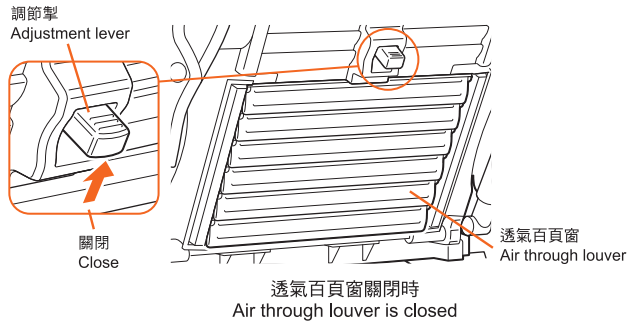

2. 將透氣導引的鈕扣扣在盛物籃的左右鈕扣上。
Secure the snaps of air guide to the ones on the basket.

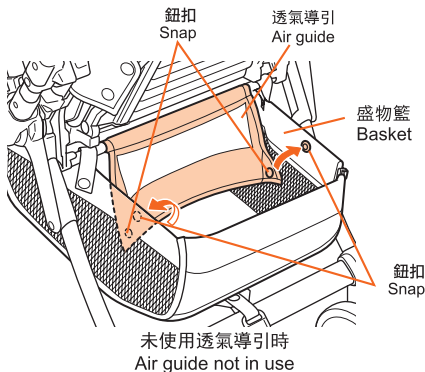

即使不扣上透氣導引的鈕扣也可以使用，但是有可能未能發揮其原本的功能。
Although the air guide can be used without fixing the snaps, it may not function as designed.

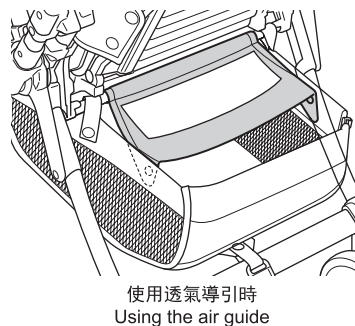


使用腿部支援杆 Using the leg support bars

使用腿部支援杆，可以使幼兒睡覺時姿勢更舒適。
Apply the leg support bars for better comfort when child is asleep.

⚠ 注意 CAUTION

乘載幼兒時請確保已用鈕扣把椅墊和腿部支援杆扣上。
Make sure to snap the seat cushion onto the leg support bars.
Otherwise it may make the baby hurt.

- 1. 提起椅墊，將座椅下的腿部支援杆抽出。**
Lift the seat cushion and pull out the leg support bars from the seat base.
- 2. 蓋上椅墊，再將鈕扣扣上。**
Snap the seat cushion onto the leg support bars.

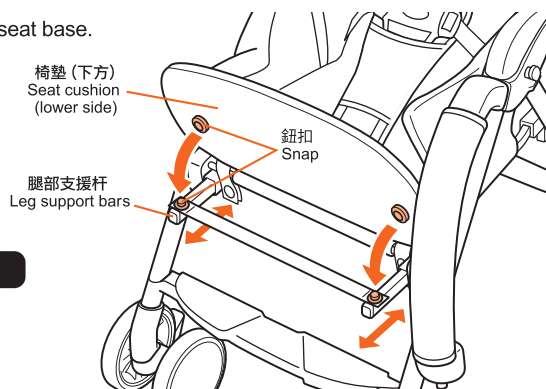

收起腿部支援杆時 To store the leg support bars

解除鈕扣，再將腿部支援杆推回座椅底部。
Release the snaps and push the bars back to the seat base.

安全帶(中央帶, 腰帶, 肩帶)的使用方法 Using the seat belt (crotch belt, waist belt, shoulder belt)

警告 WARNING

- 有孩子坐時，必須使用安全帶。不使用安全帶，或束縛不完全，使用中可能造成孩子跌落。
Always use the seat belt when the child is carried in the stroller. Without using the seat belt or using it incorrectly may cause danger to the child.
- 另外即使使用了安全帶，也要十分注意孩子從車內滑落或站立等危險情況。
Furthermore, even if the seat belt being used, user should pay attention to the child not to stand up or fall off.
- 根據孩子的身體調節安全帶長度，牢固束縛，防止滑落。
Adjust the seat belt to fit the child, to make sure it is not too loose to avoid child to fall off.
- 將肩帶扣在插扣片上時，請勿交叉肩帶，以免肩帶對幼兒頸部造成壓迫。
Do not cross the shoulder belts with each other when securing the shoulder belt to the insert plastic. Otherwise excessive pressure may be caused to child's neck.


安全帶是中央帶、腰帶、肩帶的總稱。

Seat belt here refers to the crotch belt, shoulder belt and the waist belt.

安全帶束縛和脫開的方法 Attaching and releasing seat belt


安裝安全帶時 To attach seat belt

1. 將肩帶扣在左右兩方插扣片上的肩帶勾上。
Attach shoulder belts to the shoulder belt hook of the left and right insert plastics.
2. 拿起中央帶，在安全搭扣的左右插入安全插扣，聽到“咔嗒”一聲，說明已安全插入。
Take the crotch belt and put the insert plastics into the buckle until a “Click” sound is heard.
3. 拉動中央帶，腰帶，肩帶，確認有無鬆動。
Pull the shoulder belts and waist belts to check if it is secured.

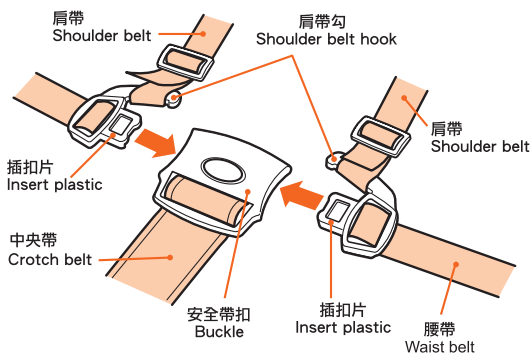


解除安全帶時 To release seat belt

按下安全帶扣中央的按鈕解除。
Press down the centre buckle button to release.

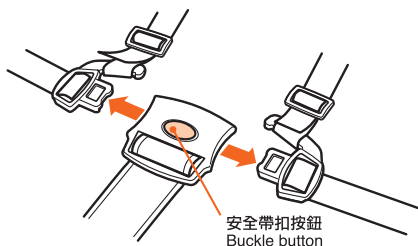

束縛孩子時 Fitting the seat belt to child

1. 讓孩子坐在車內，使其肩膀左右與肩帶貼合。
Seat the child into the stroller and fit the shoulder belts on the child's left and right shoulder.
2. 把安全插扣上的肩帶掛鉤(左右)，裝入肩帶掛扣中，將安全搭扣的左右插入安全插扣。
Secure the left and right shoulder belts to the shoulder belt hooks and fasten the insert plastics into the centre buckle.

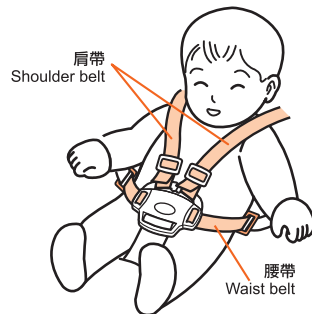

- 在低月齡孩子使用時，靠背可能經常調節角度，請選擇最下方的肩帶穿孔。
Use the lower shoulder belt insert outlets for child who may need frequent adjustment in the seat reclining angle.

- 改變肩帶穿孔位置，請參閱第26頁“肩帶安裝方法”確實牢固地安裝。
To adjust the shoulder belt insert outlet position, please refer to pg. 26 to be sure to tightly attach the seat belt.

- 長度調節和安全插扣脫卸時，請參閱第25頁“安全插扣安裝方法”確實牢固地安裝。
Make sure to attach the insert plastics to the waist belt after adjusting. Refer to [Attaching to the insert plastics](p.25)


- 不完全地安裝，使用中可能有安全帶鬆脫的危險。
Seat belt may get detached accidentally if not installed properly.

- 在插扣片難於拆除的情況下，請輪流按下安全帶扣的左右，先拆除一邊的插扣片再拆除另一邊。
When find it difficult to release the insert plastic, please alternatively press the left and right side of the buckle, then release the insert plastic one by one.

安全帶調節方法 Adjusting the seat belt

腰帶長度調節方法 Adjusting the length of waist belt




插扣片上的腰帶穿孔
Slots on the insert plastic

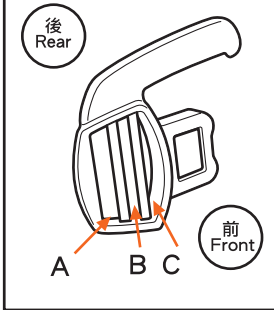

1. 從插扣的背面把腰帶穿出
A 孔。
Pull the waist belt from the rear side to the front through outlet (A).

2. 把腰帶左右拉動, 以調節腰帶長度。
Slide the waist belt to left or right to adjust its length.

3. 把腰帶重新從插扣正面穿回 A 孔到背面。
Put the waist belt from the front side to the rear through outlet (A).

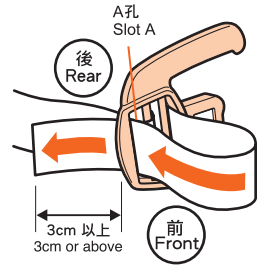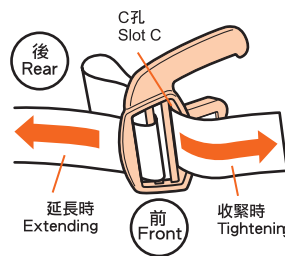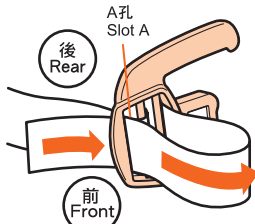

遇到問題 Encounter any problems

對安全帶調節的標準不明白
Having questions in adjusting the seat belt

→ 在孩子和安全帶間, 以能伸進大人手指的第二關節的間隙為準。
There should be space which can accommodate the length of adult's 2nd joint of finger.

警告 WARNING

長度調節後, 請強力拉動安全帶扣以確認安全帶沒有鬆脫。
Please strongly pull the buckle to ensure the safety belt is secured.


腰帶的長度調節後, 腰帶的末端必須保留 3cm 以上。
Make sure to leave at least 3cm at the waist belt end.

中央帶長度的調節方法 Adjusting the crotch belt

1 中央帶長度調節時, 首先拉出想調節長度的帶長 1。
Pull out the length needed to adjust to direction 1.

2 加長時, 拉動安全帶扣 2。
Pull toward direction 2 to extend the crotch belt.

3 縮短時, 拉動中央帶端部 3。
Pull toward direction 3 to tighten the crotch belt.

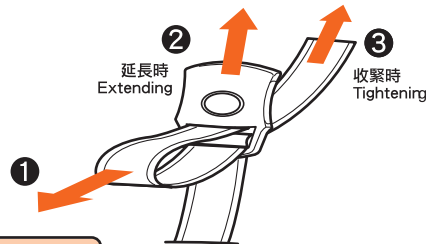

中央帶是不能被拆除的。
Crotch belt is not detachable.

注意 CAUTION


請於安全帶扣的一方調節長度。
Please adjust the length at the direction of the buckle.

肩帶長度的調節方法 Adjusting the shoulder belt

1 肩帶長度調節時, 首先拉出想調節長度的帶長 1。
To adjust the shoulder belts, 1 pull out the portion needed to be adjusted.

2 加長時, 向 2 的方向拉動肩帶
Pull to direction 2 to extend.

3 縮短時, 向 3 的方向拉動肩帶
Direction 3 to shorten the shoulder belts.

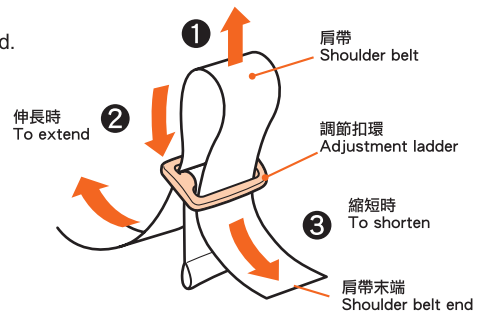

調節扣環不能從肩帶拆下。
Adjustment ladder cannot be detached from the shoulder belts.

靠背調節方法 Adjusting the seat angle

警告 WARNING

- 有孩子乘坐時調節靠背角度，靠背角度加大時，必須把肩帶鬆弛後再進行調節
Loose the shoulder belts before lowering the seat angle with a child seated.
- 靠背角度調節後，必須重新調節安全帶長度以貼合孩子的身體
Adjust the length of seat belt properly after change of the seat angle.
- 調節靠背角度時，請注意周圍沒有人（特別是小孩），以免夾傷手指。
Please be aware of those people around you (especially child) when adjusting the sitting angle to avoid pinching their fingers.

靠背使用要領 Backrest angle reference

- 一個月~ 頸部能自立
1 month ~ neck muscle developed
-> 靠背要調節至最平躺位置
Fully reclined seat
- 頸部能自立~能單獨坐立時~
Neck muscle developed ~ able to sit without aid
-> 靠背要調節至最平躺位置和中間位置之間
Fully reclined ~ partially reclined
- 能單獨坐立時
Able to sit without aid
-> 靠背要調節至最平躺位置和最直立位置之間
Fully reclined ~ upright angle

注意 CAUTION

- 不要一邊推行推車，一邊調節靠背角度，非常危險
It is extremely dangerous to adjust the seat angle when pushing the stroller. Do stop the stroller first before operation.
- 有孩子乘坐時，不要突然改變靠背角度，操作要十分注意
Do not suddenly change the seat angle while a child is seated.
- 有孩子乘坐時，靠背角度要調大時，操作者的另一個手要支撐一下孩子的身體重量
Support the backrest with the other hand when lowering the seat angle with a child seated.
- 還不能單獨坐立的孩子請使用最平躺位置到中間位置之間的靠背角度
Use most reclined angle before the baby can sit straight by itself.

遇到問題? Encounter problems?

在靠背調節到平躺位置時，感覺座墊非常狹窄
The backrest seems to become narrow in the fully reclined mode.

只限於孩子能獨自坐立時，把靠背角度調整
Only when the child to be able to sit without aid, should the backrest to be partially reclined.
→



調節靠背角度 Reclining the backrest

※ 有孩子乘坐時調節靠背角度，靠背角度加大時，必須把肩帶鬆弛後再進行調節。
While the child is carried in the stroller, the user should loosen the shoulder belt before reclining the backrest.

※ 有孩子乘坐時，靠背角度要調大時，操作者的另一隻手要支撐一下孩子的身體重量。
To recline the backrest while the child is carried in the stroller, the user should support the backrest with one hand.

1. 調底座席角度時，先以單手支撐著靠背。
Support the backrest with one hand before reclining the backrest.

2. 擋頭部自動升起
The headrest will be lifted automatically after the backrest is reclined.
(movable headguard)

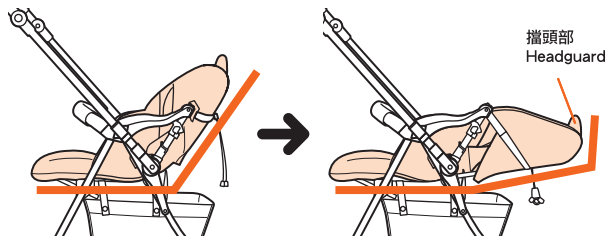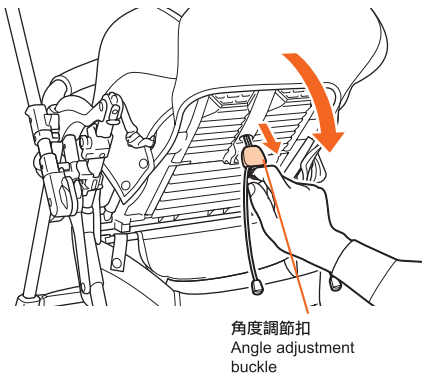


如果能獨自坐立的孩子頭部已碰到擋頭時，平躺時肯定不太舒服。請將靠背調節到擋頭未升起的位置。
For the child who is able to sit without aid, and they found it uncomfortable after fully reclined because the child's head reaches the headrest, please adjust the backrest up to a position that fits the baby.



調高座席角度時 Lifting the backrest

如圖般將角度調節帶往箭咀方向拉。
Pull the angle adjustment strings to the illustrated direction.

幼兒靠在椅背上時角度是不能調高的。
The backrest cannot be lifted while the child is leaning against the backrest.

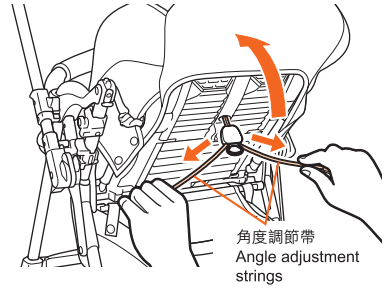

操作者一手拿著角度調節帶，另一隻手將靠背調節器滑向前方能調高靠背角度。
Grab the adjustment strings (in bundle) by one hand, slide the angle adjustment buckle to the front with another to lift up the backrest.

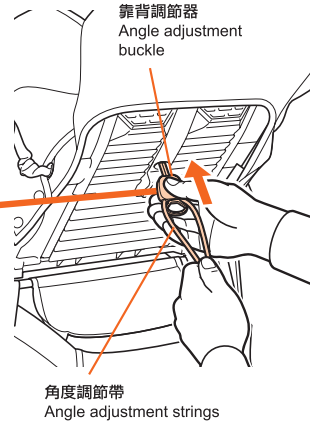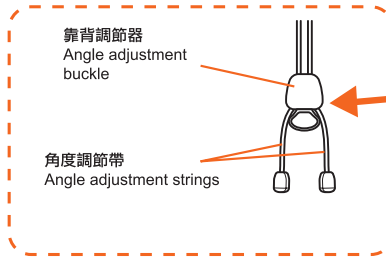





遇到問題? Encounter problems?

調節靠背時操作困難
Find it difficult to operate the reclining function.

請按以下程序將調節帶伸直。
Please follow below steps to straighten it.

調節帶出現扭曲的情況。
The reclining belt may be twisted.

- ① 將靠背調至最低位置。
Recline the backrest to the most reclined position.
- ② 在調節帶安裝部的中心將調節帶往拆除的方向扭回。
Turn the reclining belt to the removing direction at the center of the belt attachment guide.

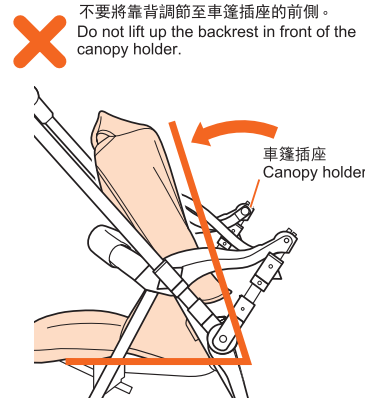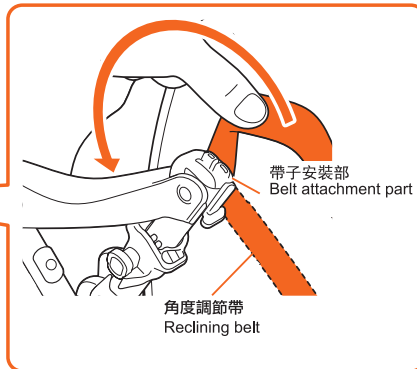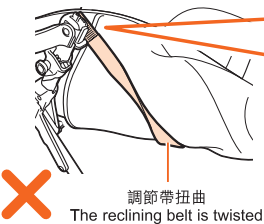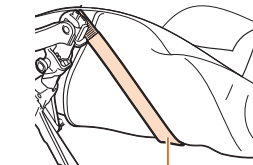

折合手推車 Folding the baby stroller

警告 WARNING

- 折疊手推車時，請注意周圍沒有人(特別是小孩)，以免夾傷手指。
Please be aware of those people around you (especially children) when folding stroller to avoid pinching their fingers.


注意 CAUTION

- 收起手推車後必須鎖好扶手上的安全鎖。除開關手推車之外請勿接觸安全鎖。
Make sure to lock the safety lock after folding up the baby stroller and keep clear from it.
- 按開關摺前請先解除安全鎖。錯誤操作可能損壞零件。
Make sure to release the lock before opening the stroller.
- 感覺有異物卡住時，請勿強行折疊，以免造成損壞。應先打開手推車，確認後再操作。
When feel jammed, please do not forcibly fold the stroller to prevent from any damage. You should re-open the stroller to check and operate again.
- 收起手推車前請先確認盛物籃內的物品已取出。
Make sure the basket is empty before folding up the stroller.
- 收折前請先確認車篷已經完全收起，以免引致組件損壞。
Make sure the canopy is completely folded up before folding the stroller to avoid damage of the parts.


- 即使安裝了車篷，推車也可以被折疊。折疊時，必須先折疊車篷，並收擺在後側。
It is not necessary to detach the canopy before folding the stroller. You just need to fold the canopy backward before folding.

- 在折疊手推車前，請先解除轉向輪鎖(共4處)。
Please release all swivel wheel locks(4pcs) before folding the stroller.


-
1. 把手杆回復到原來位置。
Return the handle grip to straight position.
 2. 換向把手到正面推行的位置(推把換向請參閱第9頁)。
Handle position should be in forward facing position (refer to p.9)
 3. 定向鎖定轉向輪。
這時，如圖把轉向輪方向轉到內側。
Lock the swivel wheel lock as illustrated position.

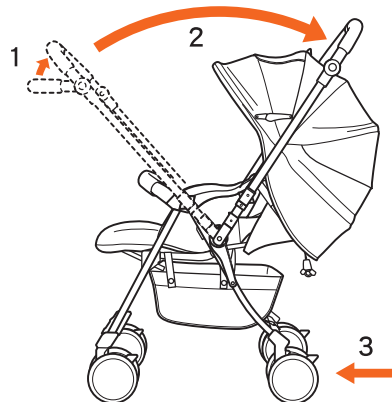


-
2. 1. 將靠背提起。
{靠背使用方法}請參閱第19頁。
Lift up the backrest. (refer to P.19)
 2. 將車篷完全地收起。
{車篷使用方法}請參閱第13頁。
Fold the canopy completely. (refer to P.13)

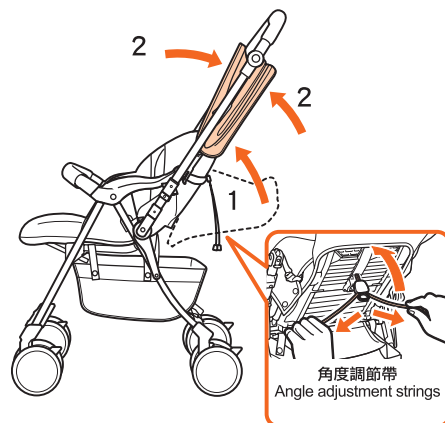

3. 依箭咀方向解除安全鎖。
Release the safety lock in the demonstrated direction.

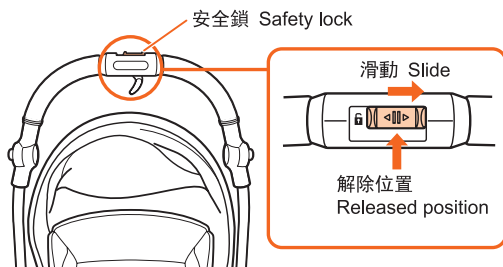

4. 一邊握住折疊按鈕，一邊提起推把杆，然後按下推把。推車被折疊起來。
Grip the folding lever and slightly lift up the handle, then press down the handle as illustration to fold the stroller.

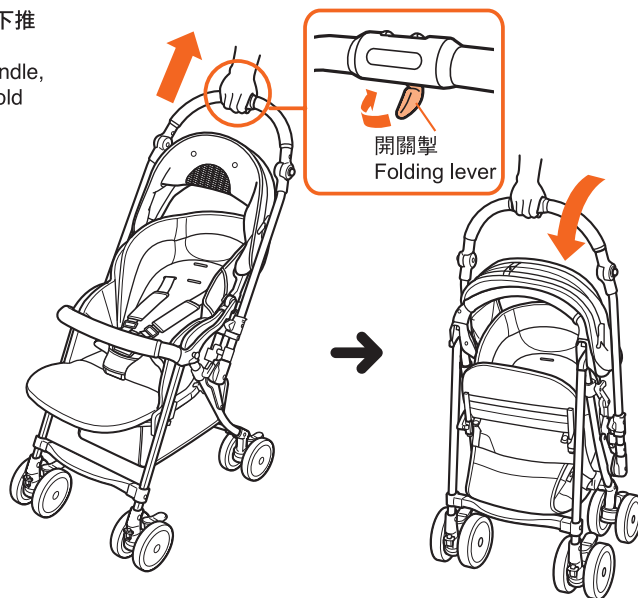


部品的裝拆方法 Installing and detaching parts


車篷的裝拆方法 Installing and detaching the canopy

安裝車篷 To install the canopy

1. 把把手置於對面位置
詳見第9頁「轉換把手方向」
Switch the handle to face rear.
Refer to P.9 "Reversing the handle"
2. 詳見第18頁的「靠背調節方法」的內容
Recline the backrest to the lowest angle.
Refer to P.18 Adjusting the seat angle.

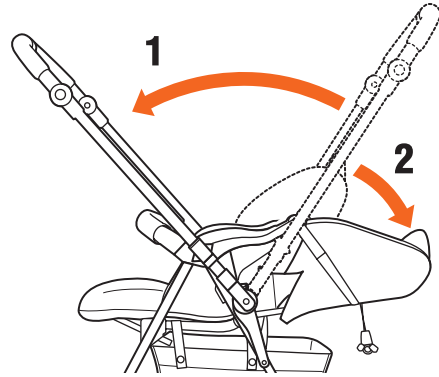


3. 確認車篷前後方向，然後將車篷插杆插進車身上插座之中。
Place the canopy facing the proper direction and plug the canopy joint into the canopy holder.

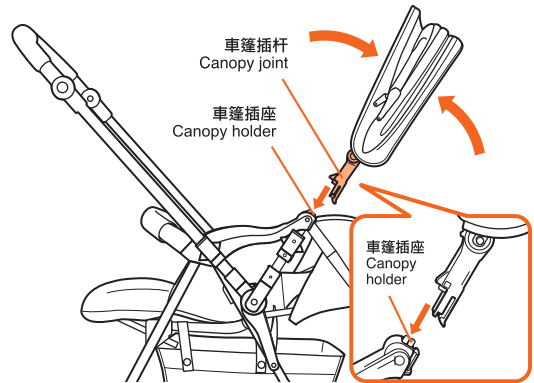


拆除方法 To detach the canopy

將插座下方從末端方向拉著插杆末端，慢慢將車篷拔出。
Pull out the canopy joint and gradually pull up the canopy away from the holder.

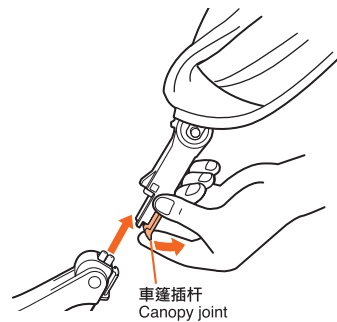

拆除護欄套 Detaching the front guard cover


1. 按下護欄按鈕，將護欄開放。
Press and hold on the front guard buttons and release the front guard.
2. 從護欄上取出護欄套。
Detach the front guard cover from the front guard.

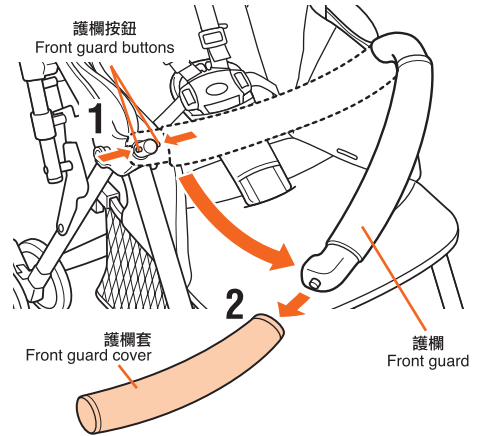

讓幼兒使用手推車時，建議裝上護欄套使用。
It is recommended to attach front guard cover to use.


中央帶套安裝方法 Attaching the crotch belt cover

- 中央帶穿過中央帶套，拉出安全帶扣。
Pull the crotch belt through crotch belt cover, pull out the buckle button.

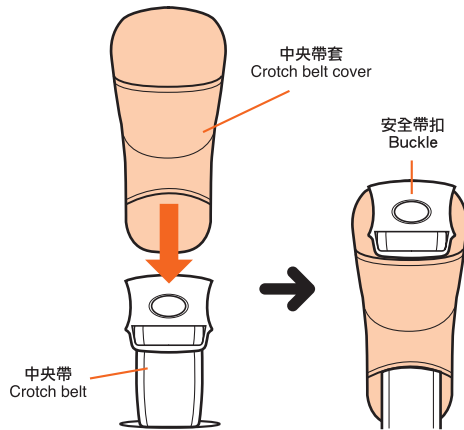

肩帶套安裝方法 Attaching the shoulder belt cover


1. 把插扣從肩帶的掛鉤內脫開。
Remove the shoulder belts from the shoulder belt hooks.
2. 確認肩帶的正反面，從肩帶套內穿過。(請確認肩帶在肩帶套內不能有扭轉。)
To recognize the front and back side of the shoulder belt and then pull the shoulder belt through the shoulder belt cover. (please make sure the shoulder belt is not twisted inside the shoulder belt cover).

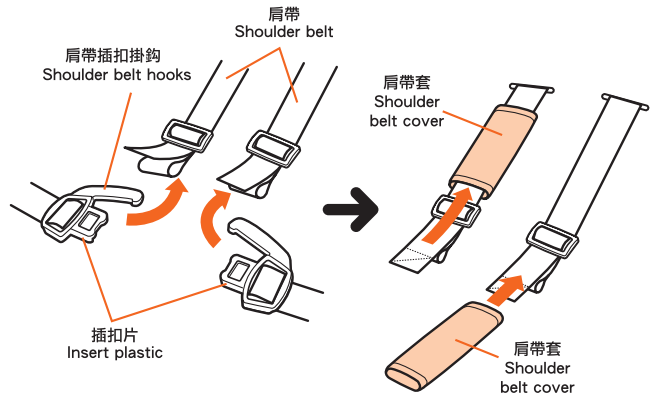

安裝盛物籃 Installing the basket

⚠ 注意 CAUTION

- 不要擺放超過重量的物品，可能造成損壞。
Do not load more than the maximum loading into the basket to avoid damage.
- 請勿盛載太尖或太大的東西，可能造成盛物籃損壞。
Do not put things that are too sharp or too large into the basket since it may cause damage to the basket.
- 收起手推車前，請先將盛物籃內的東西拿走。
Remove all things from the basket before folding up the stroller.

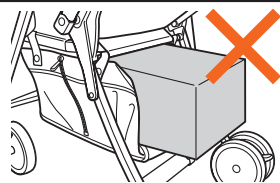

※ 物件擺放


To accommodate stuff

- 盡可能在盛物籃底均勻擺放重量。

Distribute load evenly inside the basket.

- 放拿物品時，可拉開盛物籃側面的拉鍊，比較方便。

It is recommended to pick out the things through the side zipper of the basket.

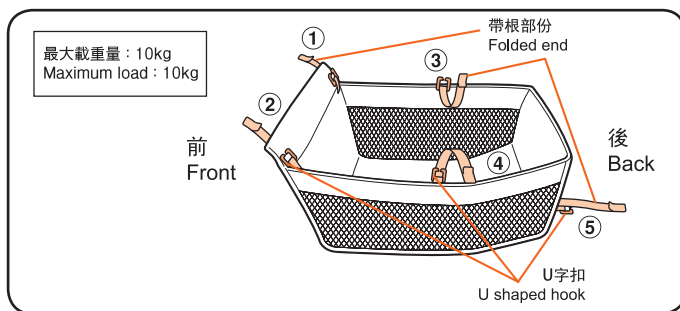

1. 用儲物籃前部的2處固定帶，繞過車體下的鋁質車架後，連接固定扣。


Fasten the belt buttons at the front side of the basket to left and right side of the aluminum stroller frame.

2. 用儲物籃中部的2處固定帶，繞過車體下的鋁質車架後，連接固定扣。

Fasten the belt buttons at the back side of the basket through the back side of aluminum stroller frame as shown in diagram 2.

3. 用儲物籃底部的固定帶穿過後腳踏板上的孔，連接固定扣。

Fasten the belt button through the hole of footplate as shown in diagram 3.

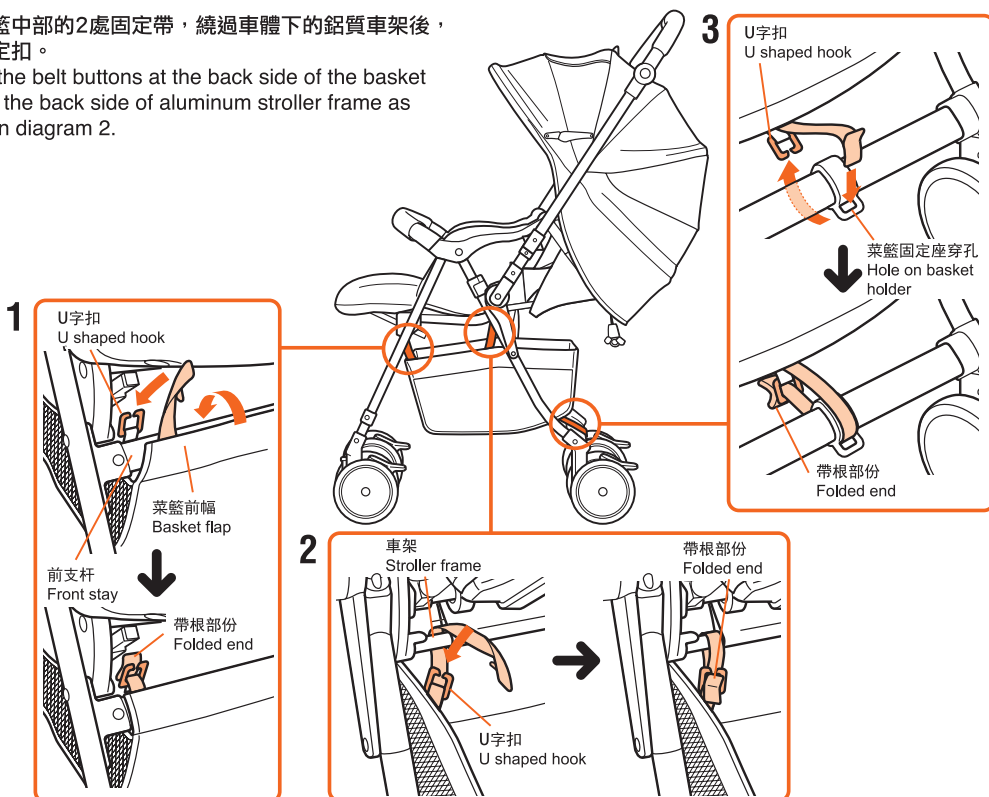


安全帶安裝方法 Attaching the seat belt

安全插扣的安裝方法 Attaching the insert plastics

※ 在座墊上安裝腰帶方法請參閱本頁下半部份的1,2點。
Refer to Pt.1 and Pt.2 on the 2nd half of this page for [Attaching waist belt to the seat cushion].


插扣片上的腰帶穿孔
Slots on the insert plastic

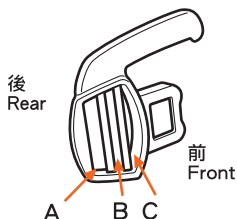

1. 把腰帶穿過(A)孔，這時腰帶是從插扣的背面穿向正面的。
Pull the waist belt from rear side of insert plastic to the front through slot (A).
2. 將在外側的腰帶從(B)孔穿回內側。
Put the waist belt from the front side of the insert plastic to the rear through slot (B).
3. 將在內側的腰帶從(C)孔穿往外側。
Put the waist belt from the rear side of the insert plastic to the front through slot (C).
4. 再將腰帶由插扣外側，從(A)孔穿回內側。(腰帶將穿過(A)孔兩次，疊在一起。)
Put the waist belt from the front side of the insert plastic to the rear through slot (A). (Waist belt should pass through slot (A) 2 times.)

警告 WARNING

- 如插扣片未完全安裝好，安全帶有可能於使用時意外鬆脫。請於使用前確認插扣片和腰帶已經牢固裝好。
Insecure insert plastics may get detached accidentally when in use. Make sure the insert plastics are secured before use.

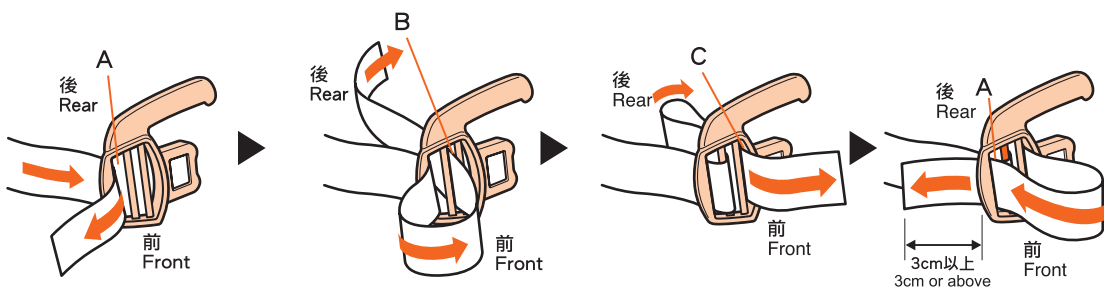


※ 注意腰帶末端應留下3cm以上之長度。
Make sure to leave at least 3cm at the belt end.

腰帶安裝方法 Attaching the waist belt

1. 先解除腰帶一方的插扣片。
Remove one of insert plastics from the waist belt.
2. 將腰帶的內側向上通過座板上兩處腰帶穿孔。
Pull the waist belt through the 2 slits on the base board with the reverse side (waist belt) facing up.
3. 重新安裝插扣片。
Re-attach the insert plastic.

詳細請參考上半頁的插扣片的安裝方法。
Please refer to the upper part of this page for attaching the insert plastic.

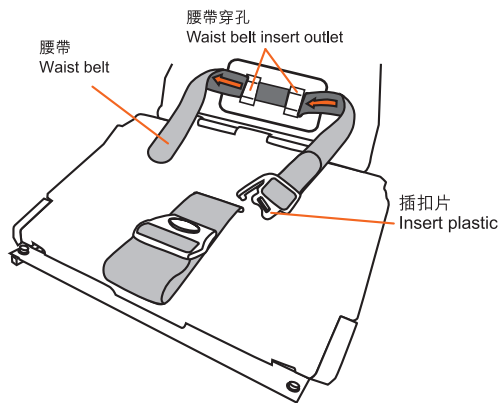


安裝腰帶時，必須要穿過(共2處)腰帶穿孔。
Make sure to pull through all waist belt insert outlets (total 2 places) when attaching the waist belt.

肩帶安裝方法 Attaching the shoulder belt

關於將肩帶安裝在座墊上的方法請參考第29頁。

Please refer to P.29 for attaching the shoulder belt to the seat cushion.


1. 將肩帶穿過背板的兩處肩帶穿孔。
Pull the shoulder belt through the insert outlets on the base board (total 2 places).

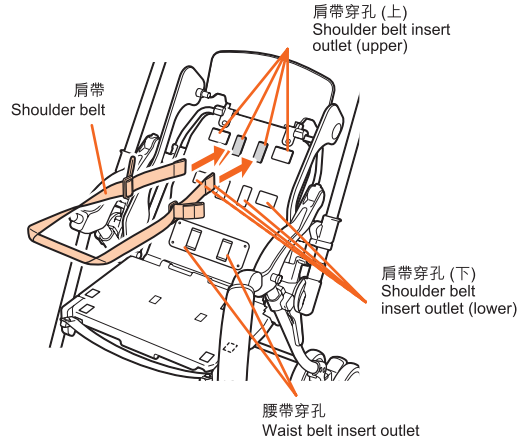

2. 從背板的兩處外側的肩帶穿孔拉出肩帶。
Pull the shoulder belt through the 2 insert outlets (near the edge).




如果調節扣環比較難於通過肩帶穿孔時，先將末端稍作扭動，可使扣環較易拉出。
If find it difficult to pull out the adjustment ladder, please twist the belt end a little bit and then it would become easier to slide out.

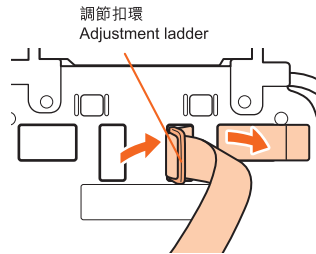

3. 用力拉動肩帶直至完全將肩帶拉出。
Strongly pull the shoulder belt until it is completely pulled out.



- 當安裝肩帶時，必須通過同等高度的肩帶穿孔(共4處)。
While attaching the shoulder belt, the shoulder belt should be pulled through all insert outlets of same height on the base board. (total 4 places)
- 在座墊及座板上使用的肩帶穿孔高度要一致
(如在坐板上使用上肩帶穿孔，座墊也要使用同樣高度的肩帶穿孔)
The used insert outlet on the base board and seat cushion should be matched. (e.g. upper insert outlet of base board should be matched with upper insert outlet of the seat cushion.)
- 對於要經常調節靠背的月齡，請使用較低的肩帶穿孔。
Use the lower shoulder belt insert outlets for child who may need frequent use of reclined seat.

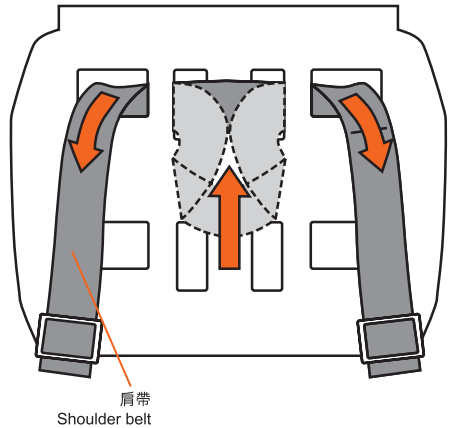

座墊拆除，安裝方法 Installing and detaching the seat cushion

警告 WARNING

- 不要在未裝有座墊的推車上乘坐孩子。可能有夾傷孩子手和腳的危險間隙。
Do not use a stroller without a seat cushion properly attached. Otherwise the child's hands or feet may be pinched in the gaps on stroller.
- 請不要使用破損或脫線的座墊，座墊不能發揮原有的保護作用或孩子可能吞食其中的填充棉。
Do not use seat cushion on which rift is found. Otherwise the seat cushion may not function as designed or the child may have chance to swallow the material inside of the cushion.
- 安裝座墊時，請確實連接好固定扣。不完全安裝可能導致孩子受傷或物件損壞。
Make sure all zippers or snaps are secured before use. Otherwise accident or damage to stroller may be caused.


※ 關於座墊 About the seat cushion

孩子的服裝或鞋子上有魔術貼時，請注意不要與座墊上的魔術貼相粘結。粘結網孔織物有可能拉傷表面。
Beware of the child's clothes or shoes if equipped with Velcro tape. Velcro tape may scratch the seat surface.

拆卸方法 Detaching the seat cushion


1. 1 按下安全帶扣脫開按鈕，脫出插扣。
Press on the buckle button to release the insert plastics.

- 2 把中央帶從中央帶套抽出。
Detach crotch belt cover from crotch belt.

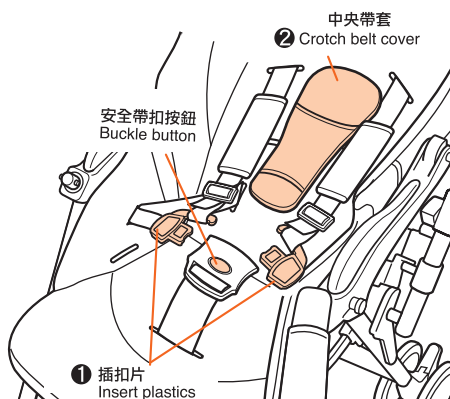


3. 從座墊前端的管子上解除固定扣帶(2處)，從腿部支撐杆上解開固定扣，然後拆下座墊。
Release the snap (2 places) in the inner side of the seat cushion and release (2 places) on the leg support bar then user can start to remove the seat cushion.

Release the snap (2 places) in the inner side of the seat cushion and release (2 places) on the leg support bar then user can start to remove the seat cushion.

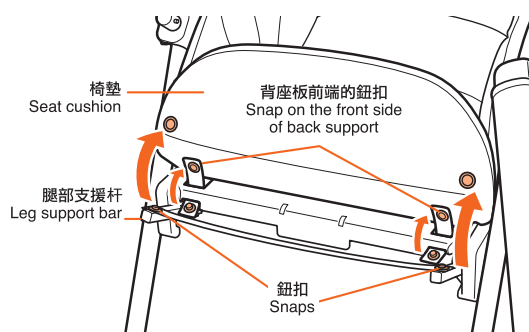


2. 1 把插扣上的肩帶掛鉤脫出，脫離肩帶。
Remove the shoulder belts from the shoulder belt hooks.


- 2 拆除肩帶套。
Remove the shoulder belt cover.

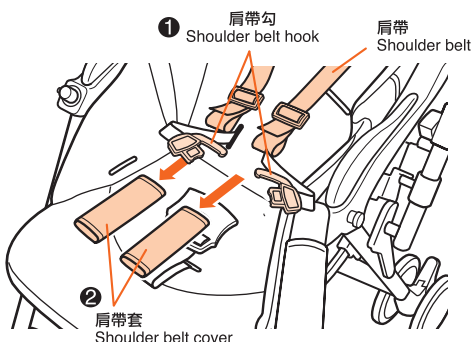


4. 從座墊上穿出中央帶。
Release the crotch belt from the seat cushion.

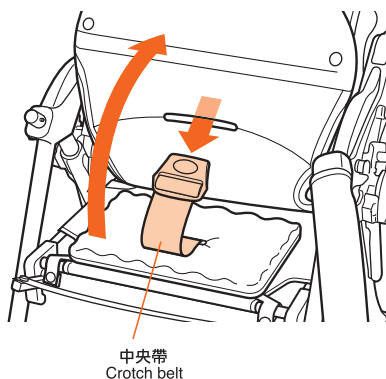


5. 解除座板裏側的鈕扣，再拉出安裝帶子。
Release the snaps underneath (base board) and pull out the installation belt.

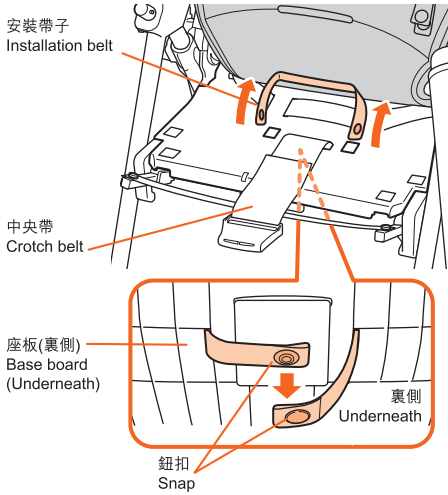


7. 解除安裝在背管上帶子的2處鈕扣。
Release the snaps (total 2) of the belt which is secured to the rear pipe.

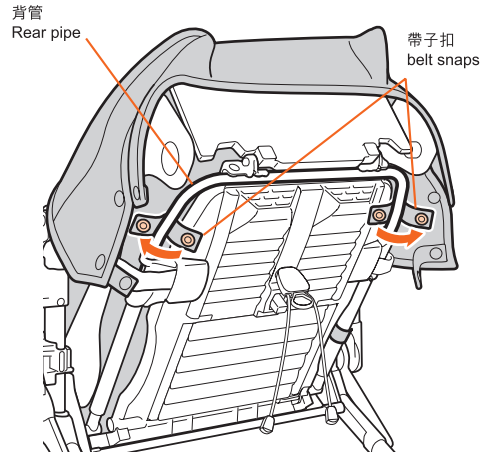

6. 解除座墊扣在背板兩側的鈕扣(共4處)。
Release the left and right snaps (total 4) which are secured to the base board.

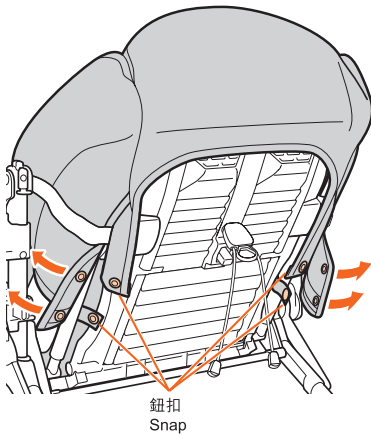

8. 將底座左右兩側的橡皮圈鈕扣(共2個)解開。將腰帶和肩帶抽出，然後將活動椅墊從底座取出。
Release left and right snaps (total 2) on elastic ring from base seat. Remove waist belt and shoulder belt and then remove seat cushion from base seat.

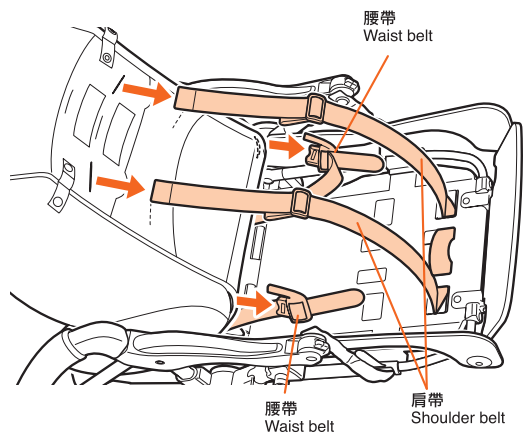


安裝方法 Installing the seat cushion

1. ① 將腰帶穿過手推車背面底座上的腰帶穿孔，同時亦將肩帶穿過底座和椅墊上的肩帶穿孔。

Pull the waist belt through the waist belt insert outlets on the base seat and also pull the shoulder belt through the shoulder belt insert outlet on the base seat.

- ② 將腰帶安裝到插扣片上。


Attach the waist belt to the insert plastic.

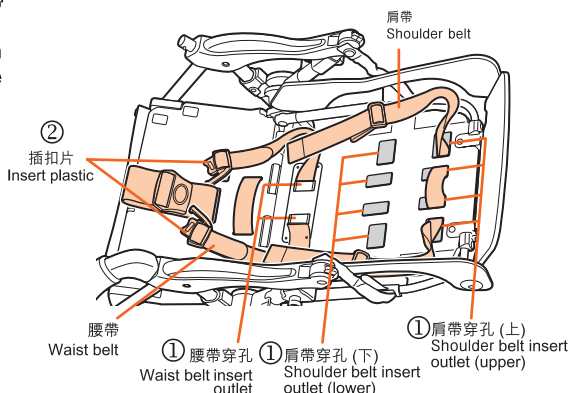

關於腰帶和插扣片的安裝方法，請參考第25頁。
關於肩帶的安裝方法，請參考第26頁。
Please refer to P.25 for attaching the waist belt and insert plastic.
Please refer to P. 26 for attaching the shoulder belt.

2. 將肩帶、腰帶通過穿孔抽出椅墊座面。


Pull out the shoulder belts and the waist belt through the insert outlets of shoulder belt and waist belt of the seat cushion.

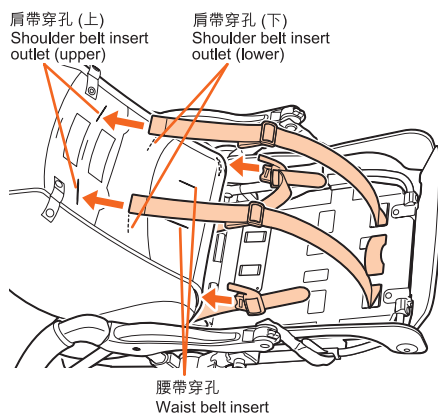

- 當安裝肩帶時，必須通過同等高度的肩帶穿孔 (共4處)。
While attaching the shoulder belt, the shoulder belt should be pulled through all insert outlets of same height on the base board. (total 4 places)


- 在座墊及座板上使用的肩帶穿孔高度要一致 (如在座板上使用上肩帶穿孔，座墊也要使用同樣高度的肩帶穿孔)
The used insert outlet on the base board and seat cushion should be matched. (e.g. upper insert outlet of base board should be matched with upper insert outlet of the seat cushion.)

- 對於要經常調節靠背的月齡，請使用較低的肩帶穿孔。
Use the lower shoulder belt insert outlets for child who may need frequent use of reclined seat.

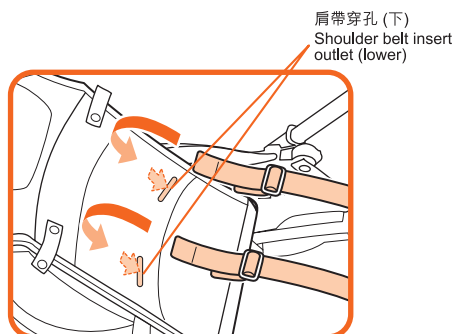


穿過肩帶穿孔 (下) 時
Pull the shoulder belt through the lower shoulder belt insert outlet

3. 將背板上的帶扣(共2處)扣在背管上。
Secure the belt snaps of the base board to the rear pipe (total 2 places).

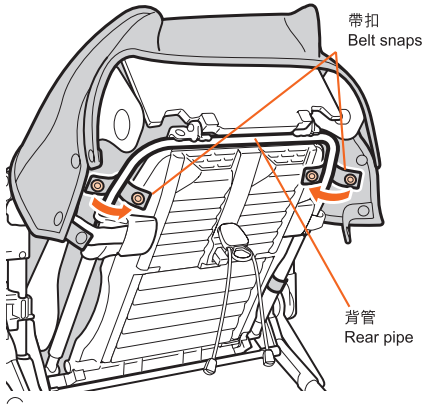


4. 將座墊兩側的鈕扣扣在背板上。(共4處)
Fasten the 4 snaps of the seat cushion to the base board.

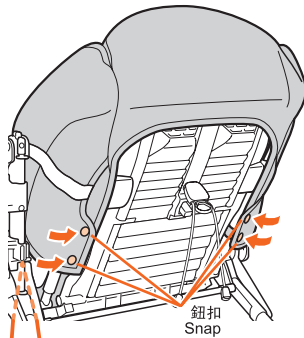


座墊側面的安裝方法
The installation of the seat cushion on each side.


調節帶
Reclining belt

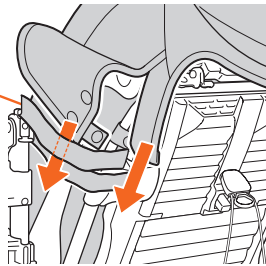


鈕扣
Snap

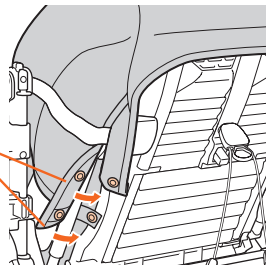

5. 將安裝帶子穿過底座的穿孔然後扣上鈕扣。
Pull the installation belt through the insert outlet on the base board and fasten the snaps underneath.

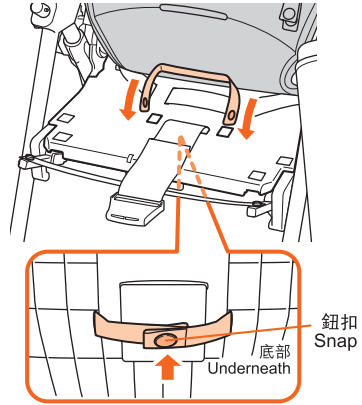


6. 把中央帶從座墊上穿出。
Pull the crotch belt out of the seat surface.

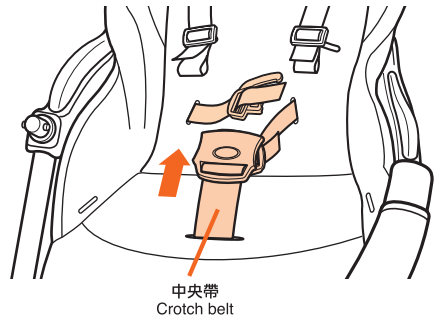


- 7. 1** 分清插扣的左右，安裝上腰帶。
Firstly, user should confirm left and right of the insert plastic, then attach the insert plastic to the waist belt.

- 2** 在肩帶上安裝肩帶套。
To attach the shoulder belt cover to the shoulder belt.

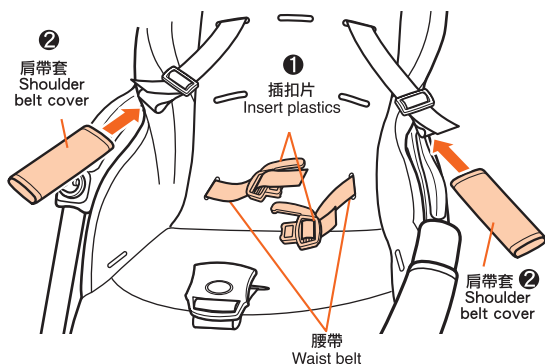


- 8.** 將肩帶扣在插扣片的肩帶勾（左右）上。
Secure the shoulder belts to the shoulder belt hooks on the insert plastics (left and right).

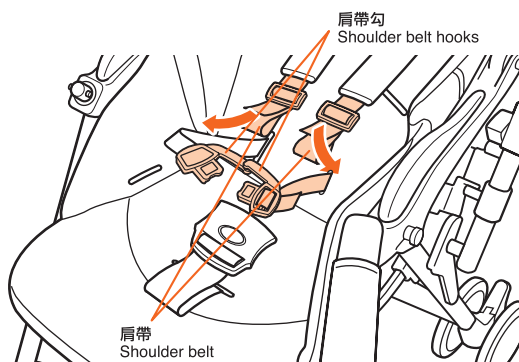


- 9. 1** 從中央帶套中穿出中央帶和安全帶扣。
Pull out the buckle through the crotch belt cover.

- 2** 將插扣片插進中央的安全帶扣內。
Fasten the insert plastics into the centre buckle.

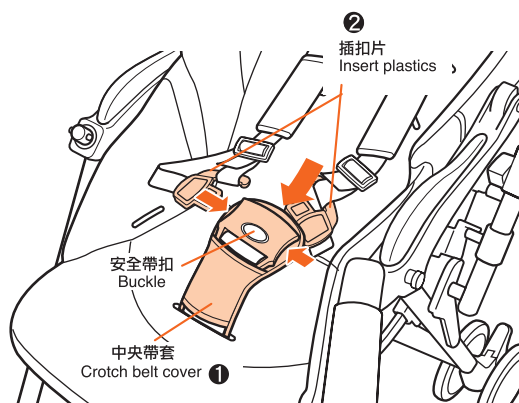

- 10.** 在座墊前端的管子上，扣上固定扣(2處)，腿部支援杆上扣上固定扣(2處)，座墊前端即與底墊相連接固定完畢。
Secure the 2 snaps on the edge of seat cushion then secure the 2 snaps on the leg support bars.

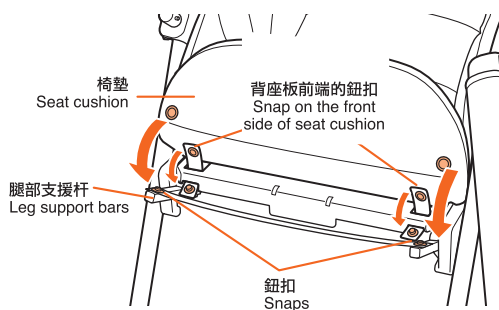

腳套的安裝及拆除方法 Attaching and detaching footcover

⚠ 注意 CAUTION

- 如果孩子的腳已頂住腳套內部時，請停止使用。
適用於孩子的身高約在80cm以內。
If the child's feet already reach the interior end, please stop using accordingly. It would be fit for child whose height is below 80cm.
- 必須在靠背平躺位置，前扶手關閉的狀態時使用。
The foot-cover should be used when the seat is fully reclined and the front guard is closed.
- 腳套並沒有防止孩子滑落和站起的作用，所以必須使用安全帶。
The foot-cover is not designed to prevent child from standing up or slipping off, thus the safety belt must be used.
- 請不要在腳套上放置物品，因不安定可能會落下。
Please don't put things on the foot-cover as this will result in foot-cover being slipped off due to the weight burden.
- 不要提起腳套搬運推車，腳套可能鬆脫。
Please do not lift the stroller by the foot-cover, this will lead to the accidental release of the foot-cover.

腳套用於冬季保持孩子腳部的溫度


The foot-cover is used to keep the child's feet warm in winter.

⊗ 由於腳套在包裝時不是安裝在車上，故此使用前請根據說明書正確地安裝並確認六處固定扣已固定。


Since the foot-cover is not assembled on the stroller, please make sure to attach the foot-cover according to the user manual and confirm 6 snaps are completely secured before use.

安裝方法 To attach the foot-cover


1. 提起座墊前端，鬆開座墊和腿部支撐杆上的固定扣。
不使用腿部支撐杆時，固定扣是鬆開的。
Lift the front part of the seat cushion and release the snaps on the support bars from seat cushion.
When the support bars are not in use, the snaps should be released.

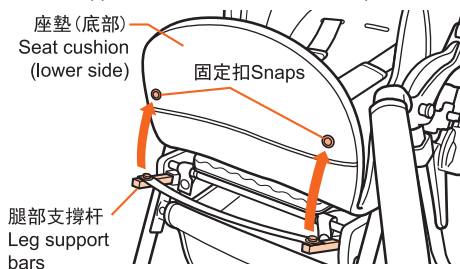

2. 用腳套底部的固定扣(2處)與腿部支撐杆上的固定扣相連接魔術貼卷過腿部支撐杆連接帶。
如果腿部支撐杆在縮回狀態，請拉出腿部支撐杆把座墊前端放入套中。
Snap the footcover onto the leg support bars(both left and right) and then secure the velcro tape through the leg support bar connection belt. If the leg support bars are stored under the seat, pull out and put the edge of the seat cushion into the foot-cover.

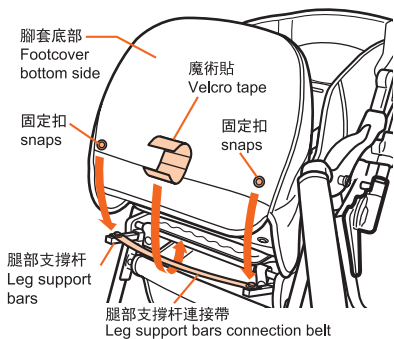


3. 把腳套側面的固定扣(4處)和座墊的固定扣連接固定。
Snap the foot-cover onto the seat cushion(total 4 places).

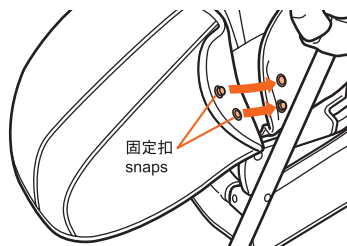

要點說明: Key point summary

- 腳套安裝在車上時，推車也可以折疊。
The stroller can be folded even with the foot-cover on.
- 推車打開時，腳套上可能有陷入和褶皺，請從內側用手整形。
When opening the stroller, there may be crease mark on the foot-cover, please reshape it by hand inwardly.
- 抱放孩子上車比較困難時，可如圖所示拆除前扶手，鬆開側面的固定扣，讓腳套向前倒伏。然而，當把孩子放在手推車後，便應重新扣上固定扣以及重新固定前扶手。
If user find it difficult to seat or unseat the baby, please open the front guard and then undo the snaps on the side so that the foot-cover will be leaning forward. However, after seating the baby in the stroller, please secure the snaps of foot-cover and re-attach the front guard again.

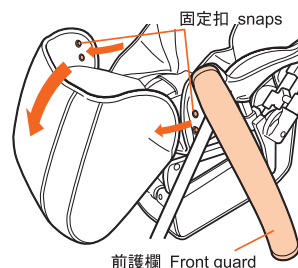

拆除方法 To detach the foot-cover

按安裝相反的順序拆除。

To follow the opposite procedure to detach the foot-cover.

腳套拆除後，如果使用腿部支撐杆的話，座墊和腿部支撐杆上的固定扣必須連接。

After having detached the foot-cover, if need to use the support bars, the user should snap the seat cushion onto the leg support bars.


懷抱型座墊的安裝方法 Installing the dacco cushion

⚠ 注意 CAUTION

- 使用護頭墊時，必須將Egg Shock α 墊安裝到護頭墊內使用。
Make sure to apply the Egg Shock α pad when using the head support.
 - 當手推車背為直立位置時，護頭墊可能會抵住幼兒頭部。此時應將護頭墊拆除。
Remove the head support to use when the child's head is too tight against it at an upright backrest.
 - 請勿使用有破損的保護墊，以免幼兒誤吞墊內的物料，而保護墊也可能失去原有保護功能。
Do not use support cushion on which any rift is found. Child may swallow the material inside and the cushion may have lost its protective functions.
- 請根據幼兒體形安裝懷抱型座墊。
Set the support cushion according to the child's body size.

護頭墊的安裝位置 Correct position of head support

護頭墊的護墊部份，應該剛剛抵幼兒頭頂。
The cushion pad of the head support should just touch at the child's neck

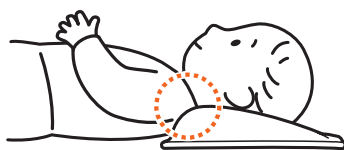

懷抱型座墊的參考安裝時期 Support cushion installation reference

	1個月 1 month	獨自乘坐前期(7個月) Starting to sit without aid	36個月 36 months
護頭墊 Head pad	← →		
Egg shock 墊 Egg shock pad	← → 放在護頭墊中使用 Attached in the head pad		← → 放在座墊中使用 Attached in the seat cushion
護背連臀墊 Body and hip support	← →		


※1 將Egg shock 墊放入椅墊上的口袋使用。
Put Egg shock into pocket on seat cushion to use.

※2 月齡只作參考，請依照幼兒體格判斷後使用。
Indicated age for reference only. Please apply according to child's body size.

護頭墊的安裝方法 Installing the head support

將護頭墊安裝活動椅墊上。
Attach head support to seat cushion.

將護頭墊上的魔术貼 **a**，穿過護頭墊穿孔（上下共兩處），然後貼在活動椅墊內側的魔术貼 **b**（上下共兩處）上。
Pull Velcro **a** on head support through head support insertion outlets (upper or lower) and secure it onto Velcro **b** (upper and lower) on inner side of seat cushion.

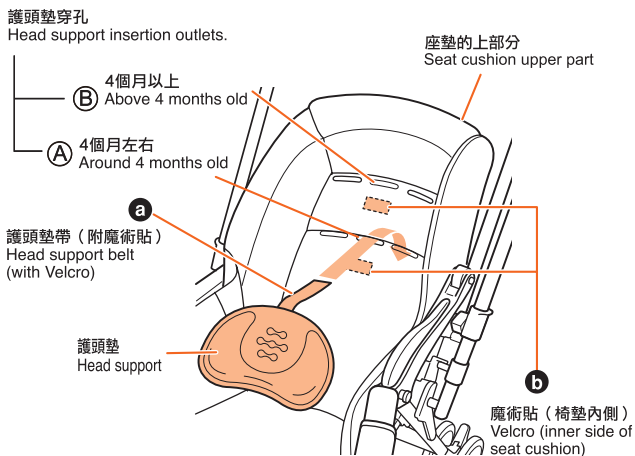

安裝護頭墊有困難時，可將活動椅墊上部的椅套翻開，然後看著椅墊內側安裝。
Open upper part of seat exposed for easier installation of head support.

有關護頭墊穿孔(a)(b)的參考

Reference for head support insertion outlets **A** **B**





- A** 大約供1個月至4個月的幼兒使用。
A for child from around 1 month to 4 months
- B** 大約供4個月至7個月的幼兒使用。
B for child from around 4 months to 7 months

護背連臀墊的安裝方法 Installing body and hip support

1. 將背部和臀部支援座面一方的固定帶，穿過椅墊側的帶穿孔，再將背面一方的固定帶，穿過椅墊側的帶穿孔。

Pull the seat front belts on the body & hip support through the insert outlets on the inner side of the detachable seat pad, and then the backrest belts on the body & hip support through the belt insert outlet on the seat cushion.

腰帶必須穿過護背墊連臀墊上的腰帶穿孔。
The waist belt should be pulled through the waist belt insert outlet on the body and hip support.

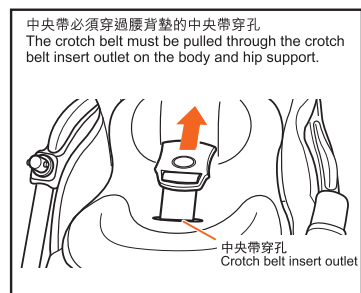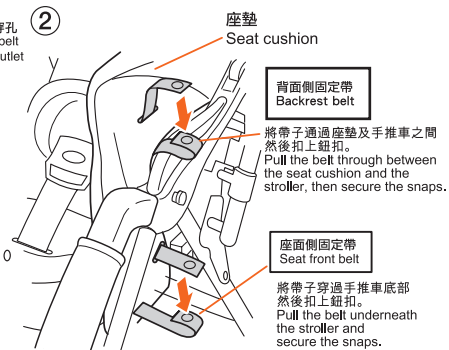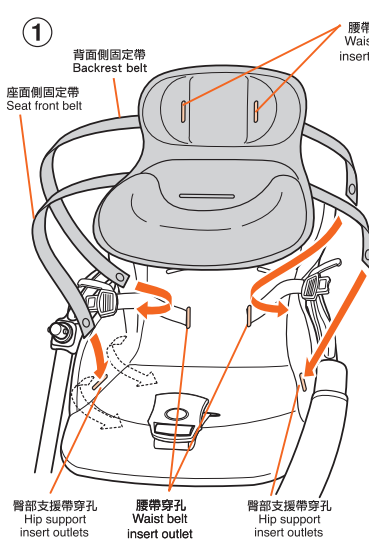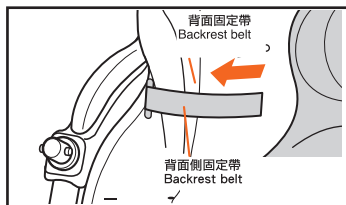

2. 在椅墊下方，將背部和臀部支援的固定帶兩端鈕扣扣上。(必須將椅墊上的中央帶從背部和臀部支援上的中央帶穿孔抽出座面)

Snap the 2 seat front belts together under the seat. (The crotch belt on the seat pad must be pulled through the crotch belt insert outlet on the hip support out to the seat surface.


不足三歲幼兒的體格有可能已不適合使用腰背墊，此時，請停止使用。
Please stop using the body and hip support if it does not fit your child's body size even it is under 3 years old.

使用Egg shock α 墊 To use with egg shock α pad

放進護頭墊內使用時 Putting into the head support to use

Egg shock α 墊可放進護頭墊或椅墊內，以保護幼兒免受行走中的震動影響。
Egg Shock α pad can be put into either the head support or seat cushion to protect the child from vibration when the stroller in motion.

從護頭墊後方放進去。
Insert from the rear side of the head support.

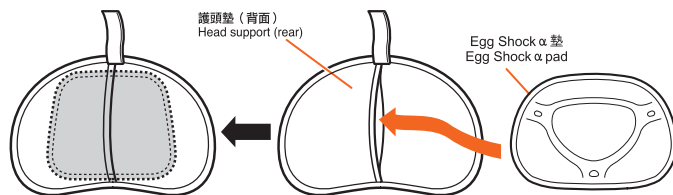

⚠ 注意 CAUTION


使用護頭墊時，請確保Egg Shock α 墊已放進護頭墊內。
Be sure to use Egg Shock α pad when using head support.

放進椅墊內使用時 Putting into the seat cushion to use

當幼兒的頭部抵住頭板時，將頭墊拆除，並將頭墊內的Egg Shock α 墊放進椅墊內使用。將椅墊頭靠背面的專用口袋打開放入Egg shock α 墊。

When the child's head reaches the headrest, please remove the head support. Remove the Eggshock α pad from head support.

Open the pocket at the back of seat cushion (upper part) and put the Eggshock α pad into it.

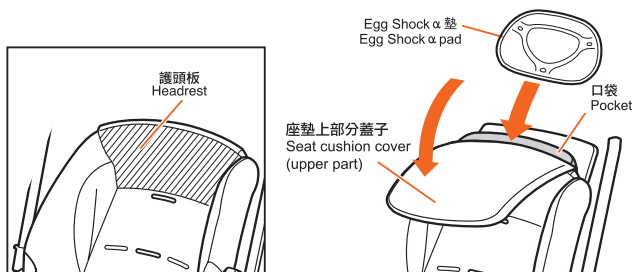


Egg shock 墊(座部用)的裝拆方法 Attaching and detaching the egg shock pad (seat part)


拆除方法 Detaching the egg shock pad(seat part)

1. 從座墊上穿出中央帶。
Release the crotch belt from the seat cushion.


※ 有關於座墊的拆除方法，請參考第27頁第三步驟。
Please refer to step 3 on page 27 for "Detaching the seat cushion".

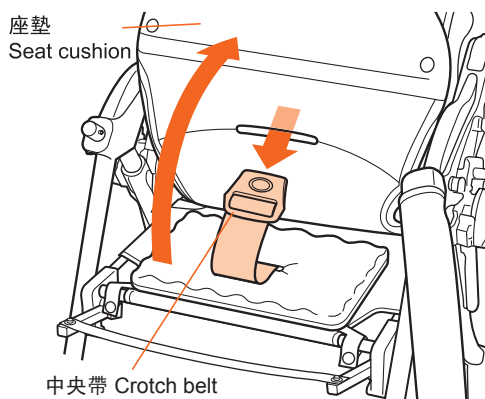

2. 解除Egg shock 墊(座部用)前部左右的帶扣。
Release the snap belt (left and right) of the egg shock pad (seat part).

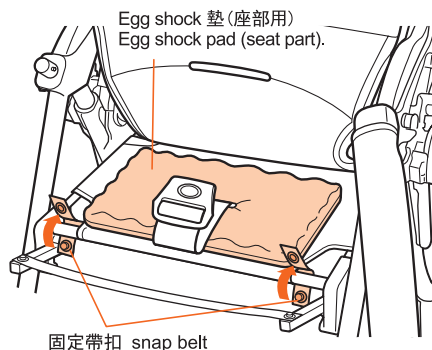

3. 將Egg shock 墊(座部用)從中央帶拉出。
Remove the Egg shock pad (seat part) from the crotch belt.

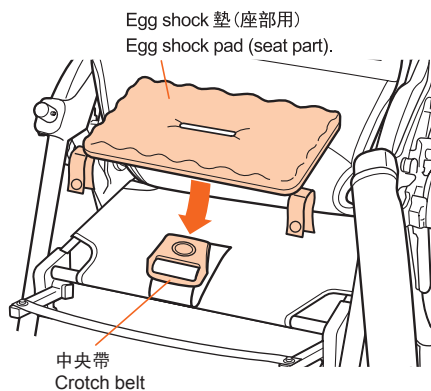

安裝方法 Attaching the Egg shock pad (seat part)

按拆除相反的順序安裝。
Follow the opposite procedure to attach the Egg shock pad(seat part).


日常保養方法 Maintenance

縫制品的洗滌方法 Washing the seat cushion

- 肩帶，腰帶，護欄套，中央帶墊，肩帶套，腳套的洗滌
Washing of the shoulder belt, the shoulder belt cover, front guard cover, waist belt, crotch belt cover and foot-cover.
- 水溫30度以下手洗。
Hand wash in water below 30°C.
- 不要使用洗衣機。
Do not use washing machine.
- 可以使用普通洗滌劑，但不要使用漂白劑或添加漂白劑的洗滌劑的洗滌劑。
Do not use bleach or detergent containing bleaching agent. Refer to the user guide of the detergent before washing.
- 不要長時間浸泡，短時間洗滌即可。否則可能有褪色現象。
Keep washing time short to avoid possible decolorization.
- 充分漂洗，輕柔脫水，整形後攤平晾乾。
Flat dry in shade area after washing.
- 不要使用乾燥機和乾洗機。
Do not use drying machine or dry cleaning.
- 洗滌前扶手護套時，不要用力搓洗。
Do not forcefully rub when washing the front guard cover.
- 充分漂洗，輕柔脫水，整形後攤平在陰涼處晾乾。
Gentle spinning after rinsing thoroughly. Straighten shape and lay on flat area for cool dry.
- 車篷，盛物籃的洗滌
Washing the canopy and basket
- 不要把車篷，儲物籃落水洗滌，用刷子或海綿沾取30度水溫的洗滌劑擦潔污垢。
Do not soak into the water. Use water below 30°C and use sponge or brush wipe off the dirt.
- 請小心被車篷上的膠件或盛物籃上鈕釦弄傷。
Be careful not to be hurt by the plastic parts on canopy and the snaps from basket.
- 用洗滌劑去除污垢後，用沾水的布或海綿擦去多餘的殘留洗滌劑。
After wipe off the dirt by detergent, use a cloth or sponge to wipe off the excess water and detergent.
- 乾燥過程中，用乾布擦去多餘水分，然後放於陰涼處晾乾。
Dry in shade area after wipe off water by dry cloth during the drying process.
- ※ 產品特性所致，有些顏色可能褪色。
Due to the characteristic of the product, the color may fade after numbers of washing.
- ※ 洗滌時，推薦使用以天然脂肪酸為基料不含螢光劑，漂白劑和氧化物的[康貝內衣洗滌劑]。另外，為更舒適使用，建議仔細地清洗。
It is recommended to use Combi detergent for underwear which is made of natural fatty acid as the ingredient and does not contain bleach and oxide. Furthermore, it is strongly recommended to wash thoroughly for better comfort.
- ※ 由於保管方式不同，有生霉的情況發生。仔細洗滌，後注意要保持清潔。
Always keep clean due to the condition of storage, the mildew may be generated.
- ※ 清洗座墊及護頭墊時，請先將Egg Shock α墊取出。
Please remove the Egg Shock α pad before cleaning the seat cushion and head support.

關於Egg Shock α墊 About the Egg Shock α pad

- Egg Shock 墊是不能清洗。
Egg Shock pad is non-washable.



有關車體的清潔 Cleaning the stroller body

⚠ 注意 CAUTION


- 只可使用中性的洗滌劑清潔車體否則可能使部件變質，老化和損壞。
Only use neutral detergent to clean the stroller body in order to avoid damage or ageing to the parts.

- 車輪，塑料部件以及金屬部件髒污時，用布沾取清水擦潔。髒污嚴重時，可用布沾取稀釋過的中性洗滌劑擦潔，然後用布沾取清水擦去殘留的洗滌劑。
Use a piece of damp cloth to clean wheels, plastic or metallic parts. For serious dirt, use diluted neutral detergent for cleaning.

加潤滑油 Adding lubricant

⚠ 注意 CAUTION


- 孩子接觸可能性比較大的前扶手，側扶手等處不要加潤滑油。
Make sure no oil or lubricant is left on parts such as front guard or armrest where baby may have chance to lick.
- 有雜音發出或有動作不靈活時，有必要加潤滑油時，必須只能加注少量的潤滑油。加潤滑油前，加油點首先必須要清除泥土和污垢。如果加潤滑油多，可能容易吸附灰塵，反而降低功能。
It is possible to add lubricant when the operation or movement of the baby stroller is found not smooth. Before adding the lubricant, please clear the mud and dirt. Do not, however, add to much lubricant as it may get dirt easily and cause malfunction.
- 以下地方請不要加注潤滑油。
Do not add lubricant on the following parts.

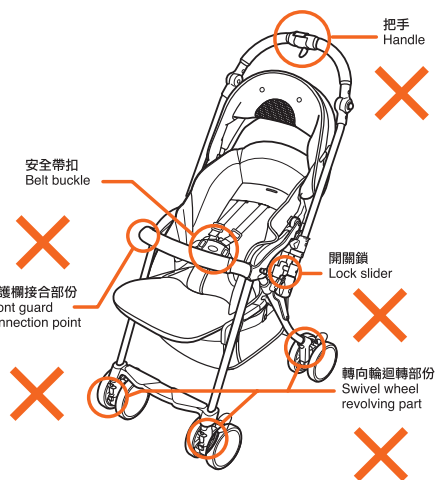

保管方法 Storage

⚠ 注意 CAUTION

- 請不要在近火處，夏季的車等高溫場所保管推車。此外上面壓放重物或在受力狀態下保管等都有可能造成故障和產品變形。
Avoid storing the stroller in places that under high temperature, near heat source or inside a car (especially the car in summer). Exposure to high temperature may damage or deform the stroller.
- 在保存手推車時，請勿在手推車上放置重物，以免其損壞或變形。
Do not place loads on the stroller during storage to avoid deformation.
- 如直立存放手推車時，請先鎖上轉向輪鎖及停車鎖以免手推車易於翻倒。
If the baby stroller is stored in vertical position, please make sure the swivel is locked and please lock the stopper as well to avoid the baby stroller falling down easily.
- 請不要如右圖般存放手推車以免變形或損壞。
Please do not store the baby stroller as illustration on the right side.



- 請在避開陽光直射，乾燥的遠離雨水和灰塵侵襲的場所保管在室外保管時，建議用防護套覆蓋。
Do not place the stroller near fire or hot area. Do not place load onto the stroller, otherwise the stroller frame may be deformed.

MEMO

A series of horizontal dashed lines for writing.

MEMO

A series of horizontal dashed lines for writing, filling most of the page.

Combi Corporation