

嬰兒餐椅 Rashule

使用說明書

Combi

請在使用前詳細閱讀本說明書，在理解後按照記載內容正確安裝及使用。閱讀後請保存本說明書，以供日後參考。此外，如果需要將本產品交予他人使用時，請將本說明書一併交付對方。



- | | |
|--------------------|--------------------|
| ● 使用前.....2 | ● 收合杆的操作方法.....7 |
| ● 安全的使用.....2-4 | ● 腳輪的操作方法.....7 |
| ⚠ 警告.....2-3 | ● 腳輪制動器的操作方法.....8 |
| ⚠ 注意.....4 | ● 搖擺功能的使用方法.....8 |
| ● 捆包部件.....4 | ● 斜躺功能的使用方法.....9 |
| ● 各部的名稱.....4 | ● 小桌的使用方法.....10 |
| ● 安全帶的使用方法.....5-6 | ● 靠背軟墊的使用方法.....10 |
| ● 高度調節的方法.....6 | ● 保養方法.....11 |

承蒙購買本公司產品RASHULE嬰兒餐椅，深表感謝。



請在使用前詳細閱讀本說明書，在理解後按照記載內容正確安裝及使用。閱讀後請保存本說明書，以供日後參考。

使用前

- 本製品是供孩子在室內使用的多用途餐椅，可以作為簡易小床或搖椅等用途使用。
- 建議連續使用時間：
當作小床時為60分鐘/ 搖椅時為10分鐘
※一天合計使用時間 3-4小時

安全的使用

- 本說明書所提示的[警告][注意]等標籤，是以不遵守正確使用方法時，按照可以預料到的危害或損害的迫切性進行區分的標籤，是非常重要的內容，請務必遵守。

標籤	標籤內容
 警告	如操作錯誤，會有可能引致死亡或重大傷害。
 注意	如操作錯誤，會有可能造成傷害，或組件損壞。

- 符合以下所有條件的兒童適合使用本產品
可以使用本製品之孩子的年齡大致是0~4歲左右（體重在18kg以下）為止。
- ◆ 作搖椅使用時
請在最平躺角度至2段斜躺範圍內使用。
- ◆ 0~2，3個月為止
請在最平躺角度使用。
- ◆ 2、3個月~5、6個月
請在最平躺角度至3段斜躺範圍內使用。
- ◆ 5、6個月~4歲左右
可使用斜躺椅背之最直立角度起算的3個斜躺階段。

如果操

- 必須放在保護者看到的地方使用。



- 不要讓孩子爬進餐椅下。



- 必須使用腰帶。使用搖擺功能時必須使用肩帶。（參閱4-5頁）

※如不正確使用安全帶可能令孩子掉落餐椅，或意外被安全帶纏住脖子。



- 請配合孩子體形調節安全帶至適當長度。（參閱4-5頁）

每次改變斜躺角度時，請重新調節安全帶。



- 移動搖椅時，請確實遵守下列事項：

- 1) 必須按下前腳的腳輪鎖定杆，使腳輪的回轉固定。
- 2) 要固定後腳的制動杆在STOP的位置上。（參閱6頁）



前輪


後輪

⚠ 警告

不正確，不但不能發揮嬰兒餐椅的功能，還有可能導致危險發生。

〔防止意外發生〕


- 作為嬰兒床使用時，切勿讓嬰兒俯臥使用，以免意外引致窒息。

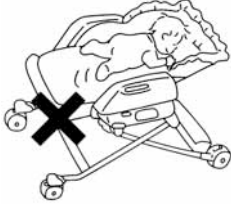

- 不要使用曾受強烈撞擊或從高處墮下而引致變形、破損的餐椅。



- 不要讓孩子操作餐椅(如腳輪制動器、上下操作等)。

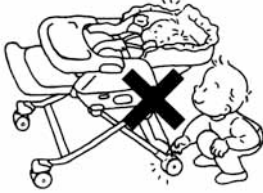

- 不要於下列地方使用餐椅。
 - 暖爐等靠近火的地方
 - 可能有重物掉落的地方



錯誤使用可能導致重大事故的危險性 〔防止孩子掉落〕

- 注意不可讓孩子在餐椅、小桌或扶手上站起來。



- 當孩子正在使用時，請勿提起或移動餐椅。



- 請在保護者陪同下才讓孩子上下餐椅。



- 當孩子正在使用時，請勿進行高度調節或收合杆的操作。



〔防止餐椅翻倒而令孩子掉落〕

- 不要一次讓兩個或以上的孩子乘坐。



- 請不要使用於傾斜處、台階、有高低差異的場所，也不要使用於花磚地面或其他易滑倒的場所。



⚠ 注意


使用方法如果錯誤，可能有受傷或造成故障的危險性

- 每當變動斜躺角度之後，必須鎖上斜躺鎖定扣。
- 使用時，必須記得安裝靠背軟墊。
因坐椅上有孔穴或突出部分，有使孩子的手指受傷的危險性。
- 餐椅不要擅自改造或拆卸。
- 請不要於屋外使用。
- 餐椅不要在屋外任憑風吹雨打。
- 只可用於讓孩子乘坐的目的，不可作為其他(如搬運物品、腳踏等)的用途。

捆包部件 請您確認下列部件是否齊全。

- ① 本體組裝完成品(附有靠背軟墊)1個
- ② 小桌1個
- ③ 使用說明書1冊

各部的名稱

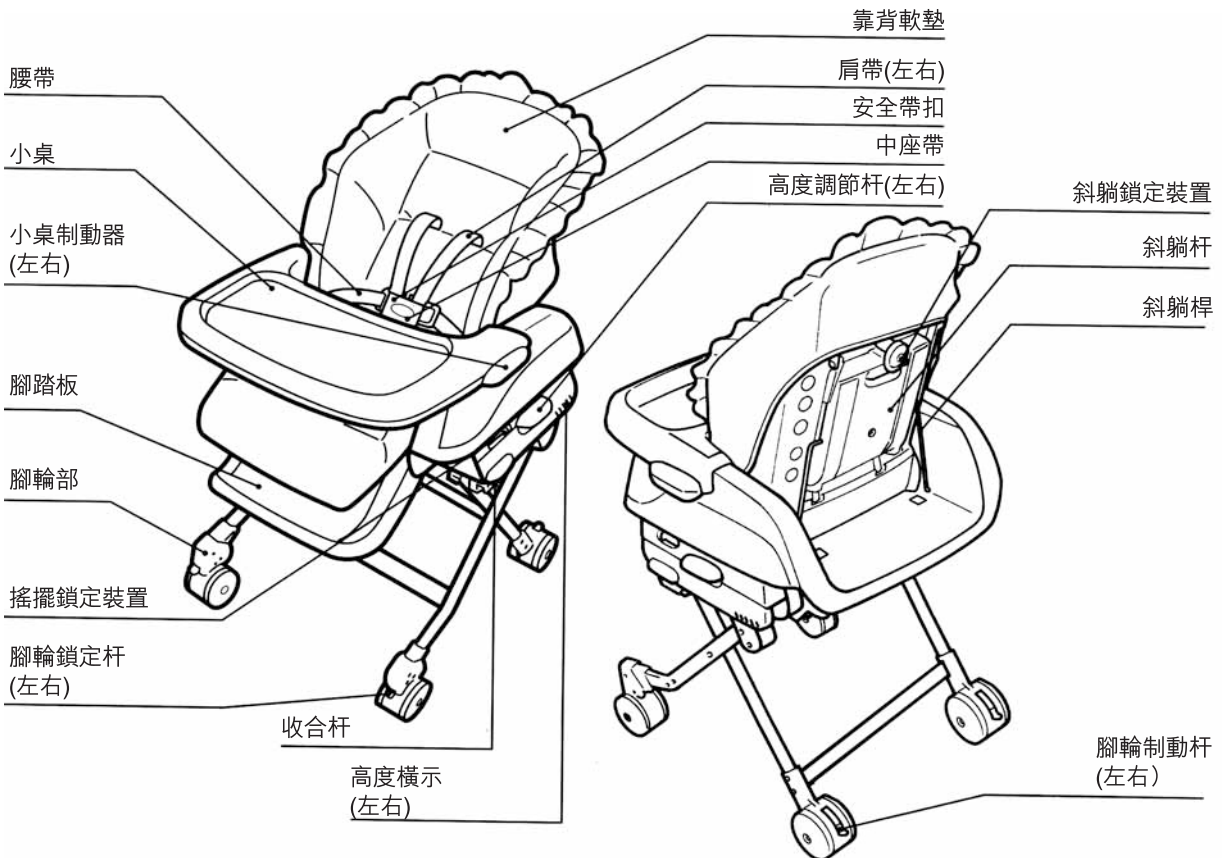




警告


● 要注意安全帶的安裝方法必須正確，錯誤使用可能引致孩子墜落的危險性。

1. ① 在安全帶扣的按壓(PRESS)標記上，以大拇指用力壓下。
- ② 從中座帶解下左右腰帶。
- ③ 從腰帶解下肩帶。

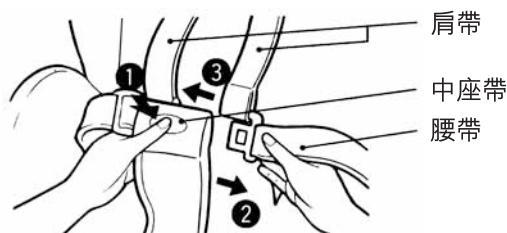


※ 要安裝安全帶時，與上述相反的步驟施行即可

2. 將靠背軟墊翻上來，以調節中座帶的長度。

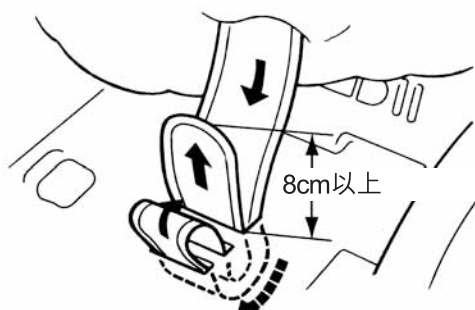

3. 調節腰帶的長度至左右相同。

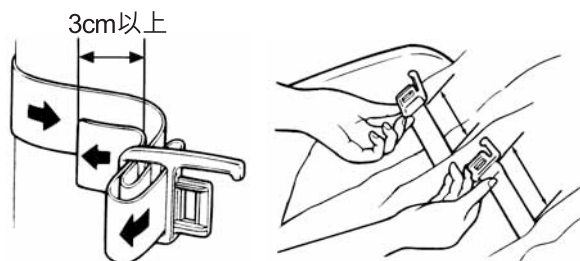


警告

- 中座帶要按圖示，至末端止尚留有8cm以上的餘裕以進行調節。
- 腰帶要按圖示，至末端止尚留有3cm以上的餘裕以進行調節。
- 如果安全帶的安裝方法不對，有可能因安全帶的脫離而造成孩子墜落的危險性。
- 調節完畢後，要拉一拉中座帶，以確認其牢固之後才開始使用。

4. 當發覺安全帶有過鬆或過緊的情形時，請再次返回2或3的步驟重新調節。

※ 於肩帶和中座帶的長度調節，請在中座帶實行。

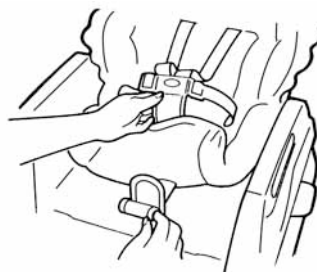

5. 斜躺的角度如有變更，則安全帶的長度也將改變。所以，當改變了斜躺的角度之後，也要同時再調節安全帶的長度。



6. 安全帶的適當調節是以大人的拇指可以伸進安全帶和嬰兒之間的程度作為基準。



警告

- 安全帶的長度必須確實進行調節，否則有造成孩子跌落的危險性。

7. 當不使用肩帶的時候，請收放在靠背軟墊的背後。



可以收放於靠背軟墊的背後。

高度調節的方法

警告


- 當孩子正在使用時，請勿提起或移動餐椅，以免令孩子意外掉落。

注意

- 首先要確認左右的高度標示是否一致。如果不一致時，要再度進行調節，否則可能有發生意外或形成故障的危險性。
- 當降低高度時，腳輪等會有前後移動的情形，所以要留意腳邊的安全。
- 調節高度前，必須先將搖擺鎖定，否則可能形成故障的原因。

■ 5段式高度調節

- 1 必須將前腳輪的左右兩方鎖定。
- 2 把左右的高度調節杆向上推，同時將本體作上或下移動。
- 3 到了所需高度時，放開左右的調節杆。確認左右的高度調節標示，相同後才開始使用。

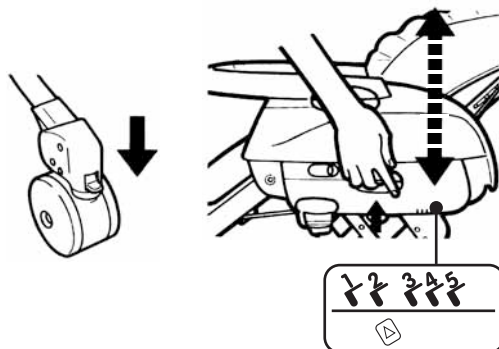


收合杆的操作方法



警告


- 當孩子正在使用時，請勿提起或移動餐椅，以免令孩子意外掉落。



注意

- 當高度降低至地面對，小心避免手或腳指被夾的危險性。同時，因腳輪會作前後的移動，所以也要注意腳邊的安全。
- 當操作收合杆時，必須使斜躺角度處於最平躺的位置上。


1. 必須使斜躺角度成為最平躺的位置，並將前腳輪的左右兩方確實鎖定。

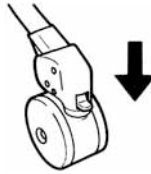


2. 用高度調節杆將高度設定到最低的位置以後才開始操作。

3. 用手指握住左右的收合杆，

- ① 先向上方提起
- ② 再向外側慢慢地解除收合杆。

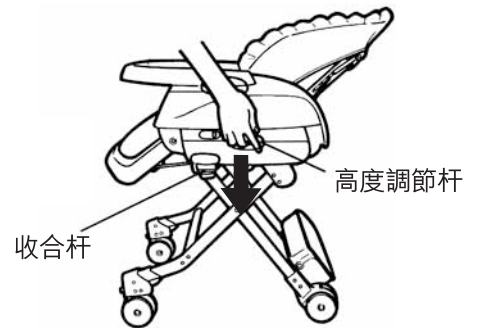

4. 收合杆被解除了以後，緊接著使它慢慢地下降。

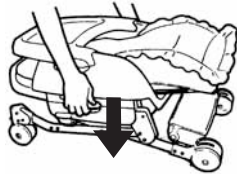

- ※ 從收合位置要再度使用框架時，請操作高度調節杆，提高到您易於使用的高度後固定。


腳輪的操作方法




警告

- 除了要移動時之外，必須確實鎖定腳輪制動器。因可能造成餐椅翻倒而使孩子跌落的危險性。

- ① 把腳輪鎖定杆向上提，就可解除鎖定狀態，此時腳輪可自由移動及改變方向。

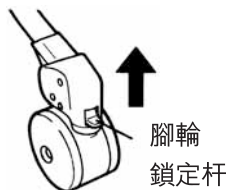

- ② 要固定腳輪時，將腳輪鎖定杆向下推，並使腳輪回轉成如圖所示的位置即可固定。

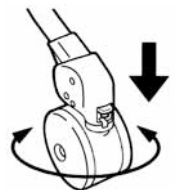


腳輪制動器的操作方法



警告

- 除了要移動時之外，必須確實鎖定腳輪制動器。因可能有造成餐椅翻倒而使孩子跌落的危險性。




注意

- 如果沒有固定好，就不能順利地實施搖擺功能。

- ① 當後腳的制動器杆沿著箭頭方向下推時，就可形成鎖定狀態。



- ② 要移動時，將制動器杆沿著箭頭方向上推，就可解除鎖定狀態。

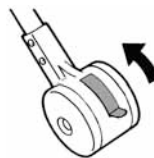

搖擺功能的使用方法



警告

- 當孩子在椅子裡時，切勿如蕩秋千般搖蕩椅子，因可能有翻倒或跌落的危險性。




注意

- 對於脖子肌育還未發達的2~3個月左右的嬰兒來說，請將靠背設定在最平躺的位置上使用搖擺功能。
- 請不要在靠背成直立位置之下使用搖擺功能。因可能造成孩子向前傾倒、頭部搖晃的危險性。
- 當使用搖擺動作時，要特別注意孩子的反應。如果覺得有什麼異常情形，就要立刻中止。
- 搖擺時孩子可能作朝前後方向移動。所以要先確認當中設有障礙物之後才開始使用。

1. 一定要使前腳輪鎖定，並使後腳輪制動器也成為鎖定的狀態。


前腳輪

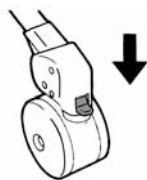


後腳輪



2. 要使斜躺的角度位於搖擺的位置上。

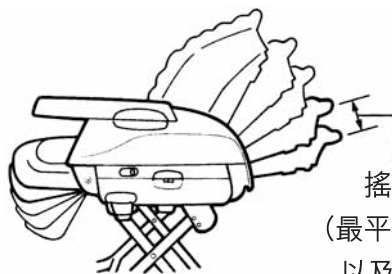


3. 將左右的搖擺鎖定設有如圖所示位置時，就可實施搖擺動作。請用於使本體搖擺。

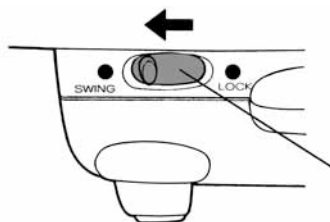

切勿推動車體作搖擺動作，不使用搖擺動作時，一定要設定在LOCK位置上。

4. 如果不使本體搖擺時，將搖擺鎖定設在如圖所示之LOCK位置即可。

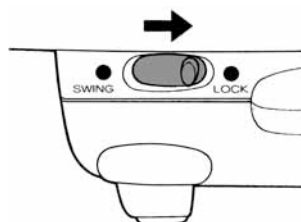

※ 搖擺動作大約可前後移動8cm左右。請在可暢順移動的範圍下使用。



警告

● 當改變了斜躺的角度時，一定要再度調節各安全帶的長度。因可能有使孩子跌落或安全帶纏住脖子的危險性。



注意




● 除了要進行斜躺操作時以外，要將斜躺鎖設定成鎖定(LOCK)狀態。
● 在斜躺操作時，腳踏板的角度會在連動下變更而向前方跳出約30cm左右。所以要在確認腳踏板前無障礙物之後才開始操作。

■對於脖子肌育還未發達的2-3個月左右的嬰兒，請用最平躺的角度使用。

- 斜躺的角度可分成5階段進行調節。
- 斜躺的角度會在連動下，腳踏板的角度也跟著變化。

斜躺的操作方法：

1. 首先要將斜躺的鎖定狀態解除。
2. 將斜躺杆向您跟前拉。
3. 達到您想使用的角度時，將斜躺杆放向。
※ 要確認斜躺棒已經處旋槽內。
4. 在決定了斜躺的角度之後，按照圖示將斜躺鎖定裝置復原，並必須成為鎖定狀態。

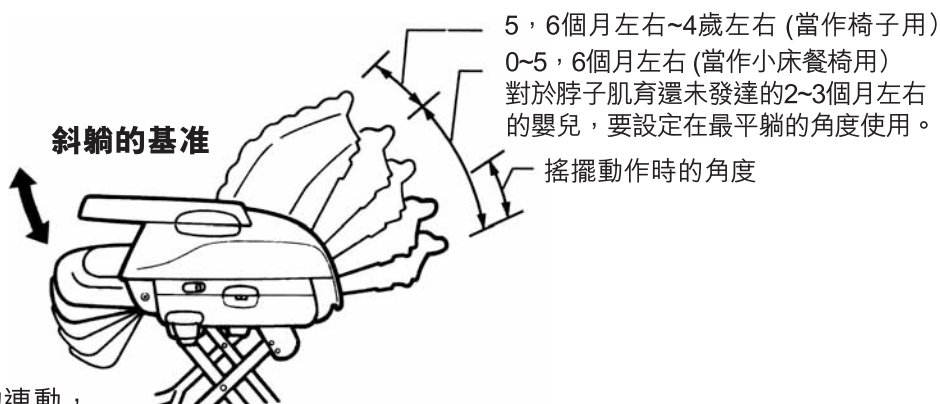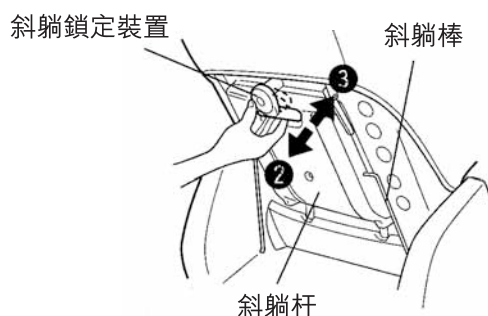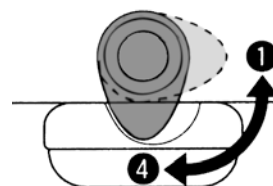

※ 隨著斜躺角度的連動，
腳踏板的角度也會改變。

小桌的使用方法


⚠ 注意

- 放好小桌於妥當位置後，要確認其前後固定不動之後才可使用。
- 孩子可能有因手指伸進本體側面上的槽內而受傷的危險性，所以要隨時留意。

1. 將小桌兩側的小桌制動器向外側拉。
2. 對準本體側面的槽溝將小桌插入。
3. 可以進行前後3階段的調節，所以可配合您喜好的位置來使用。

※ 這時，要輕輕地前後搖動小桌，確認已牢固後才開始使用。

- 想要卸下小桌時，只要在拉著小桌制動器之下拿掉它即可。

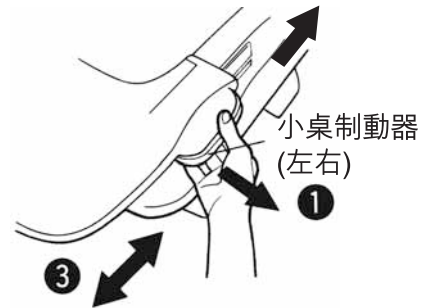


靠背軟墊的使用方法

⚠ 注意

- 必須安裝了靠背軟墊之後才開始使用搖椅。因可能有由於坐椅面上的小孔或突出部分而使孩子的手指受傷的危險性。

- 當安裝靠背軟墊時，要整出其外形並配合安全帶的位置來設置。
- 將萬能粘合帶用力壓緊確實固定座墊。
- 固定在正確的位置以後，將左右的橡皮圈掛到本體兩側的鈎扣上。
- 要取下靠背軟墊時，請先將橡皮圈本兩側的鈎扣上解下。

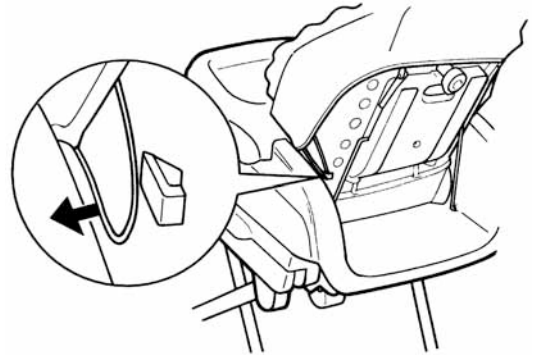

■ 本體和安全帶的保養



注意

- 不要使用未經稀釋的中性容劑的原液或是汽油、揮發油等有機溶劑來進行保養。因可能使本體以及安全帶受到損傷。

- 當小桌或本體有髒污時，用柔軟的布塊沾濕著稀釋了的中性洗劑或是微溫的水來進行擦拭。
- 肩帶、腰帶的髒污可用柔軟的布塊沾濕著水來進行擦拭，然後放在背陽處晾乾。

■ 靠背軟墊，安全帶罩，中座帶，套掛被子的保養



用手洗時，以溫水洗濯 水溫 30°C 為限。



鋪放在陰涼處。



請不要用乾洗方法。



不要使用漂白劑。




用手擰乾時要輕輕擰，如果使用洗衣機脫水時，使用的時間要短，如果用力擰乾的話，會有留下皺紋的情形。



不要使用熨斗熨平。

- 先將靠背軟墊、中座帶卸下，然後按照上面的洗濯標示方法進行洗濯。
- 由於製品的特性，可能有稍微腿色的情形。
- 有關洗劑方面，建議您使用沒有含螢光劑、漂白劑、酵素等的天然脂肪酸作為基礎的洗劑（Combi的尿布、內衣洗劑）。
- 當洗濯之際，請與其他的衣服分開來進行。
- 要用水充分涮洗。
- 為了能舒適地使用，建議您經常加以清洗這些部件。



注意

- 對於因保養而卸下的這些部件，請再次參閱本說明書，進行正確的安裝。

Baby Chair Rashule User Guide

Combi

For safety of your children, please read this guide carefully before installation, and use the baby chair accordingly after fully understanding the instructions. After reading, please keep this user guide properly for future reference. Please also attach this user guide together when transferring the product to the others.



- Before use.....14
- For safe use of our product.....14-16
 - ⚠ WARNING.....14-15
 - ⚠ CAUTION.....16
- Package contents.....16
- Name of parts.....16
- How to use the belt.....17-18
- How to adjust the height.....18
- How to handle the storage lever.....19
- How to use the casters.....19
- How to lock the wheels.....20
- How to use the swing.....20
- How to use the reclining function.....21
- How to use the table.....22
- How to handle the seat cushion.....22
- Maintenance.....23



Thank you for choosing the Combi Baby Chair. For safety of your children, please read this manual carefully before use.

Before Use

- This product is designed as a simple indoor bed and chair for your child.
- Recommended continuous use: 60 minutes as bed and 10 minutes as swing.
- ※ Total of 3-4 hours a day.


For Safe and Proper Use

- The precautions noted here can endanger your child due to erroneous use. The two degrees, WARNING and CAUTION indicate the possibility of injury and damage if the guidelines are not observed. The details are extremely important and must be observed.

Indication	Description
 WARNING	Incorrect use may result in death or injury.
 CAUTION	Incorrect use may result in injury or physical damage.

- Size and age of child recommended for use: This product was designed for children between the ages of 0-4 years old, weighing less than 18kg.
- ◆ From 0 to 2 or 3 months old
Lower the reclining to the lowest position and then use within one of the three reclining levels.
- ◆ From 5 or 6 months to 4 years old
Put the backrest upright and then adjust within the 2 levels.

- An adult must be present during use of the swing rack.

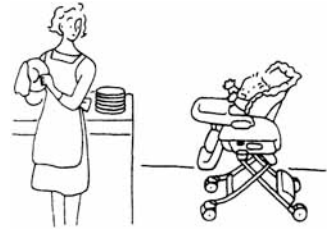

- Keep your child from crawling under the rack.



- Always use the crotch/waist belt and the shoulder belt, when using the rack fully reclined. (Refer to page 17-18 for more details.) Failure to do so may result in the belt getting caught around your child's neck when slipping.




- Securely fasten each seatbelt according to the size of your child. (Refer to page 17-18 for more details.) Readjust the belt for every reclining level.



(The rack

- ALWAYS pay attention to the following when moving the rack.
 1. Lower the front caster lock lever to turn and lock the wheel.
 2. Put the rear brake lever in the STOP position to lock the wheel. (Refer to page 6 for more details.)

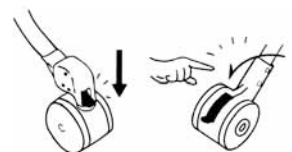


Front caster

Rear wheel


! WARNING

- Your child is endangered in the following cases

- For use as a bed, avoid the baby from lying prone in case it may accidentally suffocate.

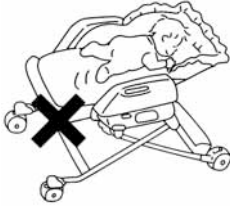

- Always pay attention that the other child doesn't touch levers or dials if baby in it.

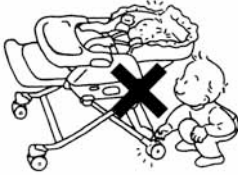

- NEVER use a rack that has fallen, been exposed to strong impact, with deformation or cracks, or damaged parts.



- NEVER use in the following places:
 - By the heater or fire
 - By places where items may fall



- Erroneous use may lead to major accidents. (Your child may fall in the following cases.)

- Keep your child from standing on the seat, to prevent falling from the table or handrail.



- An adult should attend when the child getting on or off the rack.



- NEVER lift or move the rack with your child in it.



- NEVER adjust the height or storage lever with your child in the rack.



may fall over, causing your child to fall in the following cases.)

- NEVER carry more than one child at once.



- NEVER use on slope, staircase, leveling, tile or other slippery floors.



 **CAUTION**


Erroneous use may cause injury or damage.

- ALWAYS lock the reclining after changing the reclining angle.
- ALWAYS use the rack with the cushion attached. Failure to do so may injure your child's finger, etc. since there are holes in and protrusions from the seat surface.
- NEVER modify or disassemble the rack.
- NEVER use the rack outdoors.
- NEVER expose the rack to wind or rain.
- NEVER use the rack for other purposes than to carry your child (to transport items, step, etc.).

Package Contents Check to see that all of the following pieces are available in the package.

- ① Main unit (with cushion): 1 pc.
- ② Table: 1 pc.
- ③ User's Manual: 1 pc

Name of Parts

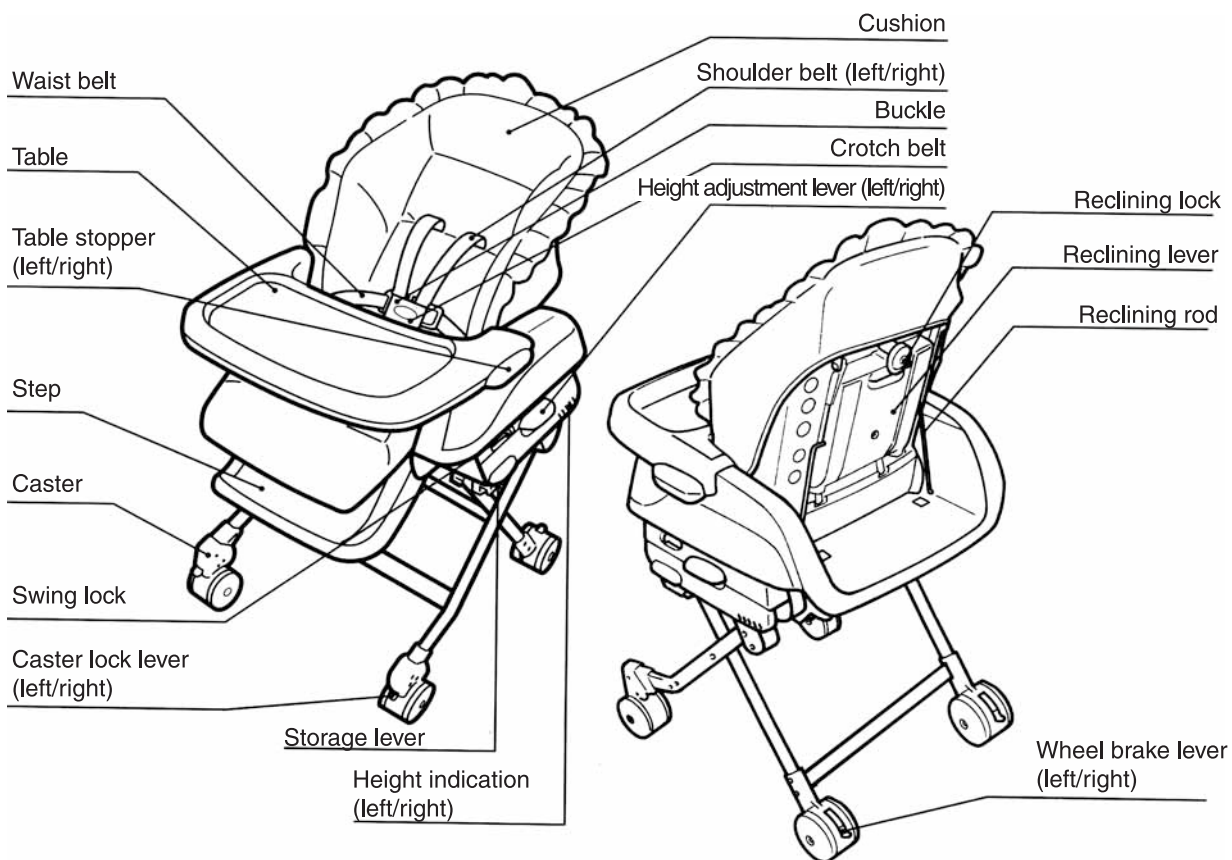




WARNING


- Your child may fall if the belt is erroneously attached.

1. **1** Press strongly the PRESS mark on the buckle with your thumb.
- 2 Remove the left/right waist belt from the crotch belt.
- 3 Remove the shoulder belt from the waist belt.

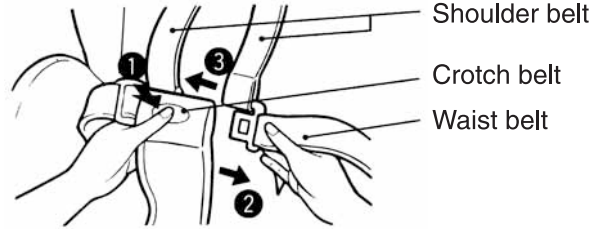


※ The reverse order applies to assemble the belt.

2. Lift the cushion and adjust the length of the crotch belt.

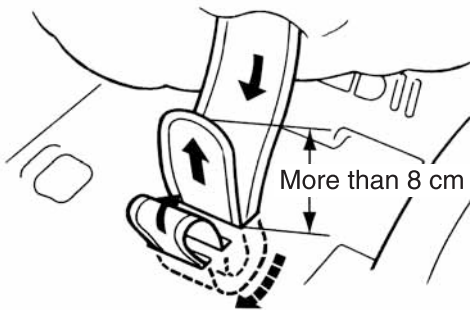

3. Adjust the waist belt. Be sure to adjust both (Left & Right) belts to the same length.

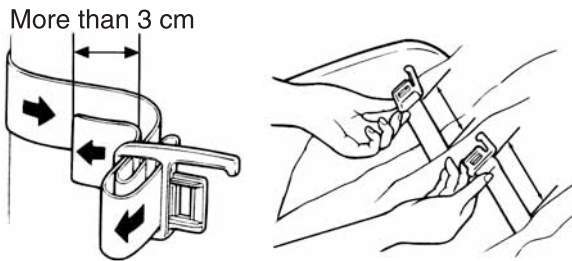


WARNING

- Adjust the crotch belt as shown in the diagram to leave room of more than 8 cm from the edge.
- Adjust the waist belt as shown in the diagram to leave room of more than 3 cm from the edge.
- Erroneous belt assembling may cause the belt to slip off and result in your child falling.
- After adjustments, pull the crotch belt to confirm that it does not slip off.

4. If the belt is too loose or tight repeat adjustment procedures 2 or 3.

※ Adjust the crotch belt to adjust the length of the shoulder and crotch belts.

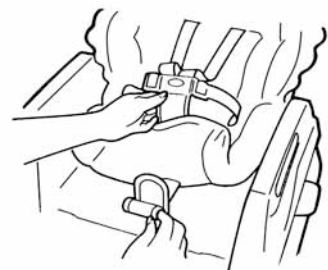

5. The belt length will vary when the reclining angle is changed. Always adjust the length of the belt when changing the reclining angle.




6. Properly adjust the length of the belt allowing for an adult's thumb to fit between the belt and baby.



! WARNING

- Securely adjust the length of the belt. Failure to do so may cause your child to fall.

7. Store the shoulder belt behind the cushion when not in use.

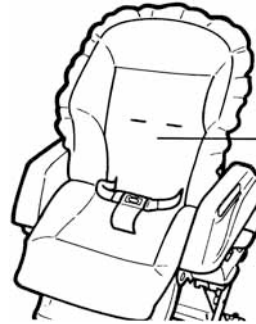

Can be stored behind cushion.

How To Adjust The Height

! WARNING


- NEVER adjust the height with your child in the rack. Your child may fall.

! CAUTION

- ALWAYS check to see that the left and right height indications are the same position. Readjust if they are different. Failure to do so may result in an accident or damage.
- Watch your feet! The wheels will move forward/backward when lowering the height of the rack.
- ALWAYS lock the swing before adjusting height. Failure to do so may result in damage.

■ 5-level height adjustment

- 1 ALWAYS lock the left/right front casters.
- 2 Push up the left/right height adjustment lever and then push up or down the main unit.
- 3 Release your finger from The left/right lever when the desired height is fixed. At this time, check to see that the left and right height adjustment indications are the same position before using.

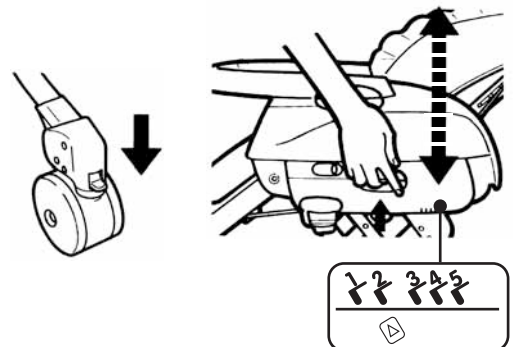

How To Handle The Storage Lever


⚠ WARNING

- NEVER operate the storage lever with your child in the rack. Your child may fall.

⚠ CAUTION

- Watch your feet or fingers when lowering the rack since they may get caught under the rack when the rack is pushed down to the floor. Watch your feet as well, since the wheels will move forward/backward.
- ALWAYS put the seat in the flattest reclining angle when operating the storage lever.



1. ALWAYS put the reclining in the flattest angle and lock the left/right front casters.

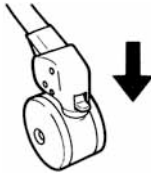


2. For operations, use the height adjustment lever to set the rack in the lowest height possible.

3. Grasp the left/right storage lever.

- ① Pull up; and
- ② Slowly unlock the lever outward.

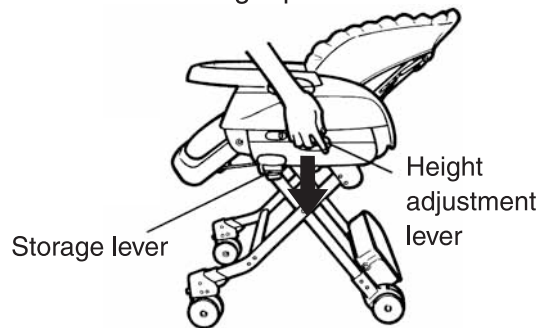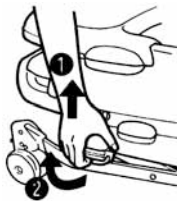

4. When the storage lever is unlocked, slowly lower the rack.

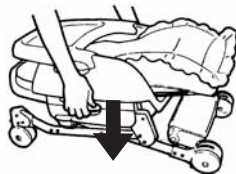


※ When using the rack again from the storage position, use the height adjustment lever to lift and set the rack to the height for use.

How To Use The Caster


⚠ WARNING

- ALWAYS keep the casters locked other than when moving the rack. Failure to do so may cause the rack to tip over making your child fall.

① The lock is released when lifting the caster lock lever. This will free the wheels, allowing directional change.

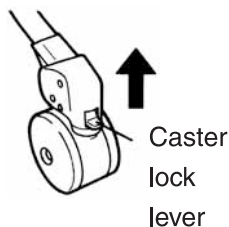

② To lock the caster, lower the lock lever and turn the wheels to the position shown in the diagram.

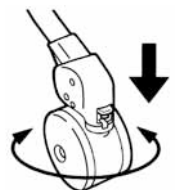

How To Lock The Wheels


⚠ WARNING

- ALWAYS keep the wheels locked other than when moving the rack. Failure to do so may cause the rack to tip over making your child fall.


⚠ CAUTION

- Smooth swinging is not possible unless the wheels are locked.

1. Lower the rear brake lever in the direction of the arrow to lock (brake) the wheel.

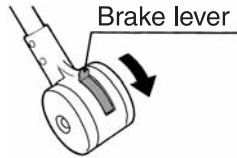

2. Lift and unlock the brake lever in the direction of the arrow to move the rack.

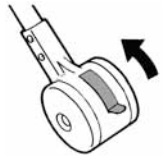

How To Use The Swing


⚠ WARNING

- NEVER push this rack like a swing. The rack may fall over and cause your child to fall out.


⚠ CAUTION

- Use this swing with the backrest fully reclined for 2-3 month old babies without a strong neck.
- NEVER use the swing with the backrest upright. There is danger that your child may fall forward and its head may shake .
- ALWAYS watch your child when using the swing. IMMEDIATELY STOP the swing if you sense something wrong with your child.
- The main unit may move. Check to see that there are no obstacles before using.


1. ALWAYS lock the front caster. Keep the rear wheel brakes on.

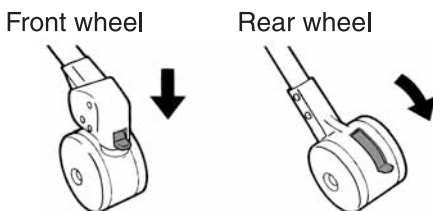

2. Adjust the reclining angle to the swing position.

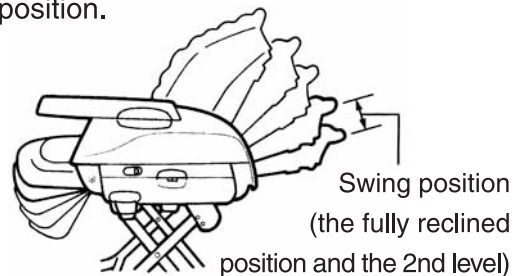


3. Swinging is possible by putting the left/right swing lock in the SWING position, as shown in the diagram. NEVER push the main unit like a swing.

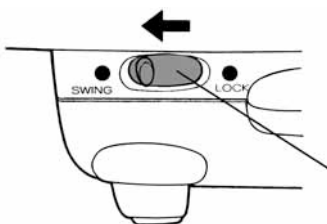

ALWAYS keep in the LOCK position when the swing is not in use.

4. To lock the swing feature put the swing lock in the LOCK position, as shown in the diagram.

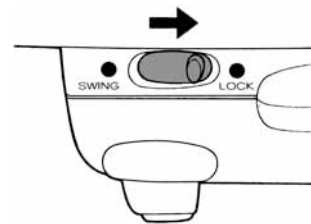

※ The swing will move front and rear about 8 cm. Use the swing within a smooth swinging range.

How To Use The Reclining Feature

WARNING

- Always readjust the length of each belt when changing the reclining angle. Failure to do so may result in your child slipping and the belt getting caught around its neck.

CAUTION




- ALWAYS keep the reclining lock in the LOCK position other than when reclining the backrest.
- The step angle will also change when the backrest is reclined. Be careful that there are no obstacles in front of it before using since the step will move forward 30 cm.

■ Use the swing with the backrest fully reclined to carry 2-3 months old babies without a strong neck.

- The backrest can be reclined in 5-angles.
- The step angle changes along with the reclining angle.

How to recline the backrest

1. Unlock the reclining lock.
2. Pull forward the reclining lever.
3. Return the reclining lever to the point of the desired angle.
※ Check to see that the reclining rod is in the guide.
4. After the reclining angle is determined, ALWAYS lock the reclining lock by returning it to the original position as shown in the diagram.

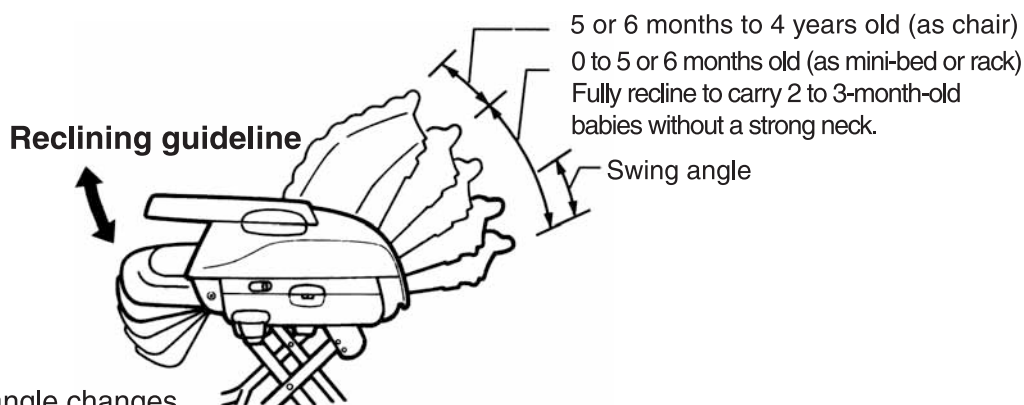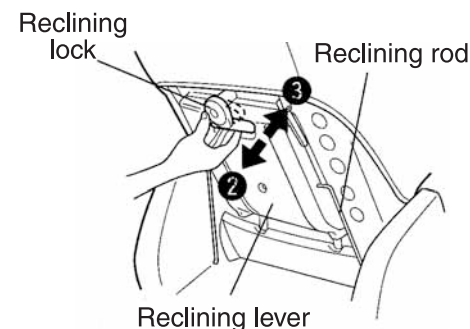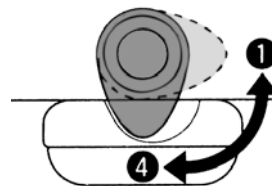

- ※ The step angle changes along with the reclining angle.

How To Use The Table

CAUTION


- Before using, check to see that the table does not move forward or backward after it is positioned.
- Pay attention to child so that its finger is not in the guide on the side of the main unit to avoid injury.

1. Pull outward the table stopper on both sides of the table.
2. Insert the table along the guides on the side of the main unit.
3. The table is adjustable in 3-steps forward and backward.

Adjust it accordingly.

※ At this time, lightly pull forward and push backward the table to see that it is locked and properly set.

- When removing the table, pull the table stopper and then pull the table out.

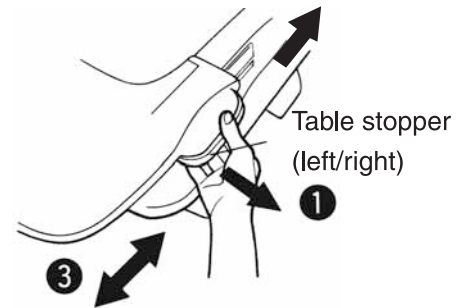


How To Handle The Seat Cushion

CAUTION

- ALWAYS use the rack with the cushion attached. Failure to do so may injure your child's finger, etc. since there are holes and protrusions in the seat surface.

- When attaching the cushion, adjust the shape to the seat frame and the belt position to set.
- Press the velcro strongly to fix the cushion.
- When the cushion is properly attached, put the left and right rubber bands on the left and right hooks of the main unit.
- When removing the cushion, take off the left and right rubber bands from the hook on both sides of the main unit first.

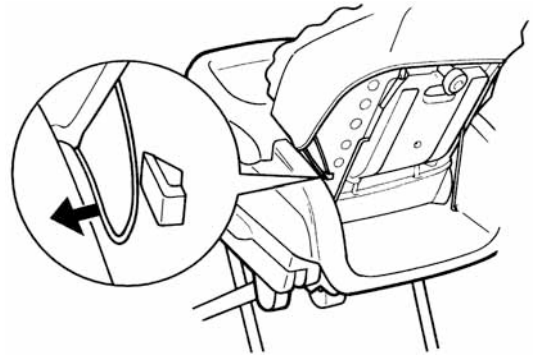







■ Taking care of the main unit and the belt

CAUTION

- NEVER use undiluted neutral detergent, gasoline, benzene and other organic solvents to clean this product. This may damage the main unit and the belt.

- if the table or main unit is soiled, soak a soft cloth with dilute neutral detergent in water or use lukewarm water and wipe.
- Soak a soft cloth with water to wipe the shoulder belt and waist belt. Dry in shade.

■ Cleaning the cushion, belt cover, crotch belt, and baby cover.

 For hand washing, use warm water up to 30°C	 Flat dry at cool place.
 Do not use dry cleaning	 Do not use bleach.
 Light squeezing.	 Do not iron.

- Remove the cushion, belt cover, crotch belt and baby cover and clean as indicated above.
- There may be slight color bleeding due to the product features.
- It is advised that a natural fatty acid base detergent (used to wash Combi diapers and baby undergarments) that do not contain whitener, bleach or enzymes be used.
- Wash separately from other laundry.
- Rinse thoroughly.
- Frequent washing is advised for comfortable use.

WARNING

- All disassembled parts for cleaning must be appropriately assembled according to the directions in this manual.

Combi Corporation

如有疑問請向經銷商查詢
Please contact local distributor for enquiries